



GENERATOR

EU10i



OWNER'S MANUAL
MANUEL DE L'UTILISATEUR
BEDIENUNGSANLEITUNG
MANUAL DE EXPLICACIONES

Honda EU10i

OWNER'S MANUAL

MANUEL DE L'UTILISATEUR

BEDIENUNGSANLEITUNG

MANUAL DE EXPLICACIONES



The "e-SPEC" mark symbolizes environmentally responsible technologies applied to Honda power equipment, which contains our wish to "preserve nature for generations to come."

Thank you for purchasing a Honda generator.

This manual covers operation and maintenance of the EU10i generator.

All information in this publication is based on the latest product information available at the time of approval for printing.

Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

This manual should be considered a permanent part of the generator and should remain with it if it is resold.

Pay special attention to statements preceded by the following words:

▲WARNING Indicates a strong possibility of severe personal injury or death if instructions are not followed.

CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE: Gives helpful information.

If a problem should arise, or if you have any questions about the generator, consult an authorized Honda dealer.

▲WARNING

Honda generator is designed to give safe and dependable service if operated according to instructions. Read and understand the Owner's Manual before operating the generator. Failure to do so could result in personal injury or equipment damage.

- The illustration may vary according to the type.

CONTENTS

1. SAFETY INSTRUCTIONS	3
2. SAFETY LABEL LOCATIONS	7
CE mark and noise label locations.....	11
3. COMPONENT IDENTIFICATION.....	12
4. PRE-OPERATION CHECK.....	16
5. STARTING THE ENGINE.....	21
• Carburetor Modification for High Altitude Operation	
6. GENERATOR USE	25
7. STOPPING THE ENGINE.....	37
8. MAINTENANCE	39
9. TRANSPORTING/STORAGE.....	46
10. TROUBLESHOOTING.....	48
11. SPECIFICATIONS.....	50
12. WIRING DIAGRAM	52
13. MAJOR Honda DISTRIBUTOR ADDRESSES	56

1. SAFETY INSTRUCTIONS

IMPORTANT SAFETY INFORMATION

Honda generators are designed for use with electrical equipment that has suitable power requirements. Other uses can result in injury to the operator or damage to the generator and other property.

Most injuries or property damage can be prevented if you follow all instructions in this manual and on the generator. The most common hazards are discussed below, along with the best way to protect yourself and others.

Never attempt to modify the generator. It can cause an accident as well as damage to the generator and appliances.

- Do not connect an extension to the muffler.
- Do not modify the intake system.
- Do not adjust the governor.
- Do not remove the control panel or do not change the wiring of the control panel.

Operator Responsibility

Know how to stop the generator quickly in case of emergency.

Understand the use of all generator controls, output receptacles, and connections.

Be sure that anyone who operates the generator receives proper instruction. Do not let children operate the generator without parental supervision.

Be sure to observe the instructions in this manual for how to use the generator and maintenance information. Ignoring or improperly following the instructions can cause an accident such as an electric shock, and the condition of the exhaust gas may deteriorate.

Place the generator on a firm level place before operation.

Do not operate the generator with any cover removed. You may get your hand or foot caught in the generator and it may cause accident.

Consult your authorized Honda dealer for disassembly and service of the generator that are not covered in this manual.

Carbon Monoxide Hazards

Exhaust contains poisonous carbon monoxide, a colorless, odorless gas. Breathing exhaust can cause loss of consciousness and may lead to death.

If you run the generator in an area that is confined, or even partially enclosed area, the air you breathe could contain dangerous amount of exhaust gas.

Never run your generator inside a garage, house, or near open windows or doors.

Electric Shock Hazards

The generator produces enough electric power to cause a serious shock or electrocution if misused.

Using a generator or electrical appliance in wet conditions, such as rain or snow, or near a pool or sprinkler system, or when your hands are wet, could result in electrocution.

Keep the generator dry.

If the generator is stored outdoors, unprotected from the weather, check all of the electrical components on the control panel before each use. Moisture or ice can cause a malfunction or short circuit in electrical components that could result in electrocution.

If you get an electric shock, consult a doctor and have medical treatment immediately.

Do not connect to a building's electrical system unless an isolation switch has been installed by a qualified electrician.

Fire and Burn Hazards

Do not use the generator in areas with a high risk of fire.

When installed in ventilated rooms, additional requirements for fire and explosion protection shall be observed.

The exhaust system gets hot enough to ignite some materials.

- Keep the generator at least 1 meter (3 feet) away from buildings and other equipment during operation.
- Do not enclose the generator in any structure.
- Keep flammable materials away from the generator.

Some parts of the internal combustion engine are hot and may cause burns. Pay attention to the warnings on the generator.

The muffler becomes very hot during operation and remains hot for a while after stopping the engine. Be careful not to touch the muffler while it is hot. Let the engine cool before storing the generator indoors.

Do not pour the water directly on the generator to put out the fire when it occurs. Use an appropriate fire extinguisher specially designed for electric fire or oil fire.

If you inhale fumes produced by an accidental fire with the generator, consult a doctor and have medical treatment immediately.

Refuel With Care

Gasoline is extremely flammable, and gasoline vapor can explode. Allow the engine to cool if the generator has been in operation.

Refuel only outdoors in a well ventilated area with the engine OFF.

Do not overfill the fuel tank.

Never smoke near gasoline, and keep other flames and sparks away.

Always store gasoline in an approved container.

Make sure that any spilled fuel has been wiped up before starting the engine.

Disposal

To protect the environment, do not dispose of the used generator, battery, engine oil, etc. carelessly by leaving them in the waste. Observe the local laws or regulations or consult your authorized Honda generator dealer to dispose of these parts.

Please dispose of used motor oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local service station for reclamation. Do not throw it in the trash or pour it on the ground.


An improperly disposed battery can hurt the environment. Always confirm local regulations for battery disposal. Contact your Honda servicing dealer for a replacement.

2. SAFETY LABEL LOCATIONS



These labels warn you of potential hazards that can cause serious injury. Read the labels and safety notes and precautions described in this manual carefully.

If a label comes off or becomes hard to read, contact your Honda dealer for a replacement.

For European model: G, GW, B, F, W types

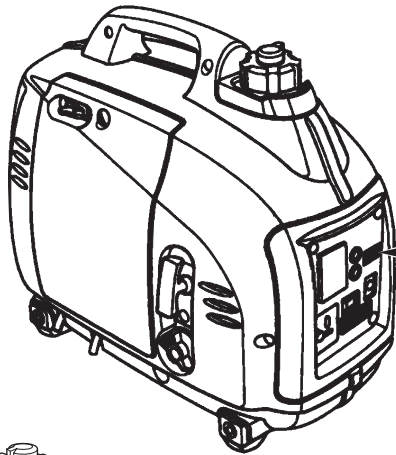

SOCKET CAUTION

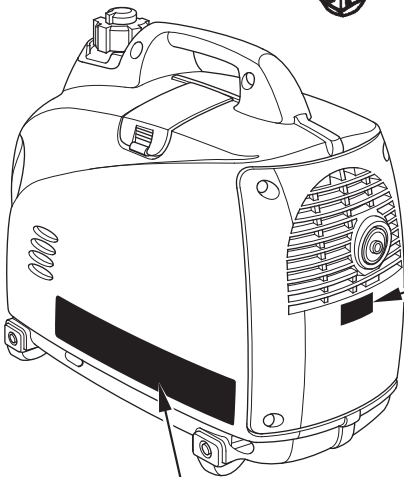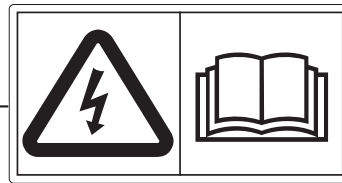

HOT CAUTION



CONNECT CAUTION

FUEL CAUTION/PARALLEL OPERATION CAUTION

<ul style="list-style-type: none"> ● PARALLEL OPERATION RECEPTACLE ○ PRISE POUR UTILISATION EN PARALLELE ○ STECKDOSEN FÜR PARALLELBETRIEB ○ PRESA PER FUNZIONAMENTO IN PARALLELO ● AANSLUITING VOOR PARALLEL BEDRIJF ○ CONECTOR DE OPERACIÓN PARALELA ○ TOMADA PARA USO EM PARALELO ○ ΤΥΠΩΝ ΑΙ ΑΙΤΟΥΜΕΝ ΕΝ ΤΑΜΑΜΗΩ ○ UTTAG FÖR PARALLELKOPPLING ○ STIK TIL PARALLELDRIIFT ● PARALLELKOBLING STICKKONTAKT ● ΠΙΣΤΟΡΑΣΙΑ ΡΙΝΝΑΚΑΙΣΚΑΪΥΤΤΩΑ VARTEN 		<ul style="list-style-type: none"> ⚠ STOP THE ENGINE BEFORE REFUELLING. BE SURE TO CONNECT ONLY THE SPECIAL LEAD TO THE PARALLEL OPERATION RECEPTACLE. Ⓜ ARRÊTEZ LE MOTEUR AVANT DE REFAIRE LE PLEIN. CONNECTER UNIQUEMENT LE CORDON SPECIAL A LA PRISE POUR UTILISATION EN PARALLELE. Ⓜ VOR AUFTANKEN MOTOR ABSTELLEN. VERBINDEN SIE AUSSCHLIESSLICH DIE SPEZIALKABEL MIT DEN STECKDOSEN FÜR PARALLELBETRIEB. Ⓜ ARRESTARE IL MOTORE PRIMA DI FARE RIFORNIMENTO. ASSICURARSI DI COLLEGARE SOLTANTO IL CAVO SPECIALE ALLA PRESA PER FUNZIONAMENTO IN PARALLELO. Ⓜ STOP DE MOTOR ALVORENS BIJ TE TANKEN. SLUIT ALLEEN HET SPECIALE SNIJDER AAN OP DE AANSLUITING VOOR PARALLEL BEDRIJF. Ⓜ PARE EL MOTOR ANTES DE REPOSTAR. ASEGURESE DE QUE SÓLO CONECTA EL CABLE ESPECIAL EN EL CONECTOR DE OPERACION PARALELA. Ⓜ DESLIGUE O MOTOR ANTES DE ABASTECER. CERTIFIQUE-SE DE QUE SÓ LIGA A EXTENSÃO ESPECIAL A TOMADA DE USO EM PARALELO. Ⓜ ΕΤΑΜΑΤΕ ΤΗ ΜΕΧΑΝΗ ΠΡΙΝ ΤΟΝ ΑΝΕΘΩΛΙΣΜΟ ΜΕ ΚΑΥΣΙΑ. ΒΕΒΑΙΩΒΕΤΕ ΟΤΙ ΘΑ ΣΥΝΑΞΕΤΕ ΜΟΝΟΝ ΤΟ ΕΙΔΙΚΟ ΚΑΒΛΑΙΟ ΣΤΗΝ ΥΠΟΔΟΧΗ ΤΗΣ ΑΙΤΟΥΜΕΝ ΕΝ ΤΑΜΑΜΗΩ. Ⓜ STÄNG AV MOTORN FÖRE BRÄNSLEPÅFYLNING. ANVÄND ENDAST I SPEKIALSLADD EN FÖR ANSLUTNING TILL PARALLELUTTAGET. Ⓜ STOP MOTOREN FÖR BRÄNSLÖFPÅFYLNING. TILLSLUT ALLTID KUN SPECIALLEDNINGEN I PARALLELUTTAGET. Ⓜ SLÅ AV MOTOREN FÖR PÅFYLNING. BRUK KUN SPECIALLEDNING TILL PARALLELUTTAGET. Ⓜ SAMMUTA MOTTOEN ENNEN TANKKAUSTA. VARMISTU ETÄÄ AINOASTAAN ERIKOISJOHTOSARJAN OIN KYTTETTY PISTORASIOIHIN RINNAKKAISKÄYTTÖÄ VARTEN. 												
	<p>CE Generating set EN 12601</p> <p>Honda Motor Co., Ltd. 2-1-1 Minamiosayama, Minato-ku, Tokyo, Japan</p> <table border="1"> <tr> <td>Rated power COP</td> <td>0.9 kW</td> <td>50 Hz</td> <td>G1</td> </tr> <tr> <td>Rated power factor</td> <td>1.0</td> <td>230 V</td> <td>IP23M</td> </tr> <tr> <td>Year of Mfg.</td> <td>****</td> <td>3.9 A</td> <td>Mass 13.0 kg</td> </tr> </table>	Rated power COP	0.9 kW	50 Hz	G1	Rated power factor	1.0	230 V	IP23M	Year of Mfg.	****	3.9 A	Mass 13.0 kg	
Rated power COP	0.9 kW	50 Hz	G1											
Rated power factor	1.0	230 V	IP23M											
Year of Mfg.	****	3.9 A	Mass 13.0 kg											

EXHAUST CAUTION

READ OWNER'S MANUAL



- **Honda generator is designed to give safe and dependable service if operated according to instructions.**

Read and understand the Owner's Manual before operating the generator. Failure to do so could result in personal injury or equipment damage.



- **Exhaust contains poisonous carbon monoxide, a colorless, odorless gas. Breathing carbon monoxide can cause loss of consciousness and may lead to death.**
- **If you run the generator in an area that is confined, or even partially enclosed area, the air you breathe could contain a dangerous amount of exhaust gas.**
- **Never run your generator inside a garage, house or near open windows or doors.**




- **Do not connect to a building's electrical system unless an isolation switch has been installed by a qualified electrician.**
- **Connections for standby power to a building's electrical system must be made by a qualified electrician and must comply with all applicable laws and electrical codes. Improper connections can allow electrical current from the generator to backfeed into the utility lines. Such backfeed may electrocute utility company workers or others who contact the lines during a power outage, and when utility power is restored, the generator may explode, burn, or cause fires in the building's electrical system.**




- GB** STOP THE ENGINE BEFORE REFUELING. BE SURE TO CONNECT ONLY THE SPECIAL LEAD TO THE PARALLEL OPERATION RECEPTACLE.
- F** ARRÊTEZ LE MOTEUR AVANT DE REFAIRE LE PLEIN. CONNECTER UNIQUEMENT LE CORDON SPECIAL A LA PRISE POUR UTILISATION EN PARALLELE.
- D** VOR AUFTANKEN MOTOR ABSTELLEN. VERBINDEN SIE AUSSCHLIESSLICH DIE SPEZIALKABEL MIT DEN STECKDOSEN FÜR PARALLEL BETRIEB.
- I** ARRESTARE IL MOTORE PRIMA DI FARE RIFORNIMENTO. ASSICURARSI DI COLLEGARE SOLTANTO IL CAVO SPECIALE ALLA PRESA PER FUNZIONAMENTO IN PARALLELO.
- NL** STOP DE MOTOR ALVORENS BIJ TE TANKEN. SLUIT ALLEEN HET SPECIALE SNOER AAN OP DE AANSLUITING VOOR PARALLEL BEDRIJF.
- E** PARE EL MOTOR ANTES DE REPOSTAR. ASEGÚRESE DE QUE SÓLO CONECTA EL CABLE ESPECIAL EN EL CONECTOR DE OPERACION PARALELA.
- P** DESLIGUE O MOTOR ANTES DE ABASTECER. CERTIFIQUE-SE DE QUE SÓ LIGA A EXTENSÃO ESPECIAL À TOMADA DE USO EM PARALELO.
- GR** ΣΤΑΜΑΤΕ ΤΗ ΜΗΧΑΝΗ ΠΡΙΝ ΤΟΝ ΑΝΕΦΟΔΙΑΣΜΟ ΜΕ ΚΑΥΣΙΜΑ. ΒΕΒΑΙΩΘΕΙΤΕ ΟΤΙ ΘΑ ΣΥΝΔΕΞΕΤΕ ΜΟΝΟΝ ΤΟ ΕΙΔΙΚΟ ΚΑΛΩΔΙΟ ΣΤΗΝ ΥΠΟΔΟΧΗ ΠΑ ΛΕΙΤΟΥΡΓΙΑ ΕΝ ΠΑΡΑΛΛΗΛΩ.
- S** STÄNG AV MOTORN FÖRE BRÄNSLEPÅFYLLNING. ANVÄND ENDAST SPECIALSLADD EN FÖR ANSLUTNING TILL PARALLELUTTAGET.
- DK** STOP MOTOREN FØR BRÆNDSTOFFPÅFYLDNING. TILSLUT ALTID KUN SPECIALLEDNINGEN I PARALLELSTIKKENE.
- N** SLÅ AV MOTOREN FØR PÅFYLLING. BRUK KUN SPESIALLEDNING TIL PARALLEL STIKKONTAKT.
- SF** SAMMUTA MOOTTORI ENNEN TANKKAUSTA. VARMISTU ETTÄ AINOASTAAN ERIKOISJOHTOSARJA ON KYTKETTY PISTORASIOIHIN RINNAKKAISKÄYTTÖÄ VARTEN

- Stop the engine before refueling.
- Gasoline is extremely flammable and explosive under certain conditions. Refuel in a well ventilated area with the engine stopped.
- Keep away from cigarette, smoke and sparks when refueling the generator. Always refuel in a well ventilated location.
- Wipe up spilled gasoline at once.
- Never connect the different generator models and types.
- Never connect a cable other than the receptacle box for parallel operation.

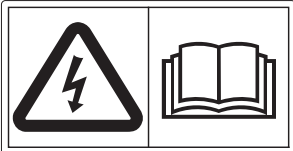


- Connect and remove the receptacle box for parallel operation with the engine stopped.
- For single operation, the receptacle box for parallel operation must be removed.

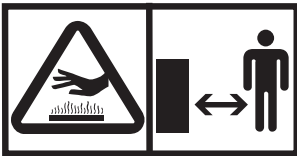

- A hot exhaust system can cause serious burns. Avoid contact if the engine has been running.

U type

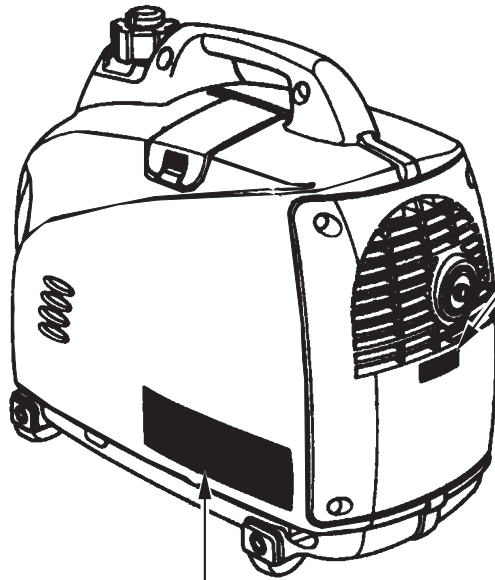


HOT-EXHAUST
ECHAPPEMENT-CHAUD

- CAUTION**
- DO NOT USE INDOORS DUE TO DANGER OF CARBON MONOXIDE POISONING.
 - DO NOT CONNECT THE OUTLET OF THIS GENERATOR TO HOUSE WIRING.
 - STOP THE ENGINE BEFORE REFUELING.
 - CHECK FOR SPILLED FUEL OR FUEL LEAKS.
 - DO NOT FILL THE FUEL TANK BEYOND THE UPPER LIMIT LINE.
 - FOR DETAILED EXPLANATION, READ THE OWNER'S MANUAL.
 - WHEN STORED OR IN TRANSIT, MAKE CERTAIN THAT THE ENGINE SWITCH AND THE FUEL TANK CAP LEVER ARE IN "OFF" POSITION TO PREVENT FUEL LEAKS.
 - BE SURE TO CONNECT ONLY THE SPECIAL LEAD TO THE PARALLEL OPERATION RECEPTACLE.


A C		D C	
VOLTAGE	240V	VOLTAGE	12V
FREQUENCY	50Hz	CURRENT	8A
RATED OUTPUT	900VA	FUEL	GASOLINE(PETROL)
MAX. OUTPUT	1000VA	CARBURANT	ESSENCE
PHASE	1Ø		

- ATTENTION**
- NE PAS UTILISER DANS UN LOCAL CLÔTÉ OÙ LES VAPEURS NOCIVES DE MONOXYDE DE CARBONE PEUVENT S'ACCUMULER.
 - NE JAMAIS CONNECTER LE GROUPE ÉLECTROGÈNE À UNE PRISE DE SECTEUR.
 - ARRÊTER LE MOTEUR AVANT DE FAIRE LE PLEIN D'ESSENCE.
 - CONTRÔLER QU'IL N'Y A NI FUITE D'ESSENCE, NI D'ESSENCE DÉPANDUE SUR L'APPAREIL.
 - NE PAS REMPLIR LE RÉSERVOIR D'ESSENCE AU DEBUT DU RÉPÈRE DE NIVEAU MAXIMUM.
 - POUR PLUS D'INFORMATIONS, LIRE LE MANUEL DE L'UTILISATEUR.
 - QUAND LE GROUPE ÉLECTROGÈNE EST REMISÉ OU TRANSPORTÉ, ASSUREZ-VOUS QUE LE CONTACT D'ARRÊT DU MOTEUR ET LA MISE À L'AIR LIBRE DU RÉSERVOIR D'ESSENCE SONT SUR LA POSITION "OFF" AFIN D'ÉVITER TOUTE FUITE D'ESSENCE.
 - CONNECTER UNIQUEMENT LE CORDON SPÉCIAL À LA PRISE D'UTILISATION EN PARALLÈLE.


 ACN 006 662 862

• CE mark and noise label locations


G, GW, B, F, W types

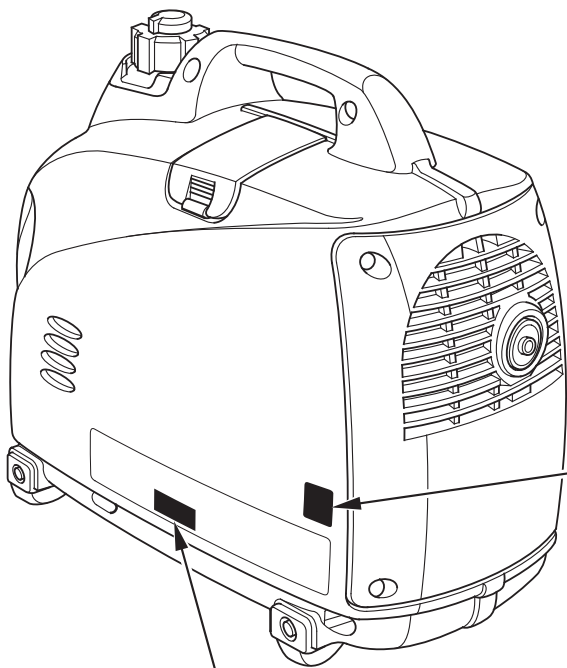

NOISE LABEL

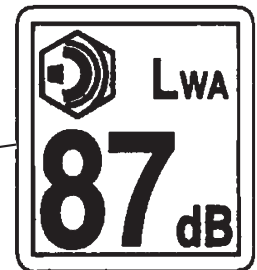

• CE MARK

	Generating set EN 12601		EU 10i Honda Motor Co., Ltd. 2-1-1 Minamiaoyama, Minato-ku, Tokyo, Japan	
	Rated power COP	0.9 kW	50 Hz	G1
	Rated power factor	1.0	230 V	IP23M
	Year of Mfg.	****	3.9 A	Mass 13.0 kg



Manufacturer and address

Performance class

IP code

Dry mass (weight)

3. COMPONENT IDENTIFICATION

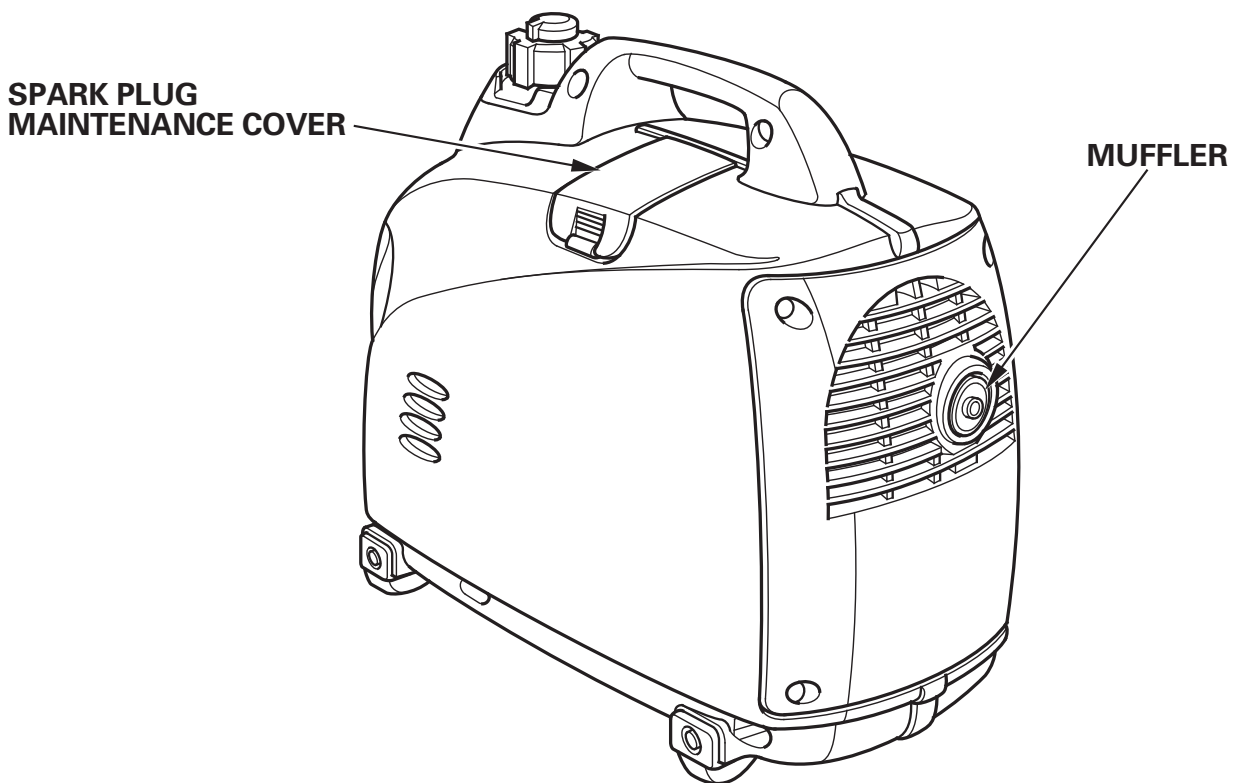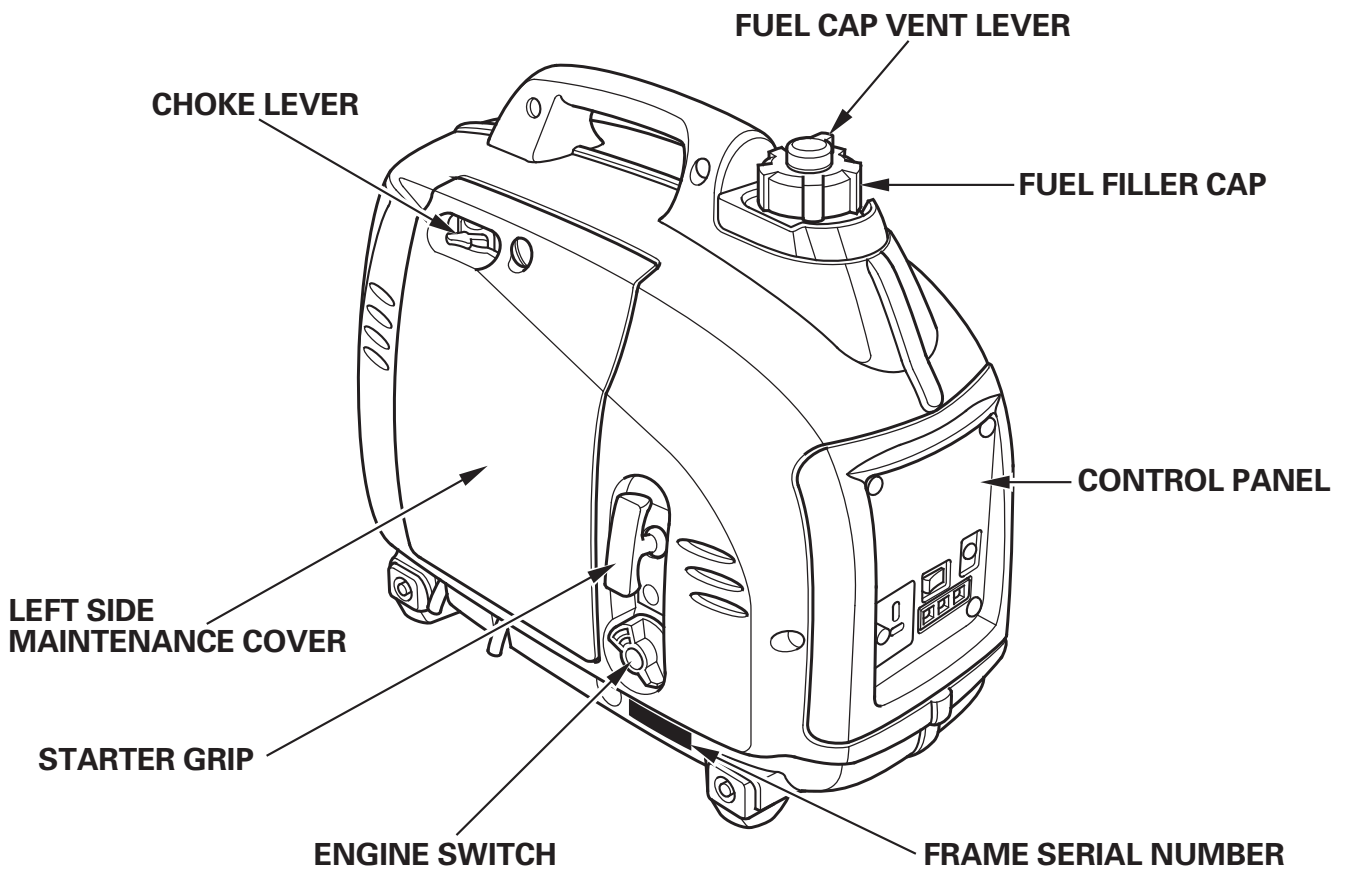


Record the frame serial number in the space below. You will need this serial number when ordering parts.


Frame serial number: _____

CONTROL PANEL

G, GW, B, F, W types

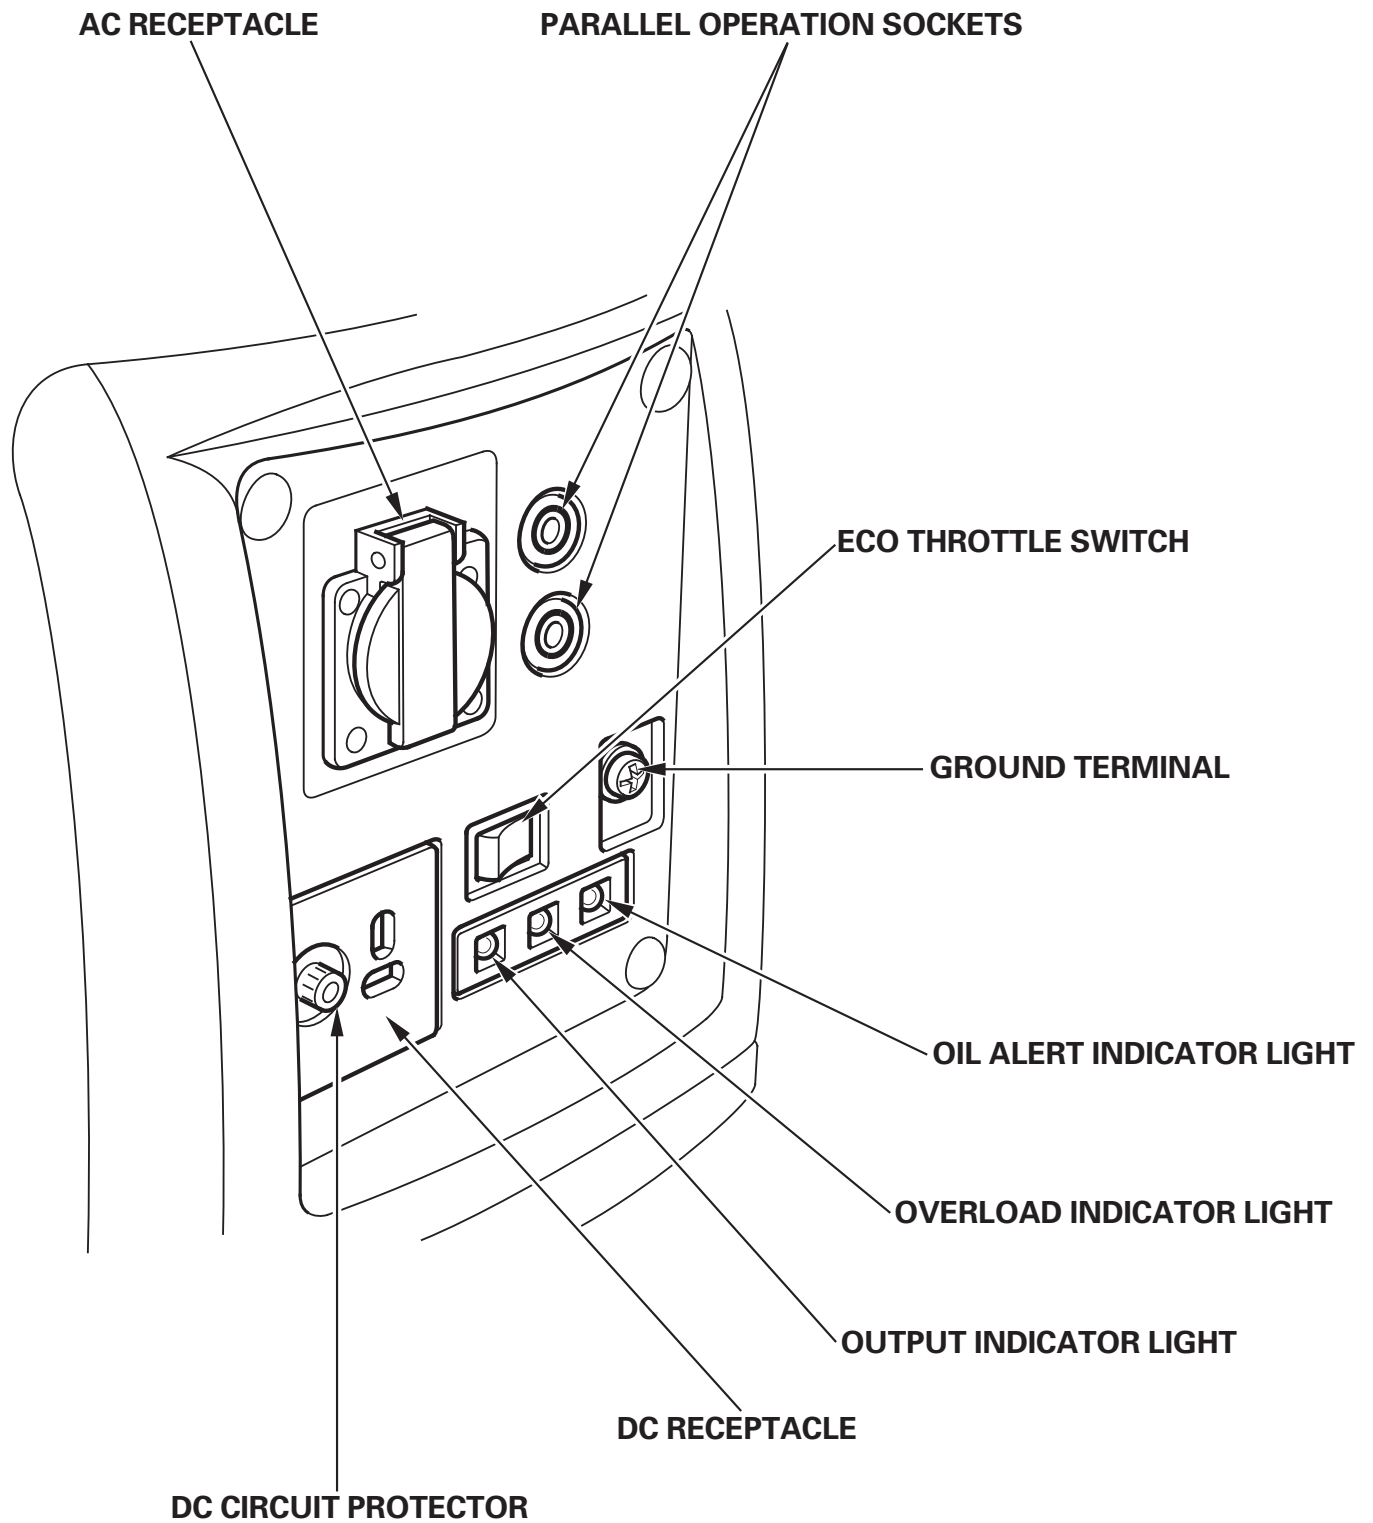

U type

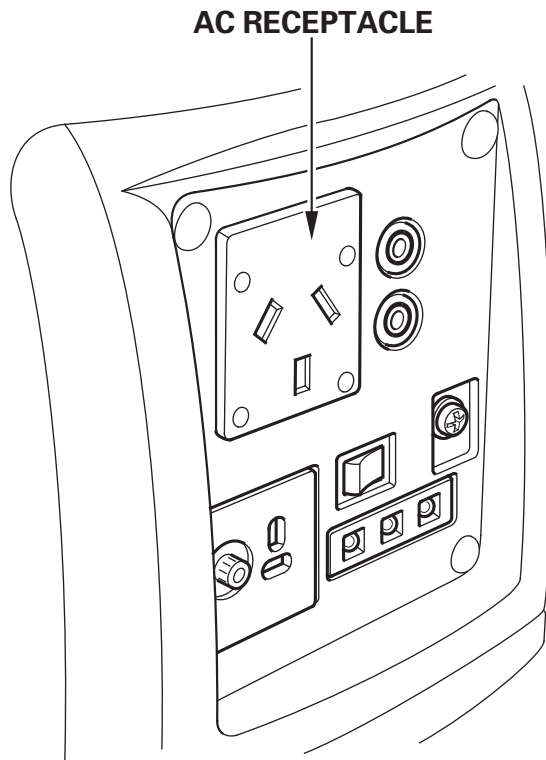

Eco Throttle

ECO:

Engine speed is kept at idle automatically when the electrical appliance is disconnected and it returns to the proper speed by the electrical load when electrical appliance is connected. This position is recommended to minimize the fuel consumption while in operation.


NOTE:

- Eco Throttle system does not operate sufficiently if the electrical appliance requires the momentary electric power.
- When high electrical load appliances is connected simultaneously, turn the Eco Throttle switch to the OFF position to reduce voltage changes.
- In DC operation, turn the eco throttle switch to the OFF position.

OFF:

Eco Throttle system does not operate. Engine speed is kept over rated speed.

ECO THROTTLE SWITCH

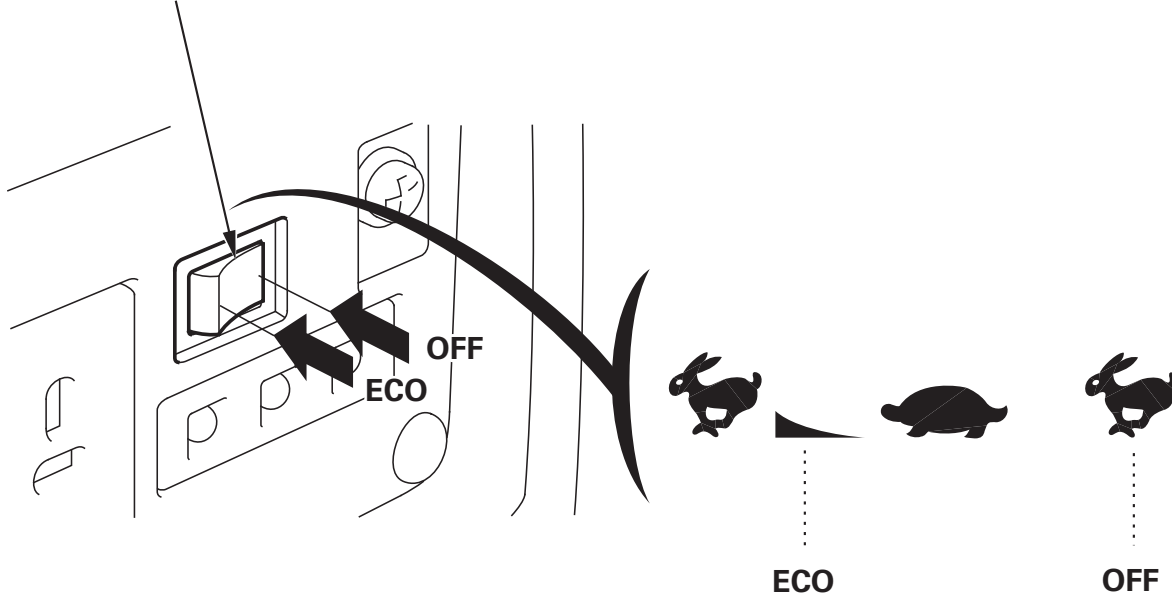

4. PRE-OPERATION CHECK

CAUTION:

Be sure to check the generator on a level surface with the engine stopped.


1. Check the engine oil level.

CAUTION:

Using non detergent oil or 2-stroke engine oil could shorten the engine's service life.

Recommended oil

Use 4-stroke motor oil that meets or exceeds the requirements for API service category SE or later (or equivalent). Always check the API service label on the oil container to be sure it includes the letters SE or later (or equivalent).

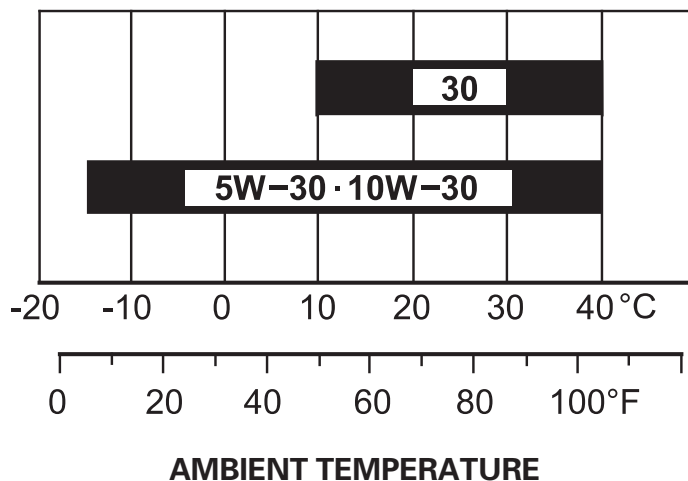

SAE 10W-30 is recommended for general use. Other viscosities shown in the chart may be used when the average temperature in your area is within the indicated range.

Loosen the cover screw and remove the left side maintenance cover. (see page 40)

Remove the oil filler cap, and wipe the dipstick with a clean rag. Check the oil level by inserting the dipstick in the filler hole without screwing it in.


If the oil level is below the end of the dipstick, refill with recommended oil up to the top of the oil filler neck.

CAUTION:

Running the engine with insufficient oil can cause serious engine damage.

NOTE:

The Oil Alert System will automatically stop the engine before the oil level falls below the safe limit. However, to avoid the inconvenience of an unexpected shutdown, it is still advisable to visually inspect the oil level regularly.

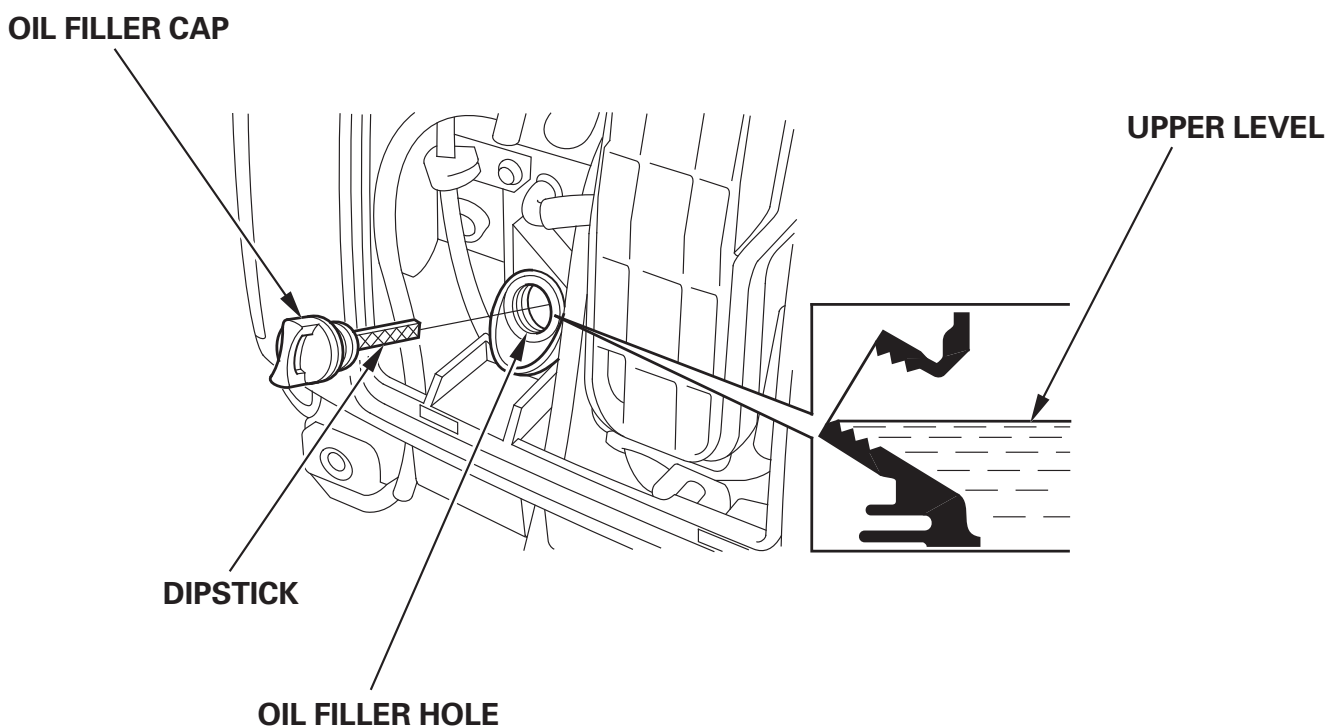



2. Check the fuel level.

Check the fuel level. Refill the fuel tank if the fuel level is low. After refueling, tighten the fuel filler cap securely.

Use automotive unleaded gasoline with a Research Octane Number of 91 or higher (a Pump Octane Number of 86 or higher). Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt or water in the fuel tank.

▲ WARNING

- **Gasoline is extremely flammable and is explosive under certain conditions.**
 - **Refuel in a well ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where the engine is refueled or where gasoline is stored.**
 - **Do not overfill the fuel tank (there should be no fuel above the upper limit mark). After refueling, make sure the fuel filler cap is closed properly and securely.**
 - **Be careful not to spill fuel when refueling. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.**
 - **Avoid repeated or prolonged contact with skin or breathing of vapor.**
- KEEP OUT OF REACH OF CHILDREN.**

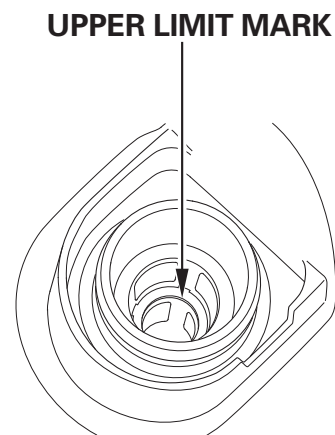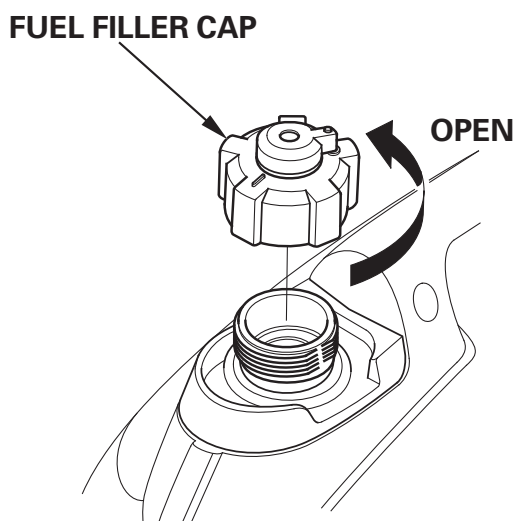

NOTE:

Gasoline spoils very quickly depending on factors such as light exposure, temperature and time.

In worst cases, gasoline can be contaminated within 30 days.

Using contaminated gasoline can seriously damage the engine (carburetor clogged, valve stuck).

Such damage due to spoiled fuel is disallowed from coverage by the warranty.

To avoid this please strictly follow these recommendations:

- Only use specified gasoline (see page 18).
- Use fresh and clean gasoline.
- To slow deterioration, keep gasoline in a certified fuel container.
- If long storage (more than 30 days) is foreseen, drain fuel tank and carburetor (see pages 46 and 47).

Gasolines Containing Alcohol

If you decide to use a gasoline containing alcohol (gasohol), be sure its octane rating is at least as high as that recommended by Honda. There are two types of "gasohol": one containing ethanol, and the other containing methanol.

Do not use gasohol that contains more than 10% ethanol. Do not use gasoline containing methanol (methyl or wood alcohol) that does not also contain cosolvents and corrosion inhibitors for methanol. Never use gasoline containing more than 5% methanol, even if it has cosolvents and corrosion inhibitors.

NOTE:

- Fuel system damage or engine performance problems resulting from the use of fuels that contain alcohol is not covered under the warranty.

Honda cannot endorse the use of fuels containing methanol since evidence of their suitability is as yet incomplete.

- Before buying fuel from an unfamiliar station, try to find out if the fuel contains alcohol, if it does, confirm the type and percentage of alcohol used.

If you notice any undesirable operating symptoms while using a gasoline that contains alcohol, or one that you think contains alcohol, switch to a gasoline that you know does not contain alcohol.

3. Check the air cleaner.


Check the air cleaner element to be sure it is clean and in good condition.

Loosen the cover screw and remove the left side maintenance cover. Press the latch tab on the top of the air cleaner body, remove the air cleaner cover, check the element.

Clean or replace the element if necessary (see page 41).

CAUTION:

Never run the engine without the air cleaner element. Rapid engine wear will result from contaminants, such as dust and dirt, being drawn through the carburetor, into the engine.

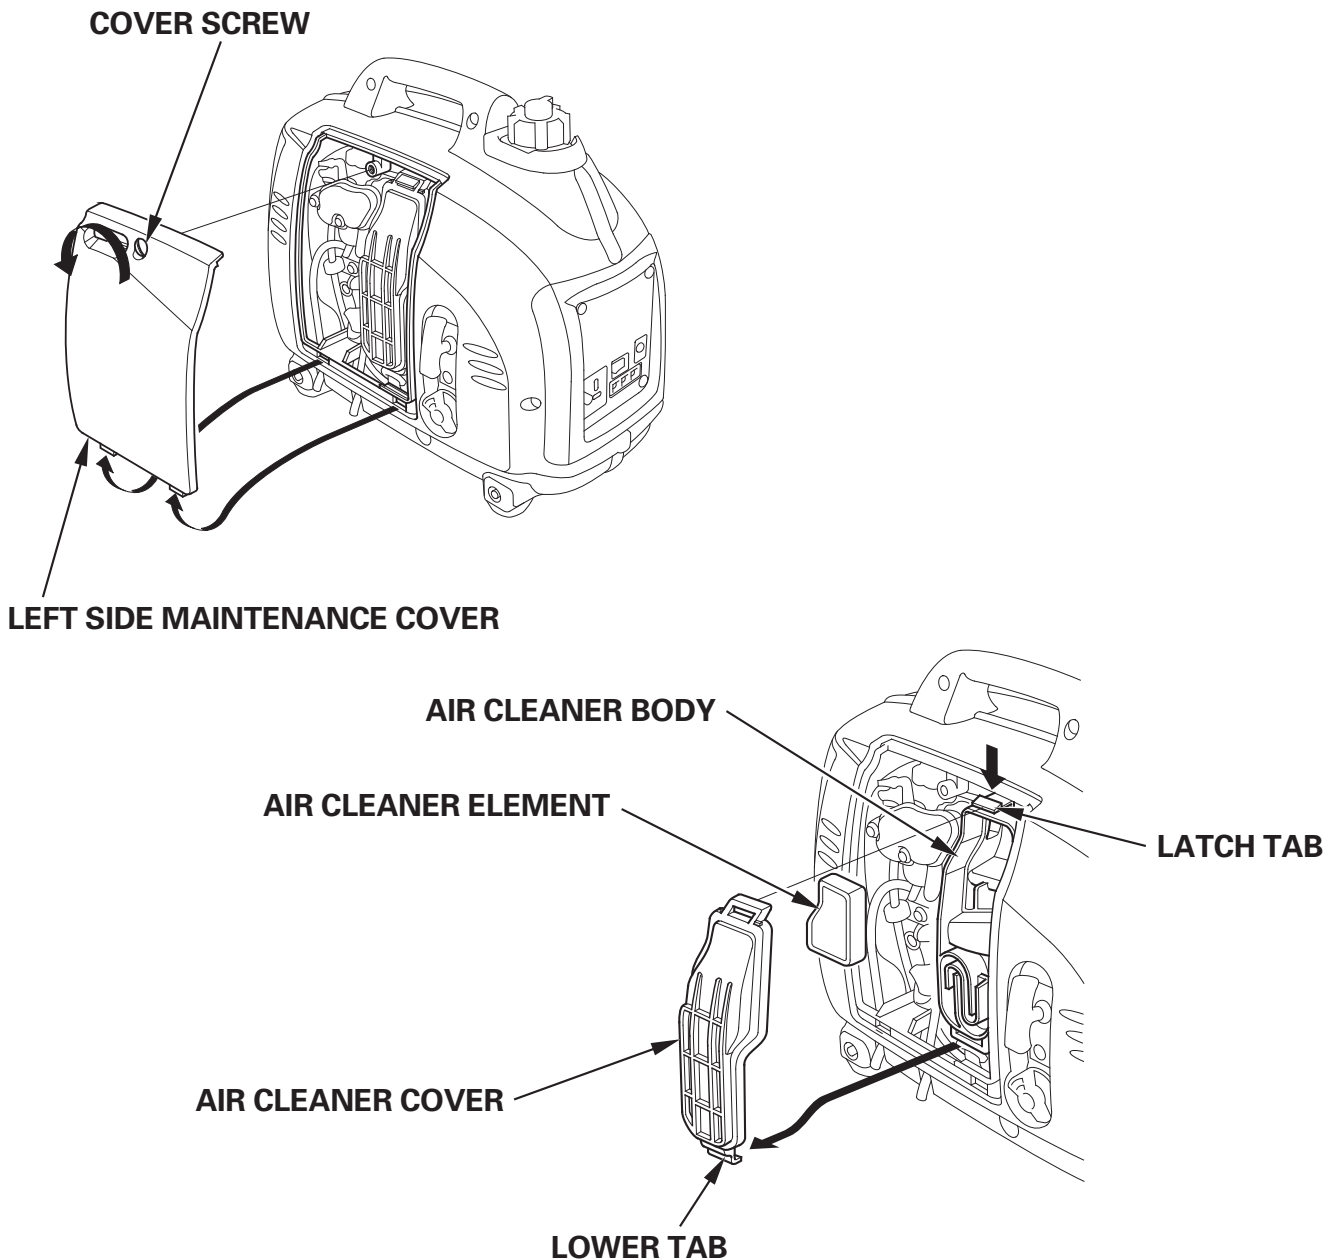


5. STARTING THE ENGINE

Before starting the engine disconnect any load from the AC receptacle.


1. Turn the fuel cap lever fully clockwise to the ON position.

NOTE:

Turn the fuel cap vent lever to the OFF position when transporting the generator.

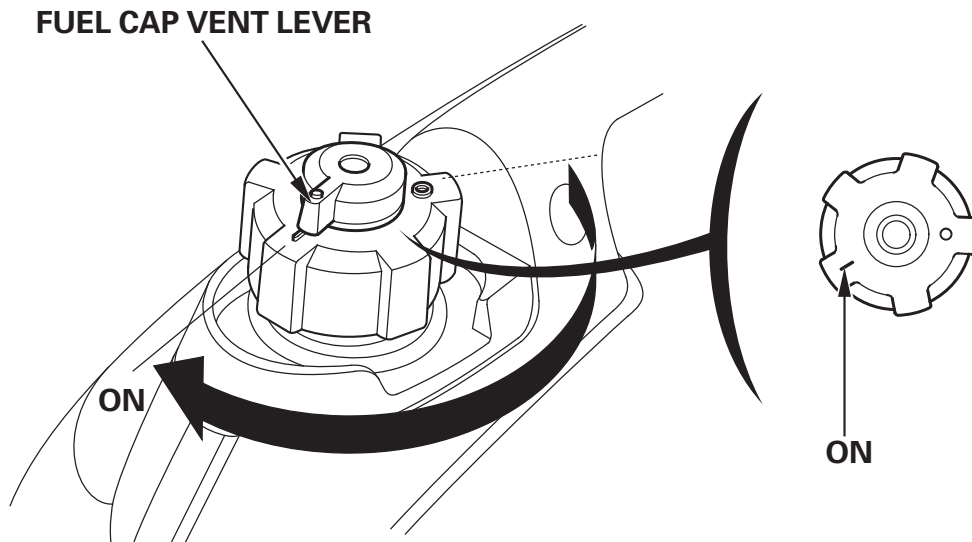


2. Turn the engine switch to the ON position.

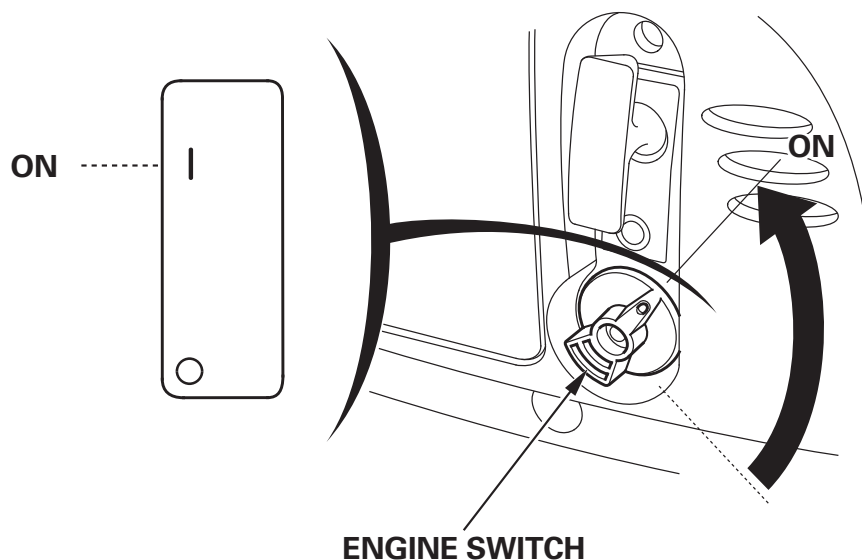

3. Move the choke lever to the CLOSED position.

NOTE:


- Do not use the choke when the engine is warm or the air temperature is high.

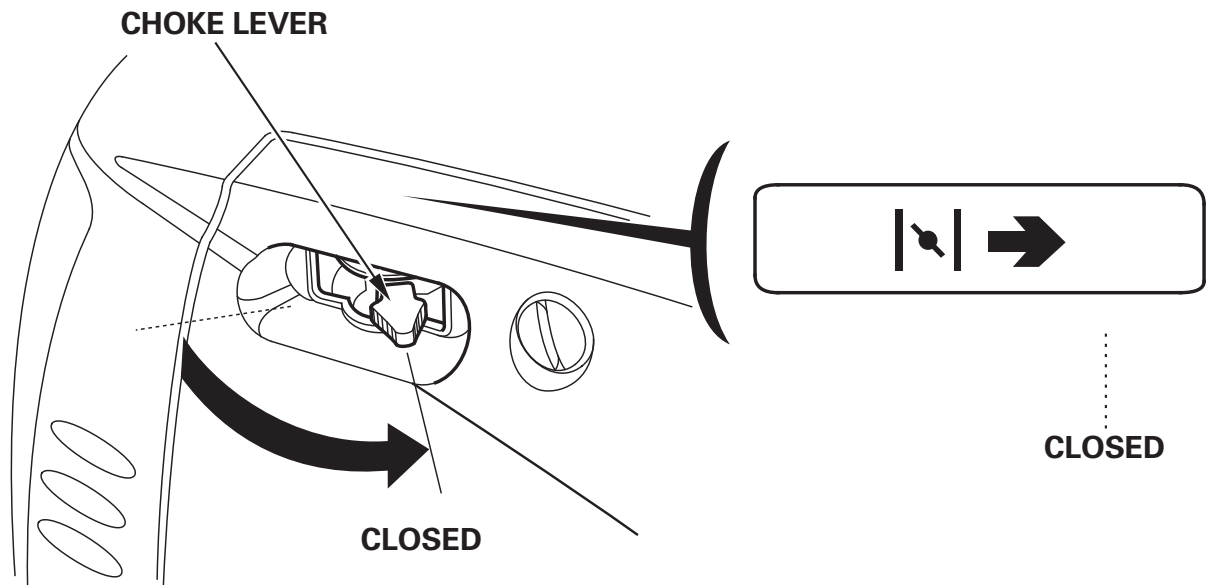


4. Pull the starter grip lightly until you feel resistance, then pull the starter grip briskly toward in the direction of the arrow as shown below.

CAUTION:

- The starter grip can be drawn back very quickly before you release it. This may pull your hand forcefully toward the engine and cause an injury.
- Do not allow the starter grip to snap back. Return it slowly by hand.

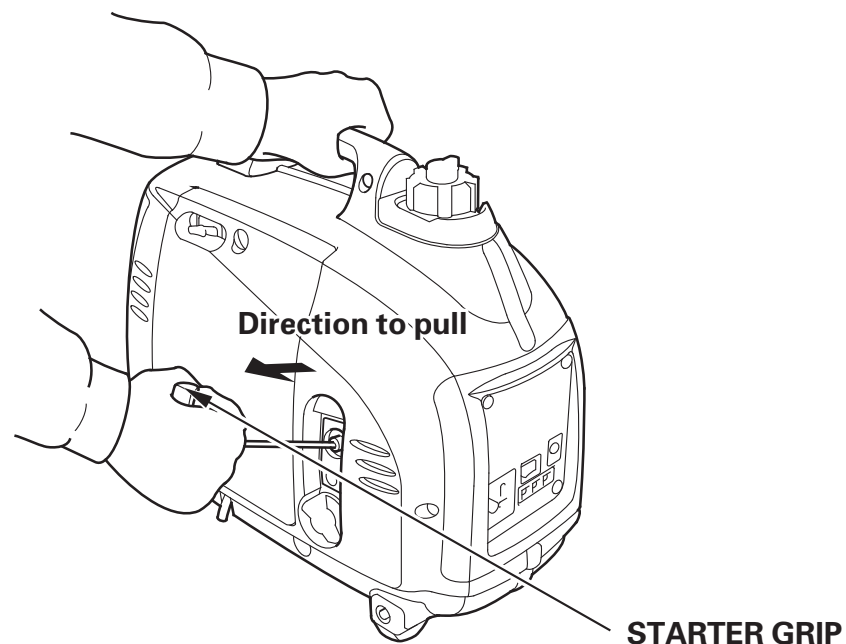

5. Move the choke lever to the OPEN position as the engine warms up.

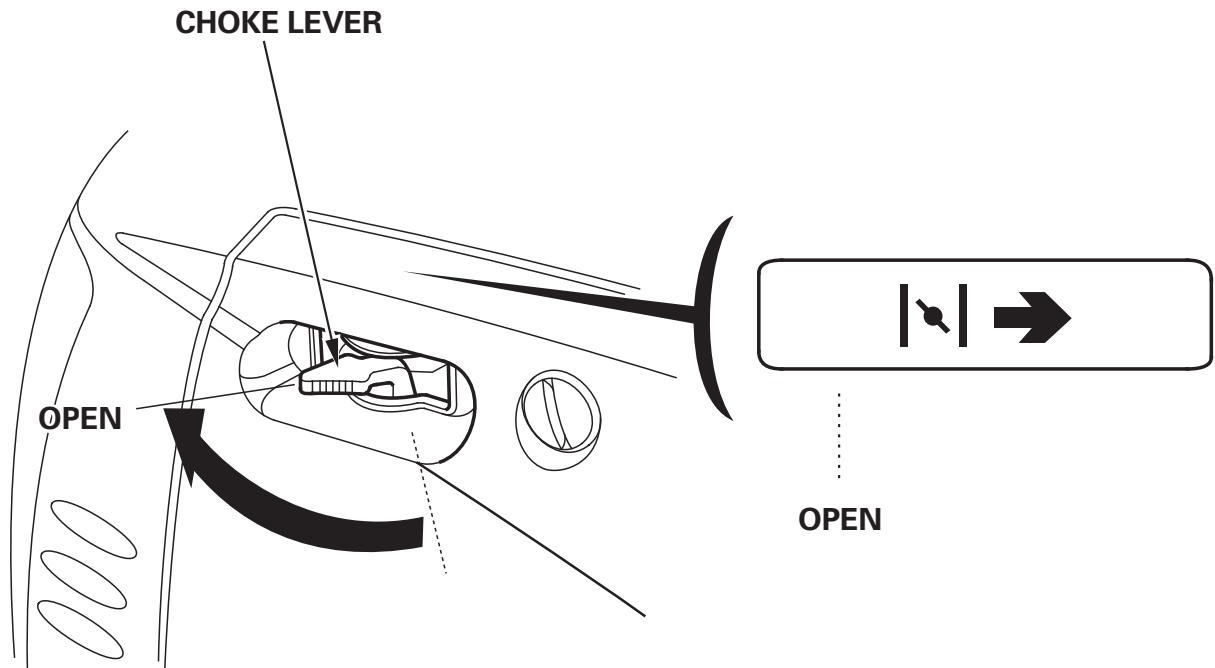

NOTE:

If the engine stops and will not restart, check the engine oil level (see pages 16 and 17) before troubleshooting in other areas.

- **Carburetor Modification for High Altitude Operation**

At high altitude, the standard carburetor air-fuel mixture will be too rich. Performance will decrease, and fuel consumption will increase. A very rich mixture will also foul the spark plug and cause hard starting. Operation at an altitude that differs from that at which this engine was certified, for extended periods of time, may increase emissions.

High altitude performance can be improved by specific modifications to the carburetor. If you always operate your generator at altitudes above 1,500 meters (5,000 feet), have your authorized Honda servicing dealer perform this carburetor modification. This engine, when operated at high altitude with the carburetor modifications for high altitude use, will meet each emission standard throughout its useful life.

Even with carburetor modification, engine horsepower will decrease about 3.5% for each 300-meter (1,000-foot) increase in altitude. The effect of altitude on horsepower will be greater than this if no carburetor modification is made.

CAUTION:


When the carburetor has been modified for high altitude operation, the air-fuel mixture will be too lean for low altitude use. Operation at altitudes below 1,500 meters (5,000 feet) with a modified carburetor may cause the engine to overheat and result in serious engine damage. For use at low altitudes, have your servicing dealer return the carburetor to original factory specifications.

6. GENERATOR USE

Be sure to ground the generator when the connected equipment is grounded.

⚠ WARNING

- Do not connect to a building's electrical system unless an isolation switch has been installed by a qualified electrician.
- Connections for standby power to a building's electrical system must be made by a qualified electrician and must comply with all applicable laws and electrical codes. Improper connections can allow electrical current from the generator to back feed into the utility lines. Such back feed may electrocute utility company workers or others who contact the lines during a power outage, and when utility power is restored, the generator may explode, burn, or cause fires in the building's electrical system.

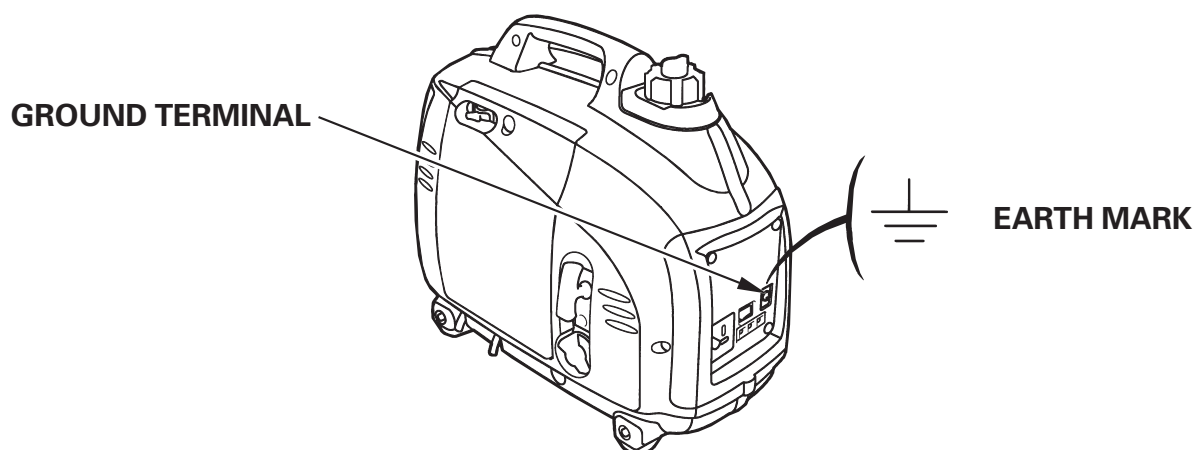

CAUTION:


- Do not exceed the current limit specified for any one receptacle.
- Do not connect the generator to a household circuit. This could cause the damage to the generator or to electrical appliances in the house.
- Do not modify or use the generator for other purposes than it is intended for. Also observe the following when using the generator.
- Do not connect an extension to the exhaust pipe.
- When an extension cable is required, be sure to use a tough rubber sheathed flexible cable (IEC 245 or equivalent).
- Limit length of extension cables; 60 m (200 feet) for cables of 1.5 mm² (0.0023 in²) and 100 m (330 feet) for cables of 2.5 mm² (0.0039 in²). Long extension cables will lower usable power due to resistance in the extension cable.
- Keep the generator away from other electric cables or wires such as commercial power supply lines.

NOTE:

- The DC receptacle can be used while the AC power is in use. If you use both at the same time, do not exceed the maximum AC power.
Maximum AC power: 0.8 kVA
- Most appliance motors require more than their rated wattage for startup.
- Make sure the electrical rating of the tool or appliance does not exceed that of the generator. Never exceed the maximum power rating of the generator. Power levels between rated and maximum may be used for no more than 30 minutes.
- Limit operation requiring maximum power to 30 minutes.
Maximum power is: 1.0 kVA
- For continuous operation, do not exceed the rated power.
Rated power is: 0.9 kVA
- In either case, the total power requirements (VA) of all appliances connected must be considered.

AC applications

1. Start the engine and make sure the green output indicator comes on.
2. Confirm that the appliance to be used is switched off, and plug in the appliance.

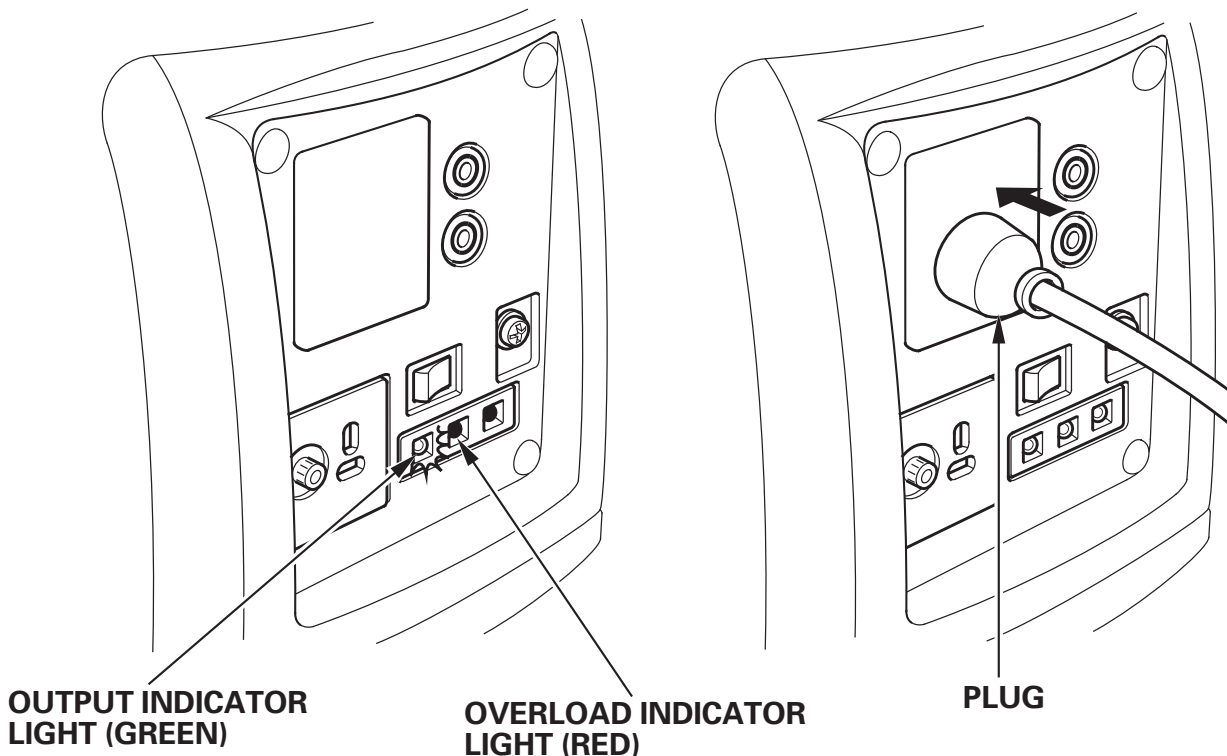

CAUTION:

- Substantial overloading that continuously lights the overload indicator light (red) may damage the generator. Marginal overloading that temporarily lights the overload indicator light (red) may shorten the service life of the generator.
- Be sure that all appliances are in good working order before connecting them to the generator. If an appliance begins to operate abnormally, becomes sluggish, or stops suddenly, turn off the generator engine switch immediately. Then disconnect the appliance, and examine it for signs of malfunction.


Output and Overload Indicators

The Output indicator (green) will remain ON during normal operating conditions.


If the generator is overloaded (in excess of 1.0 kVA), or if there is a short in the connected appliance, the output indicator light (green) will go OFF, the overload indicator light (red) will go ON and current to the connected appliance will be shut off.

Stop the engine if the Overload indicator (red) comes ON and investigate the overload source.

- Before connecting an appliance to the generator, check that it is in good order, and that its electrical rating does not exceed that of the generator. Then connect the power cord of the appliance, and start the engine.

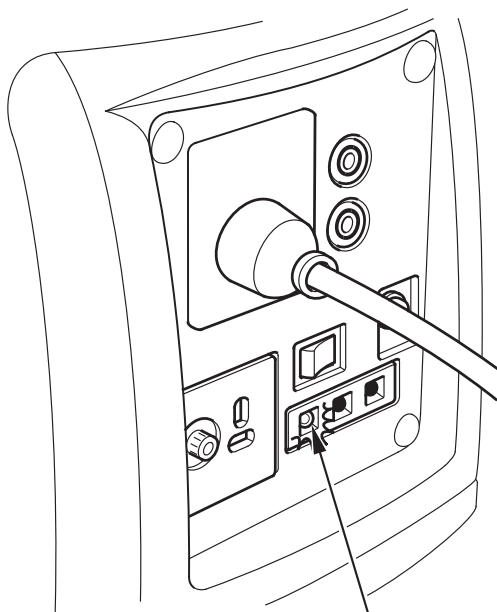

**OUTPUT INDICATOR LIGHT
(GREEN)**

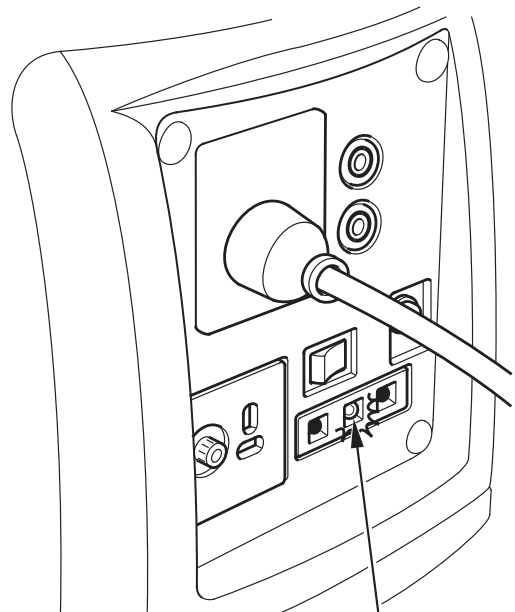

**OUTPUT INDICATOR LIGHT
(RED)**


NOTE:

When an electric motor is started, both the Overload indicator (red) and the Output indicator (green) may go on simultaneously. This is normal if the Overload indicator (red) goes off after about five (5) seconds. If the Overload indicator (red) stays on, consult your Honda generator dealer.

Parallel operation

Please read the item "GENERATOR USE" before connecting any equipment to be used.

Use only a special cable for parallel operation (sold separately).

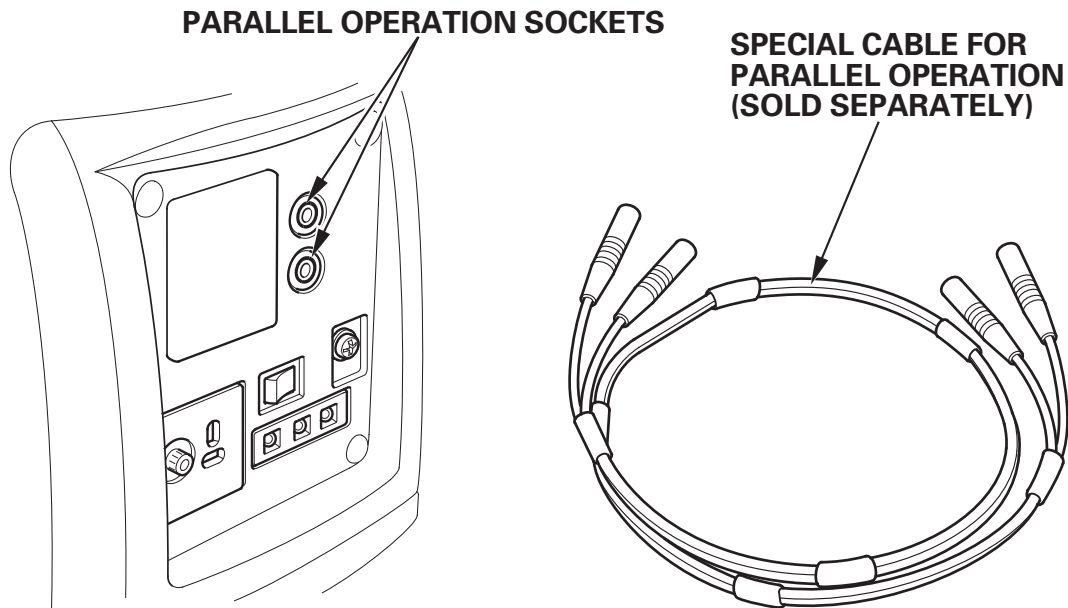

Make sure that the electrical rating of the tool or appliance does not exceed that of the generator. Never exceed the maximum power rating of the generator. Power levels between rated and maximum may be used for no more than 30 minutes.

Limit operation requiring maximum power to 30 minutes.

Maximum power in parallel operation is: 2,000 VA

For continuous operation, do not exceed the rated power.

Rated power in parallel operation is: 1,800 VA

In either case, the total power requirements (VA) of all appliances connected must be considered.

CAUTION:

Substantial overloading that continuously lights the overload indicator light (red) may damage the generator. Marginal overloading that temporarily lights the overload indicator light (red) may shorten the service life of the generator.


▲WARNING

- **Never connect the different generator models and types.**
- **Never connect a cable other than the special cable for parallel operation.**
- **Connect and remove the special cable for parallel operation with the engine stopped.**
- **For single operation, the special cable for parallel operation must be removed.**


NOTE:

- Depending on the equipment to be used, an overload may be caused, the overload indicator light (red) may light, and it may become impossible to take out any more electric power.
- Motors generally require two to three times of their power consumption for starting.


1. Connect the special cable for parallel operation to the two generators.

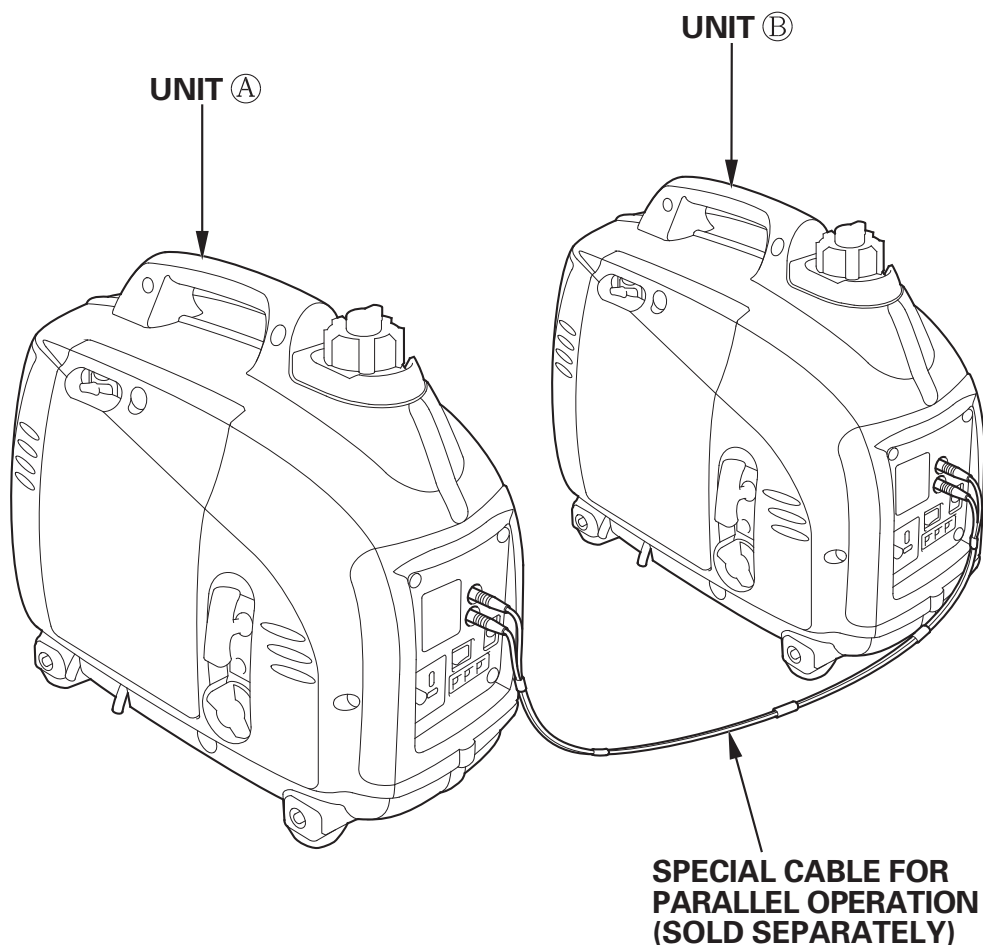

-
2. Be sure to ground the generator when the connected equipment is grounded.

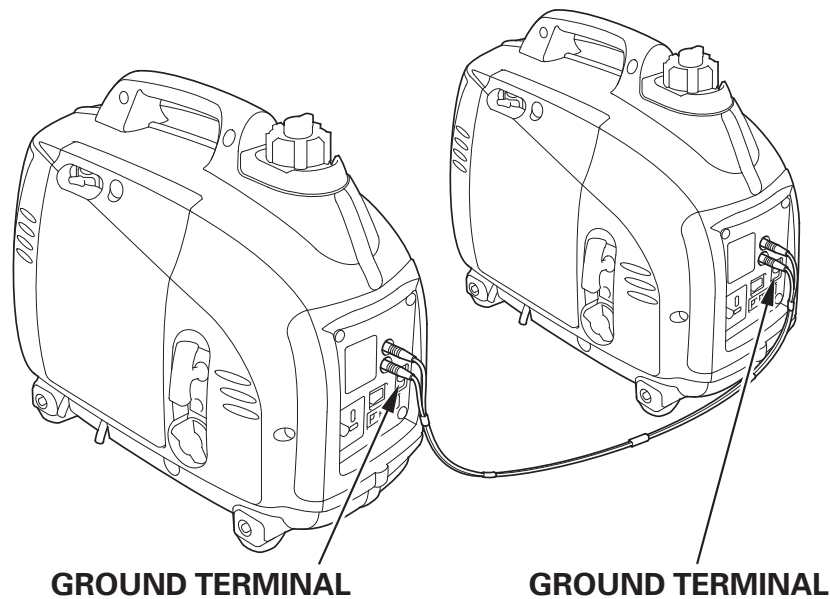

3. Start each engine according to "STARTING THE ENGINE".
- When the output indicator light (green) does not light and the overload indicator light (red) lights instead, set the engine switch to STOP, stop the engine once, and then start the engine again.
4. Confirm that the equipment to be used is switched off, and insert the plug of the equipment to be used into the AC receptacle of unit (A) or unit (B).

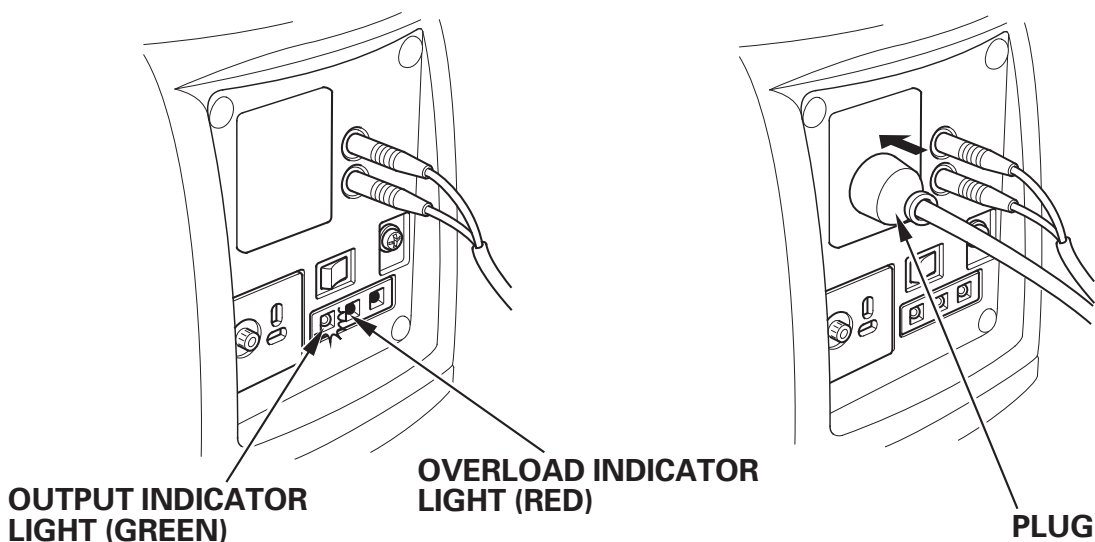


CAUTION:

Confirm that the use equipment to be connected is switched off. When the equipment to be used is switched on, it will operate suddenly, and injuries or accidents may be caused.


-
6. Switch on the equipment to be used.
The output indicator light (green) will light.

In case of normal operation

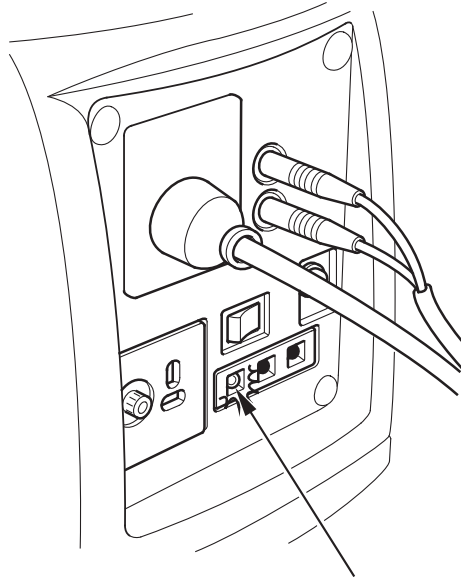

**OUTPUT INDICATOR LIGHT
(GREEN)**

In case of overload operation or short-circuit

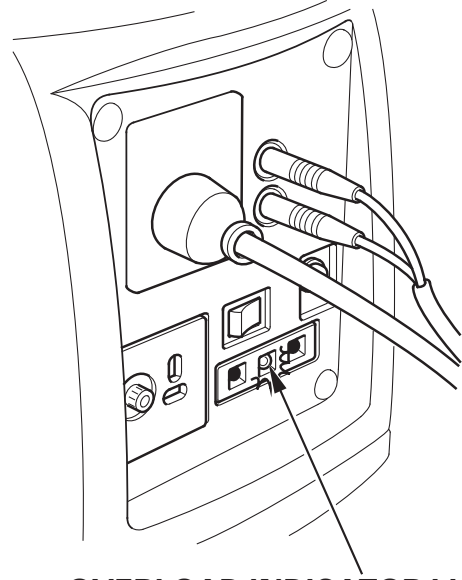

**OVERLOAD INDICATOR LIGHT
(RED)**

- In case of overload operation (refer to page 29) or when trouble occurs for the equipment being used, the output indicator light (green) will go out, the overload indicator light (red) will light continuously, and no power will be put out. At this time, the engine will not stop, so that the engine must be stopped by setting the respective engine switch to STOP.

NOTE:

- When equipment requiring a large starting power, like a motor etc., is used, the overload indicator light (red) and the output indicator light (green) may light together for a short time (about 4 sec), but this is no abnormality. After start of the equipment, the overload indicator light (red) will go out and the output indicator light (green) will stay lit.
 - When the operation of one generator is to be stopped after start of the equipment, the special cable for parallel operation also must be removed at the same time.
7. When electric power is to be taken again from the generator, switch off the equipment to be used and remove the plug from the AC receptacle. Confirm that the equipment and the connection are normal and that not too much power is to be taken, and then start the engine.


DC Application

The DC receptacle may be used for charging 12 volt automotive-type batteries only.

NOTE:

- In DC operation, turn the eco throttle switch to the OFF position.

1. Connect the charging cable to the DC receptacle of the generator and then to the battery terminals.

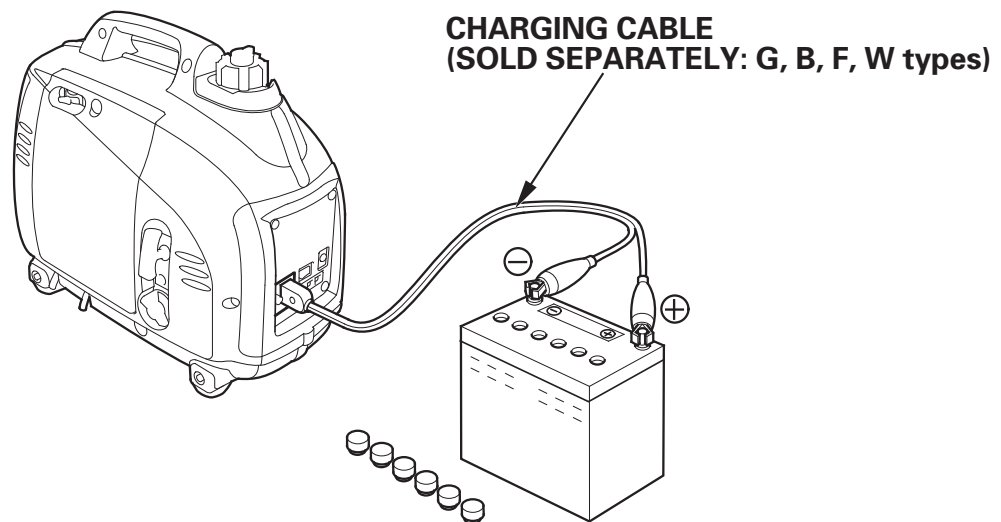

⚠ WARNING

- To prevent the possibility of creating a spark near the battery, connect charging cable first to the generator, then to the battery. Disconnect cable first at the battery.
- Before connecting charging cable to a battery that is installed in a vehicle, disconnect the vehicle's battery cable. Reconnect the vehicle's battery cable after the charging cables are removed. This procedure will prevent the possibility of a short circuit and sparks if you make accidental contact between a battery terminal and the vehicle's frame or body.

CAUTION:

- Do not attempt to start an automobile engine with the generator still connected to the battery. The generator may be damaged.
- Connect the positive battery terminal to the positive charging cord. Do not reverse the charging cables, or serious damage to the generator and/or battery may occur.


▲ WARNING

- **Batteries produce explosive gases:** If ignited, and explosion can cause serious injury or blindness. Provide adequate ventilation when charging.
- **CHEMICAL HAZARD:** Battery electrolyte contains sulfuric acid. Contact with eyes or skin, even through clothing, may cause severe burns. Wear a faceshield and protective clothing.
- **Keep flames and sparks away, and do not smoke in the area.**
ANTIDOTE: If electrolyte gets into your eyes, flush thoroughly with warm water for at least 15 minutes and call a physician immediately.
- **POISON:** Electrolyte is poison.
ANTIDOTE
 - **External:** Flush thoroughly with water.
 - **Internal:** Drink large quantities of water or milk.
Follow with milk of magnesia or vegetable oil, and call a physician immediately.
- **KEEP OUT OF REACH OF CHILDREN.**

2. Start the engine.

NOTE:


- The DC receptacle can be used while the AC power is in use.
- An overload DC circuit will trip the DC circuit protector (push button comes out).
If this happens, wait a few minutes before pushing in the circuit protector to resume operation.

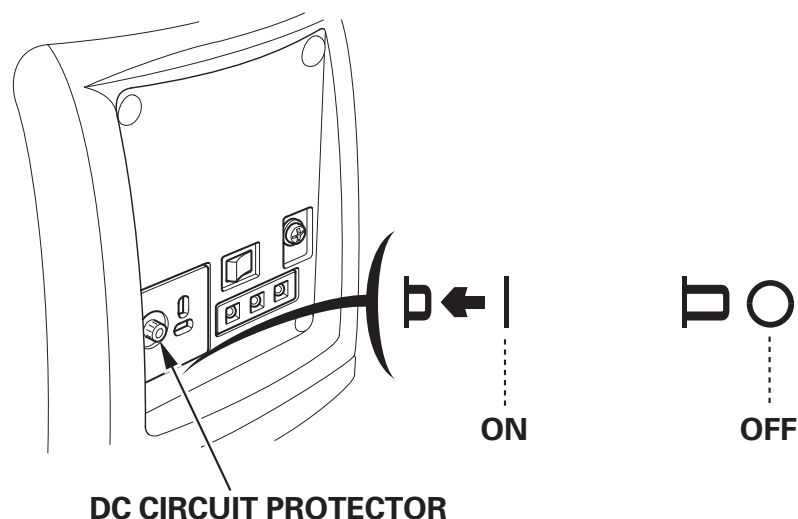

Oil Alert system

The Oil Alert system is designed to prevent engine damage caused by an insufficient amount of oil in the crankcase. Before the oil level in the crankcase falls below a safe limit, the Oil Alert system will automatically shut down the engine (the engine switch will remain in the ON position).

If the Oil Alert system shuts down the engine, the Oil Alert indicator (red) will come on when you operate the starter, and the engine will not run. If this occurs, check the engine oil level (see pages 16 and 17).

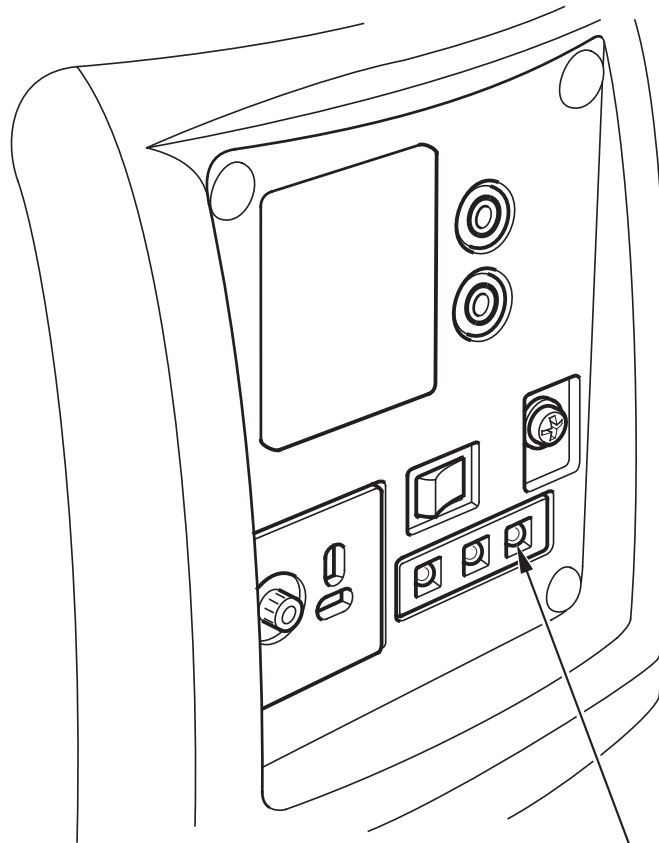


**OIL ALERT INDICATOR
LIGHT (RED)**

7. STOPPING THE ENGINE


To stop the engine in an emergency, turn the engine switch to the OFF position.

IN NORMAL USE:


1. Switch off the connected equipment and pull the inserted plug.

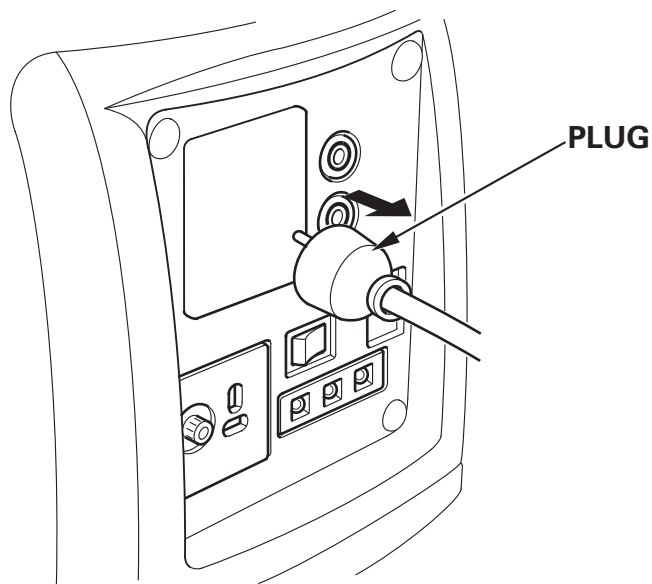

2. Turn the engine switch to the OFF position.

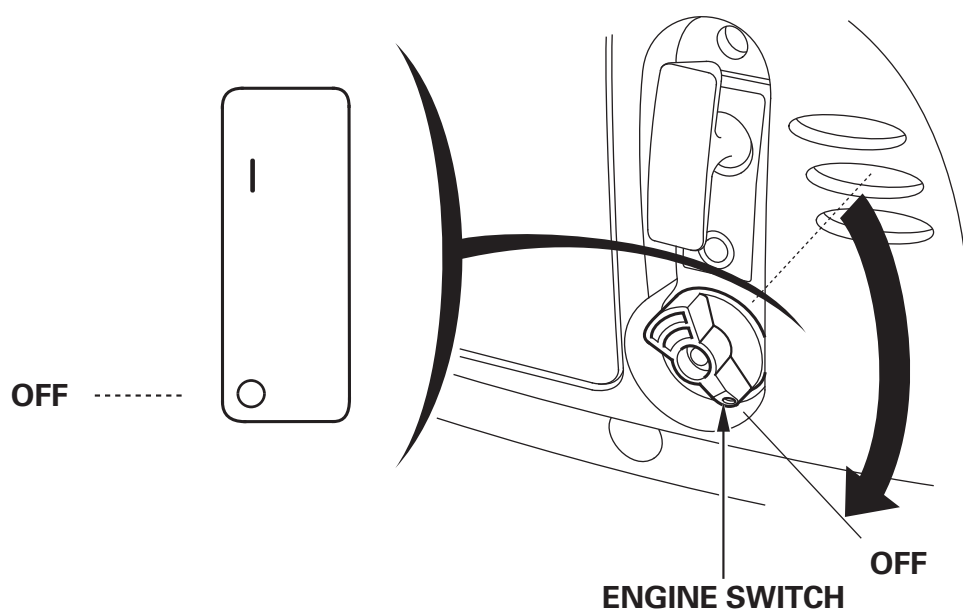


-
3. Turn the fuel cap vent lever fully counterclockwise to the OFF position.

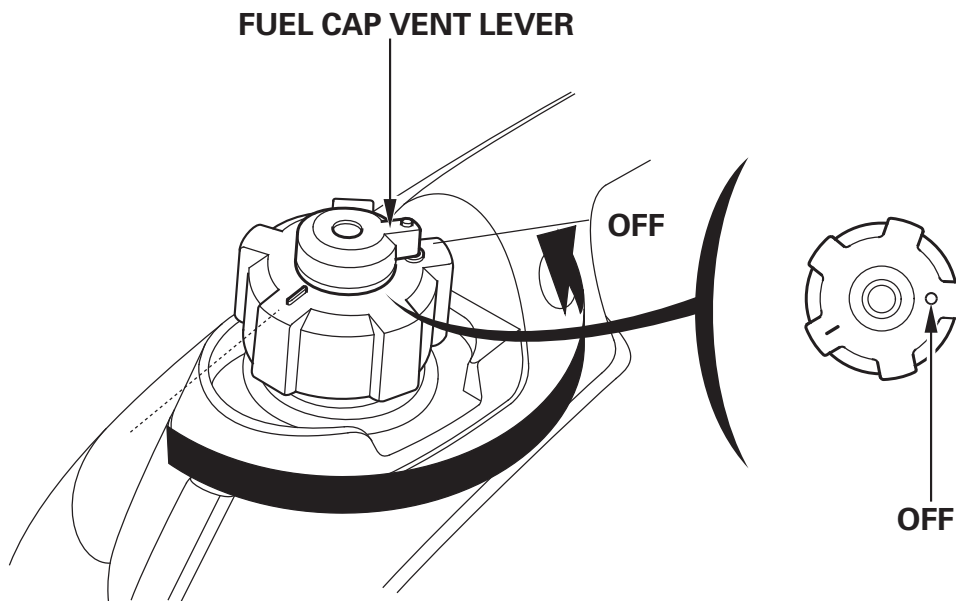

CAUTION:

Be sure the fuel cap vent lever and the engine switch are OFF when stopping, transporting and/or storing the generator.

4. When parallel operation has been executed, pull the special cable for parallel operation.

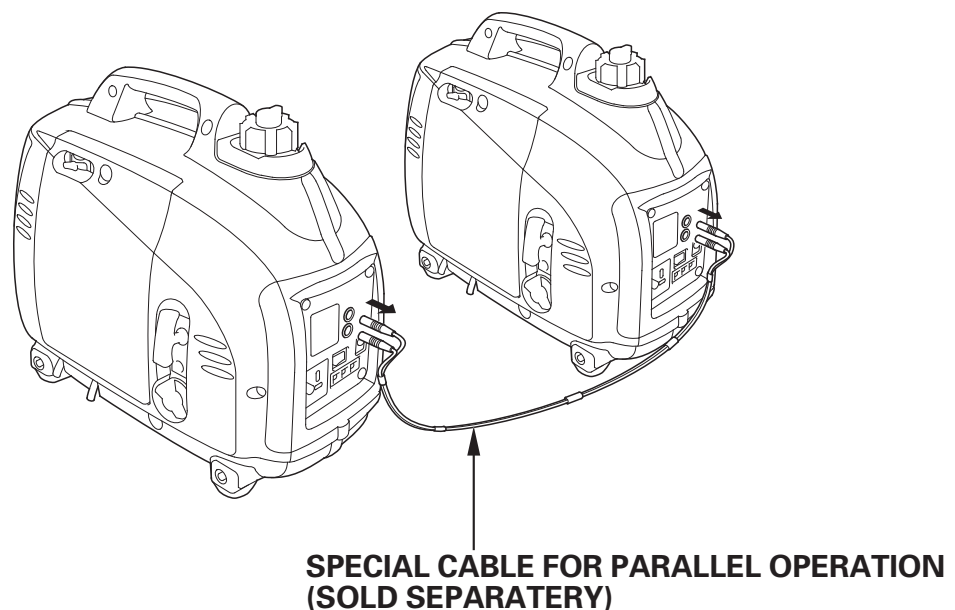

8. MAINTENANCE

The purpose of the maintenance and adjustment schedule is to keep the generator in the best operating condition. Inspect or service as scheduled in the table below.

▲ WARNING

Make sure the engine is off before you begin any maintenance or repairs. This will eliminate several potential hazards:

- **Carbon monoxide poisoning from engine exhaust. Be sure there is adequate ventilation whenever you operate the engine.**
- **Burns from hot parts. Let the engine and exhaust system cool before touching.**
- **Injury from moving parts. Do not run the engine unless instructed to do so.**

The muffler becomes very hot during operation and remains hot for a while after stopping the engine. Be careful not to touch the muffler while it is hot. Let the engine cool before maintenance.

CAUTION:

Use Honda Genuine parts or their equivalent. The use of replacement parts which are not of equivalent quality may damage the generator.

Maintenance Schedule

REGULAR SERVICE PERIOD (3)		Each use	First month or 10 hrs.	Every 3 months or 50 hrs.	Every 6 months or 100 hrs.	Every 2 years or 300 hrs.
Engine oil	Check level	○				
	Change		○		○	
Air cleaner	Check	○				
	Clean			○ (1)		
Spark plug	Check-adjust				○	
	Replace					○
Spark arrester (Applicable type)	Clean				○	
Valve Clearance	Check-adjust					○ (2)
Combustion chamber	Clean	After every 300 hrs (2)				
Fuel tank & filter	Clean	Every year (2)				
Fuel tube	Check	Every 2 years (Replace if necessary) (2)				

NOTE: (1)Service more frequently when used in dusty areas.

(2)These items should be serviced by your Honda servicing dealer, unless you have the proper tools and are mechanically proficient. Refer to the Honda shop manual for service procedures.

(3)For commercial use, log hours of operation to determine proper maintenance intervals.

1. CHANGING OIL


Drain the oil while the engine is still warm to assure rapid and complete draining.

CAUTION:

Make sure to turn the engine switch and the fuel cap vent lever OFF before draining.

1. Loosen the cover screw and remove the left side maintenance cover.
2. Remove the oil filler cap.
3. Drain dirty oil into a container thoroughly.
4. Refill with the recommended oil (see page 16) and check the oil level.
5. Reinstall the left side maintenance cover and tighten the cover screw securely.

ENGINE OIL CAPACITY: 0.25 L (0.26 US qt, 0.22 Imp qt)

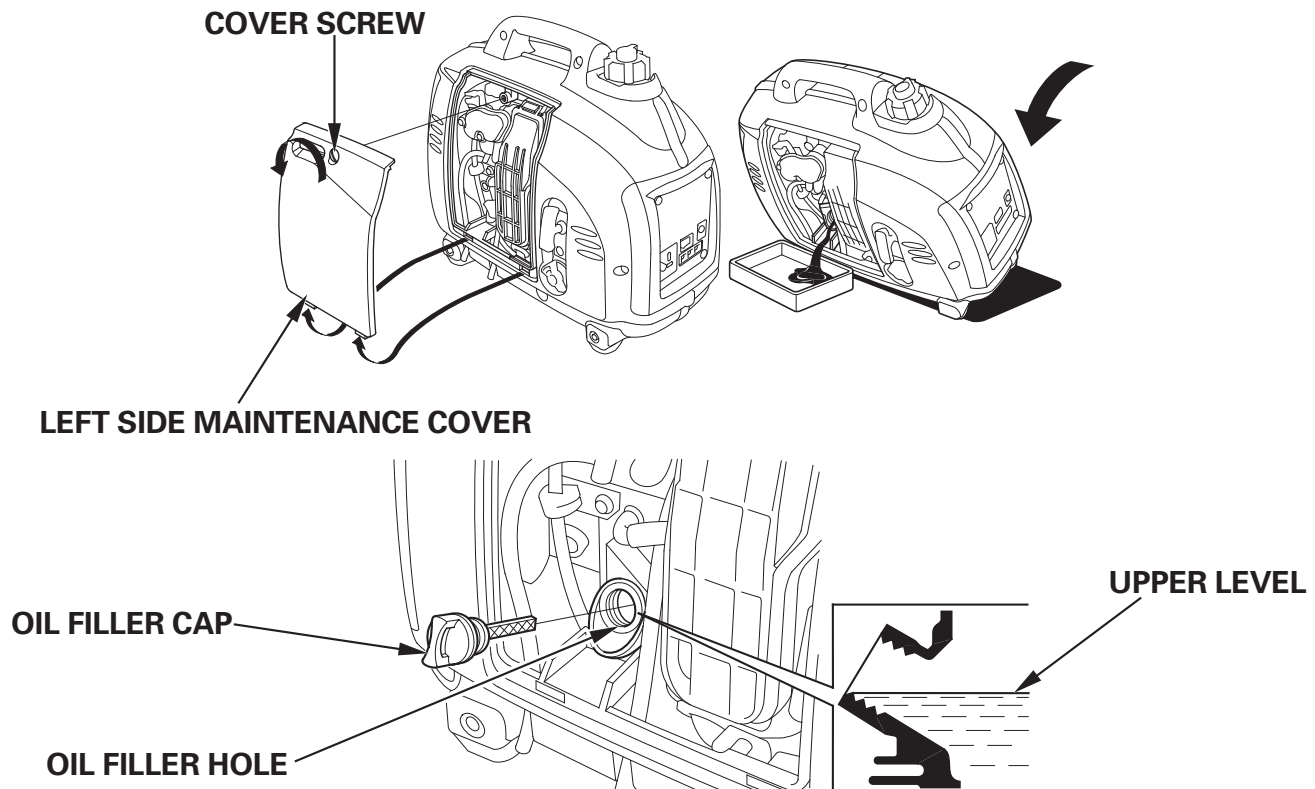

Wash your hands with soap and water after handling used oil.

NOTE:

Please dispose of used motor oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local service station for reclamation. Do not throw it in the trash or pour it on the ground.

2. AIR CLEANER SERVICE

A dirty air cleaner will restrict air flow to the carburetor. To prevent carburetor malfunction, service the air cleaner regularly. Service more frequently when operating the generator in extremely dusty areas.


▲WARNING

Do not use gasoline or low flash point solvents for cleaning. They are flammable and explosive under certain conditions.

CAUTION:

Never run the generator without the air cleaner. Rapid engine wear may result.

1. Loosen the cover screw and remove the left side maintenance cover.
2. Press the latch tab on the top of the air cleaner body, and remove the air cleaner cover.
3. Wash the element in a non-flammable or high flash point solvent and dry it thoroughly.
4. Soak the element in clean engine oil and squeeze out the excess oil.
5. Reinstall the air cleaner element and the cover.
6. Reinstall the air cleaner cover by inserting the lower tabs, and the latch tab.
7. Reinstall the left side maintenance cover and tighten the cover screw securely.

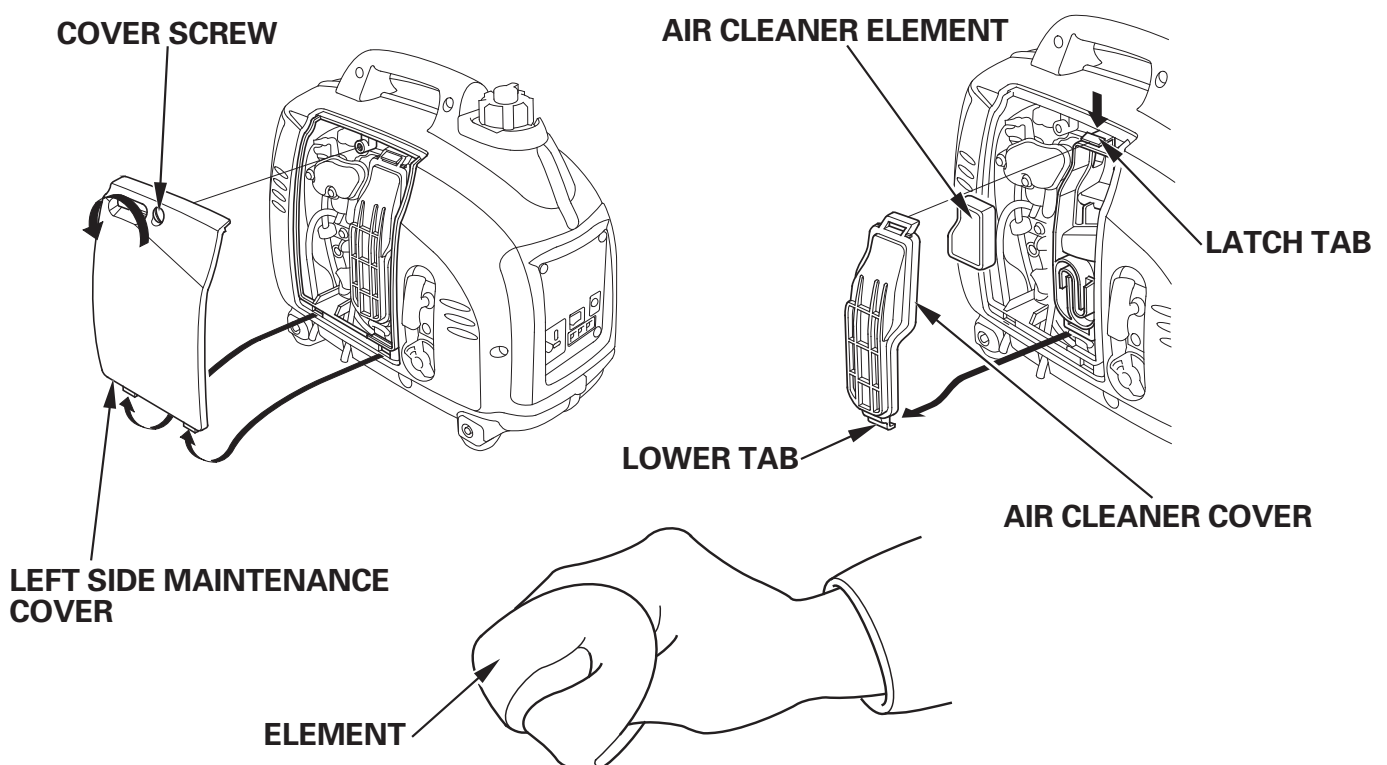


3. SPARK PLUG SERVICE


**RECOMMENDED SPARK PLUG: CR4HSB (NGK)
U14FSR-UB (DENSO)**

To ensure proper engine operation, the spark plug must be properly gapped and free of deposits.


1. Remove the spark plug maintenance cover.

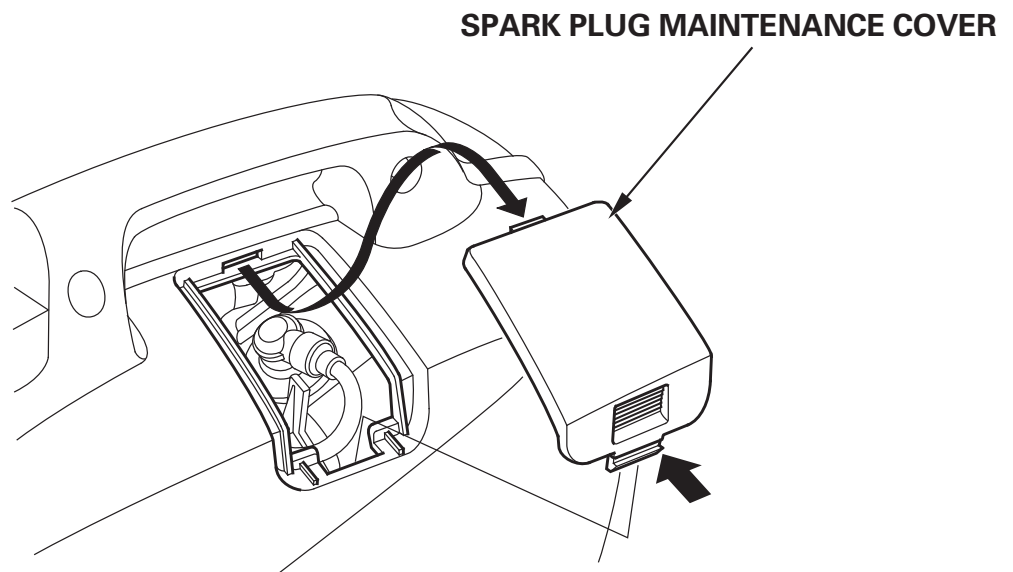

2. Remove the spark plug cap.
3. Clean any dirt from around the spark plug base.
4. Use a spark plug wrench to remove the spark plug.

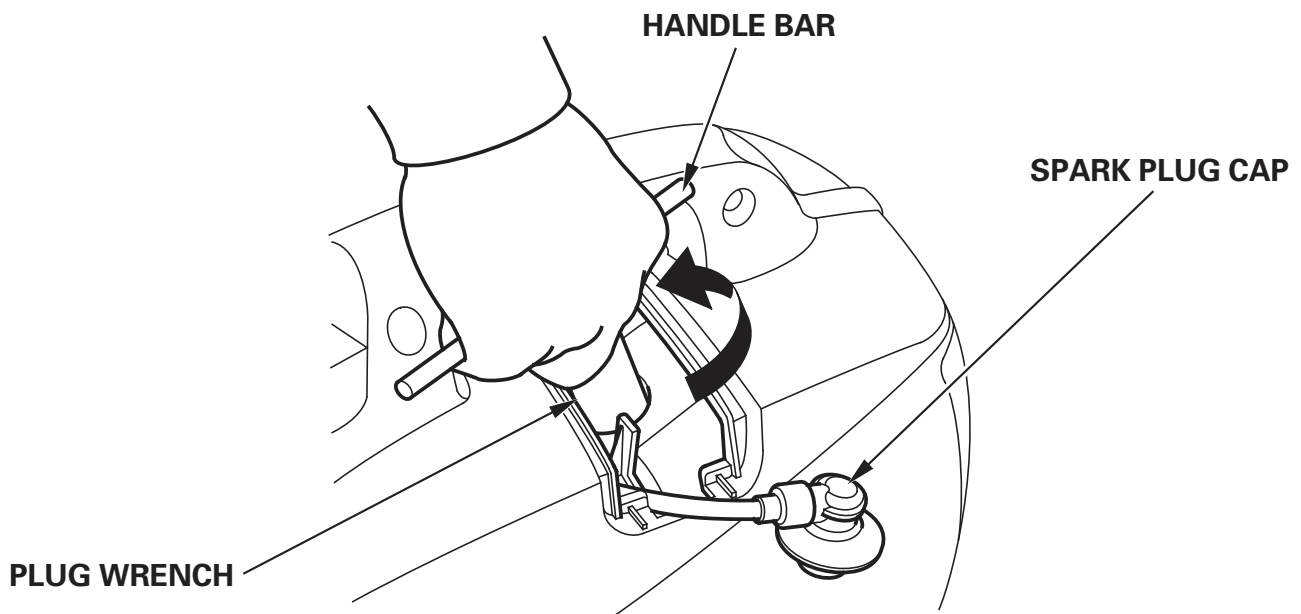

-
5. Visually inspect the spark plug. Discard it if the insulator is cracked, chipped, or fouled. Clean the spark plug with a wire brush if it is to be reused.
 6. Measure the plug gap with a feeler gauge. Correct as necessary by carefully bending the side electrode. The gap should be:
0.6–0.7 mm (0.024–0.028 in)

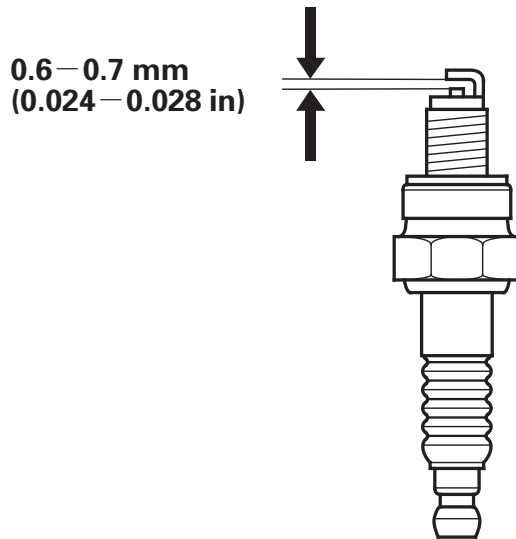

7. Install the spark plug carefully, by hand, to avoid cross-threading.
8. After a new spark plug has been seated by hand, it should be tightened 1/2 turn with a wrench to compress its washer. If a used plug is being reinstalled, it should only require 1/8 to 1/4 turn after being seated.
9. Reinstall the spark plug cap on the spark plug securely.
10. Reinstall the spark plug maintenance cover.

CAUTION:

- The spark plug must be securely tightened. An improperly tightened plug can become very hot and possibly damage the generator.
- Never use a spark plug with an improper heat range.

4. SPARK ARRESTER MAINTENANCE (Equipped type)


⚠ WARNING

If the generator has been running, the muffler will be very hot. Allow it to cool before proceeding.


CAUTION:

The spark arrester must be serviced every 100 hours to maintain its efficiency.

1. Remove the four 5 mm screws, and remove the muffler protector.

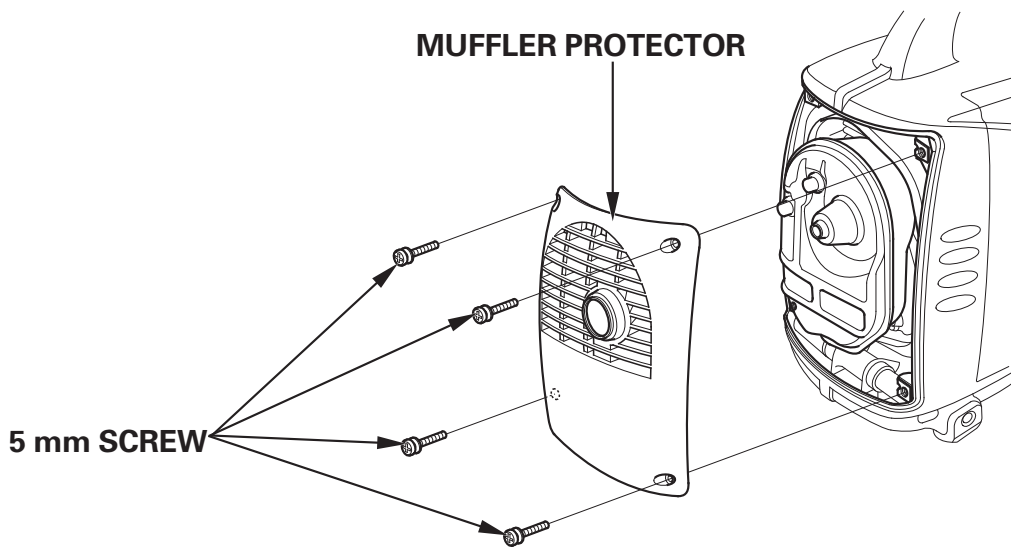

2. Remove the three 6 mm bolts, and remove the muffler, the spark arrester and the muffler gasket.

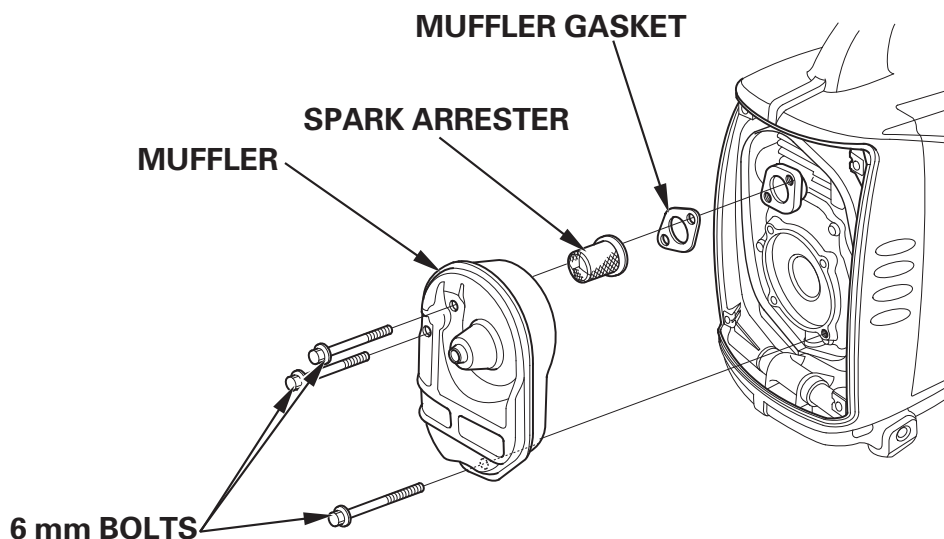

-
3. Use a brush to remove carbon deposits from the spark arrester screen.
Inspect the spark arrester screen for holes or tears. Replace if necessary.



4. Check the muffler gasket; replace if damaged.
Reinstall the muffler gasket, the spark arrester, the muffler and the muffler protector in the reverse order of removal.

9. TRANSPORTING/STORAGE

To prevent fuel spillage when transporting or during temporary storage, the generator should be secured upright in its normal operating position, with the engine switch OFF.

The fuel cap vent lever is turned fully counterclockwise to the OFF position.

▲WARNING

When transporting the generator:

- **Do not overfill the tank (there should be no fuel in the filler neck).**
- **Do not operate the generator while it is on a vehicle. Take the generator off the vehicle and use it in a well ventilated place.**
- **Avoid a place exposed to direct sunlight when putting the generator on a vehicle. If the generator is left in an enclosed vehicle for many hours, high temperature inside the vehicle could cause fuel to vaporize resulting in a possible explosion.**
- **Do not drive on a rough road for an extended period with the generator on board. If you must transport the generator on a rough road, drain the fuel from the generator beforehand.**


Before storing the unit for an extended period:

1. Be sure the storage area is free of excessive humidity and dust.
2. Drain the fuel.


▲WARNING

Gasoline is extremely flammable and is explosive under certain conditions. Perform this task in a well ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area during this procedure.


- a. Drain all gasoline from the fuel tank into an approved gasoline container. We recommend using a commercially available gasoline hand pump. Do not use an electric pump.

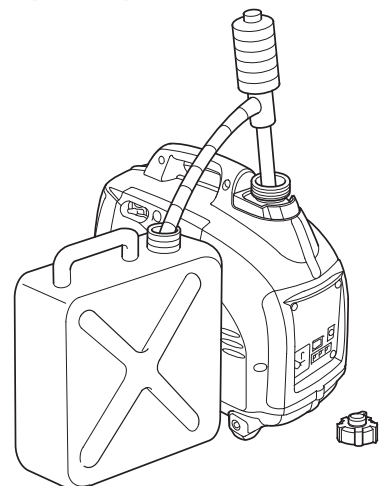

- b. Turn the engine switch to the ON position, and loosen the carburetor drain screw and drain the gasoline from the carburetor into a suitable container.
- c. With the drain screw loosened remove the spark plug cap, and pull the starter grip 3 to 4 times to drain the gasoline from the fuel pump.
- d. Turn the engine switch to the OFF position, and tighten the drain screw securely.
- e. Reinstall the spark plug cap on the spark plug securely.

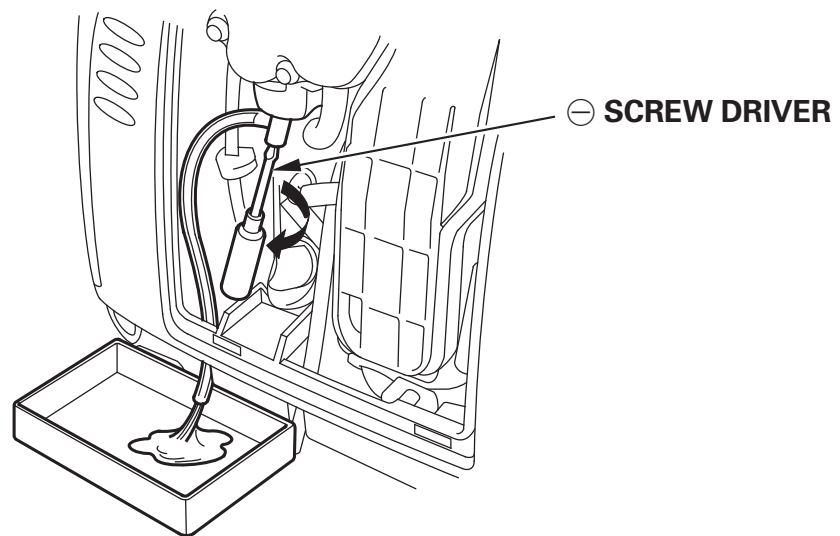


3. Change the engine oil.
4. Remove the spark plug and pour about a tablespoon of clean engine oil into the cylinder. Crank the engine several revolutions to distribute the oil, then reinstall the spark plug.
5. Slowly pull the starter grip until resistance is felt. At this point, the piston is coming up on its compression stroke and both the intake and exhaust valves are closed. Storing the engine in this position will help to protect it from internal corrosion.

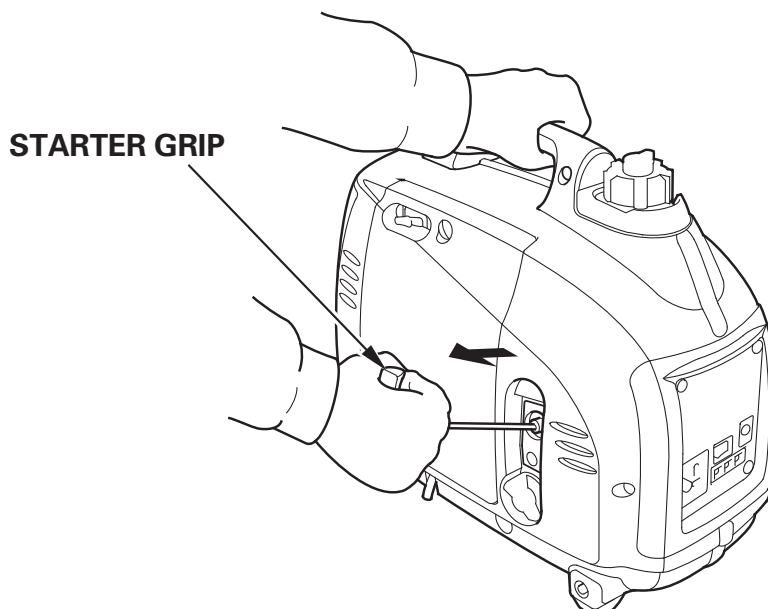


10. TROUBLESHOOTING


When the engine will not start:

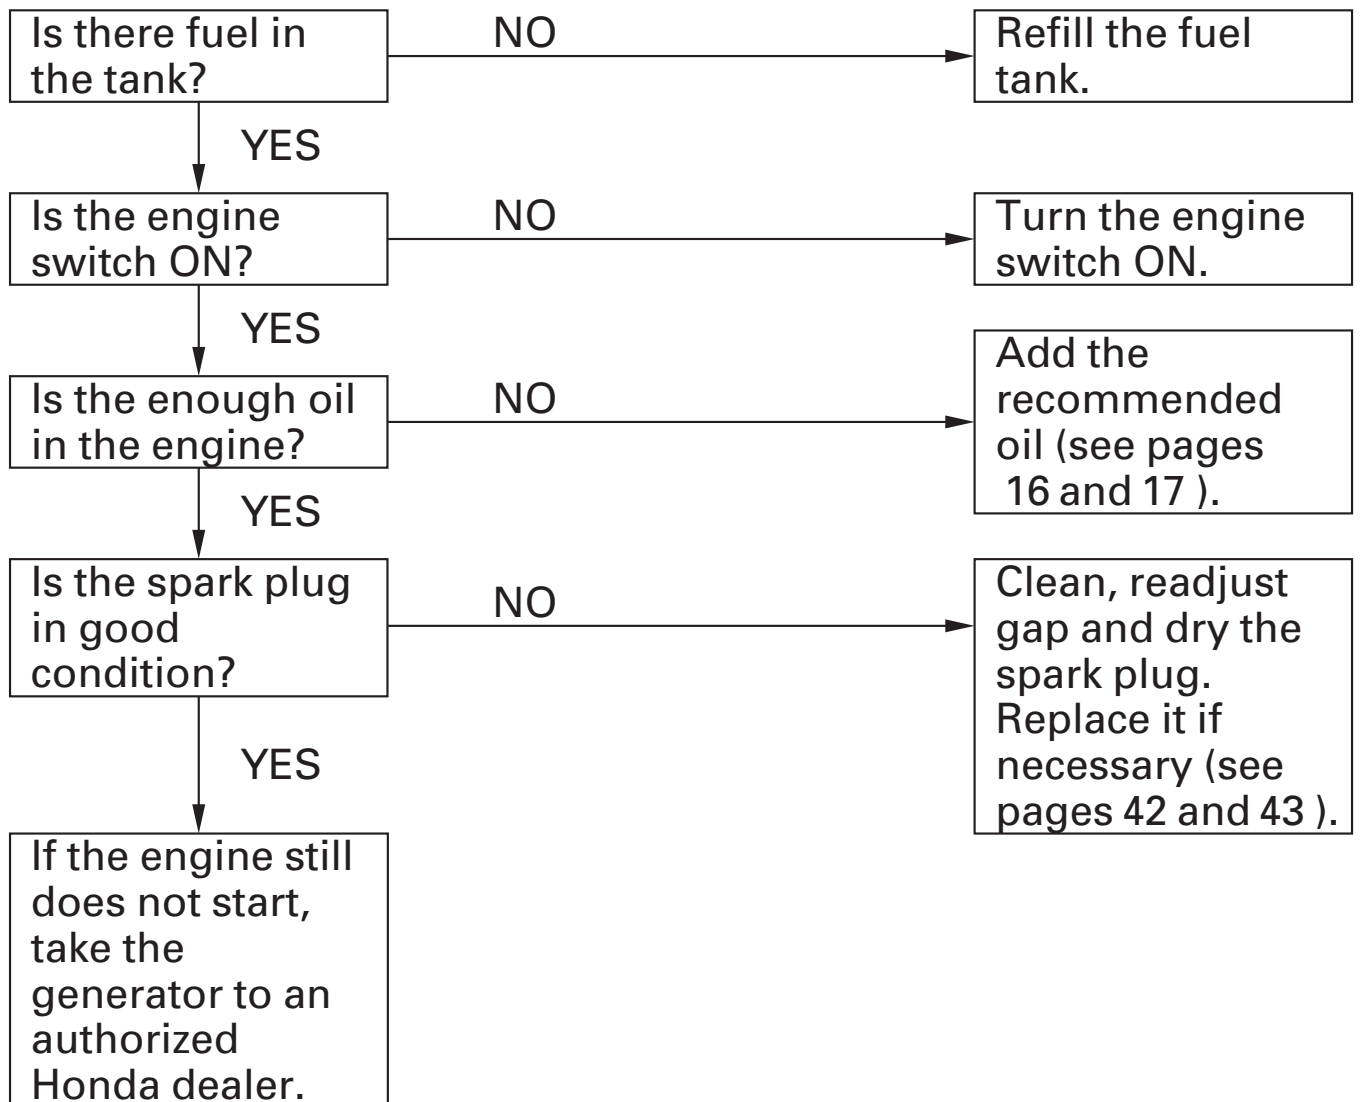

Appliance does not operate:

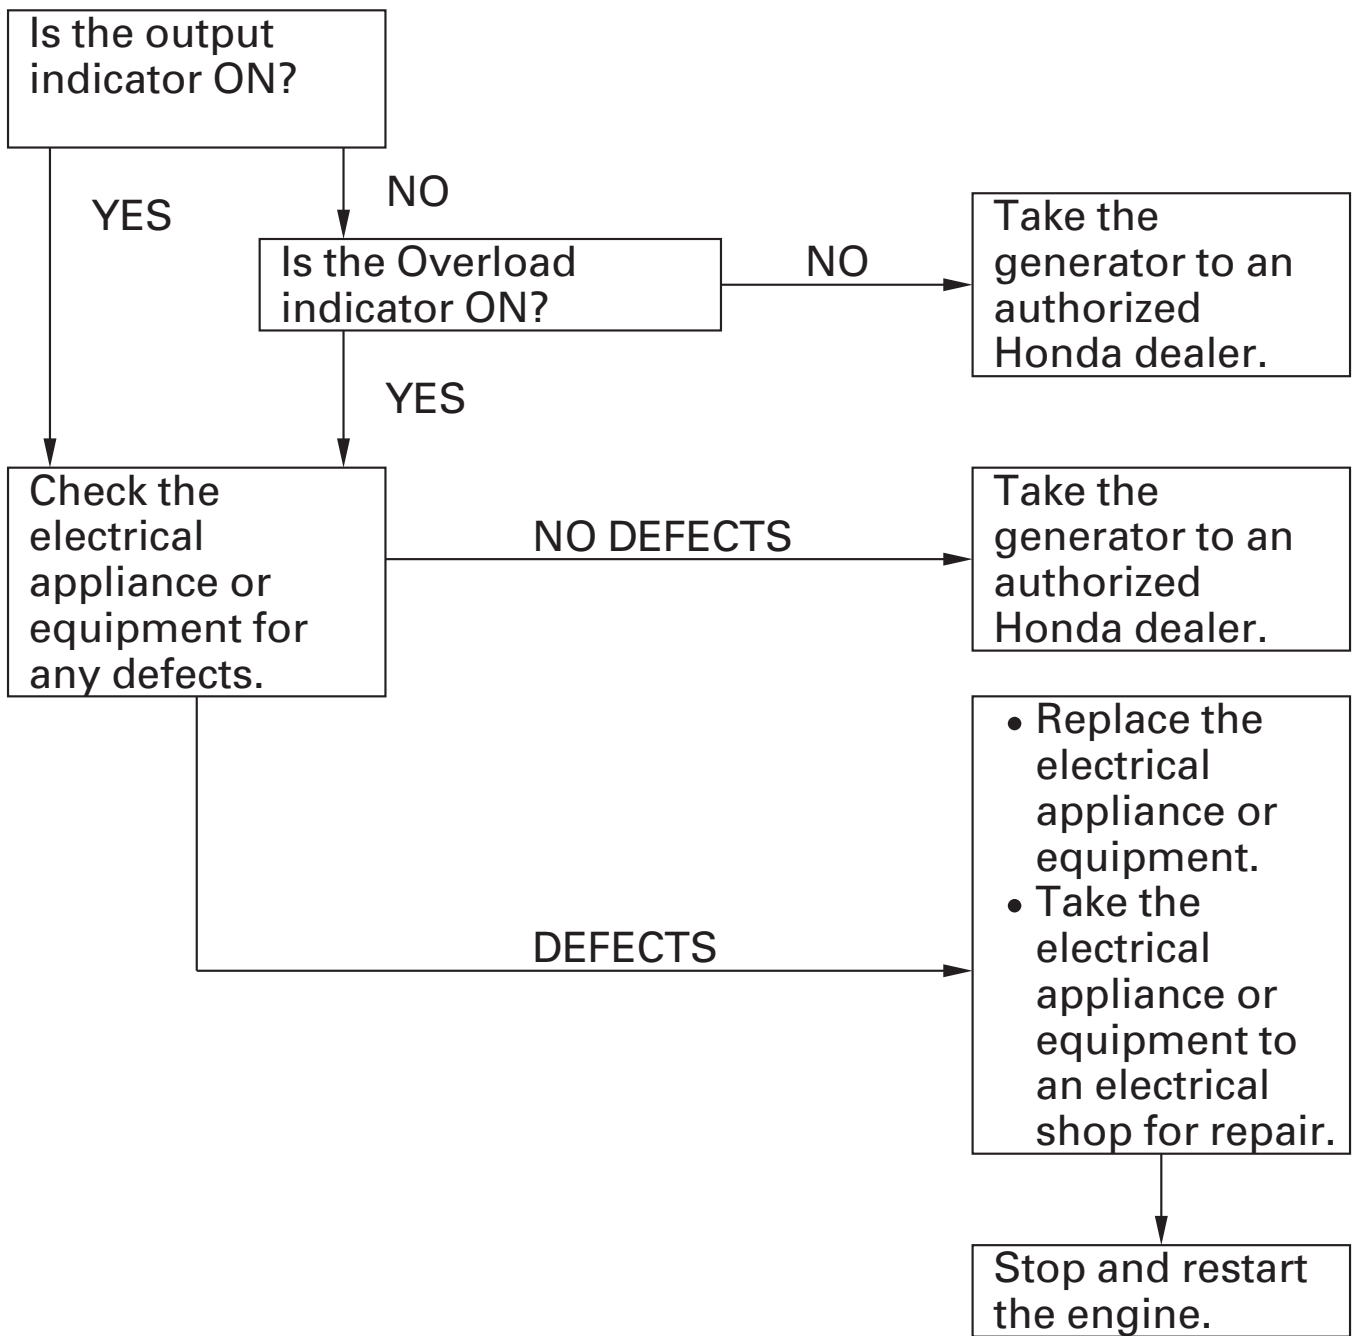

No electricity at the DC receptacle:

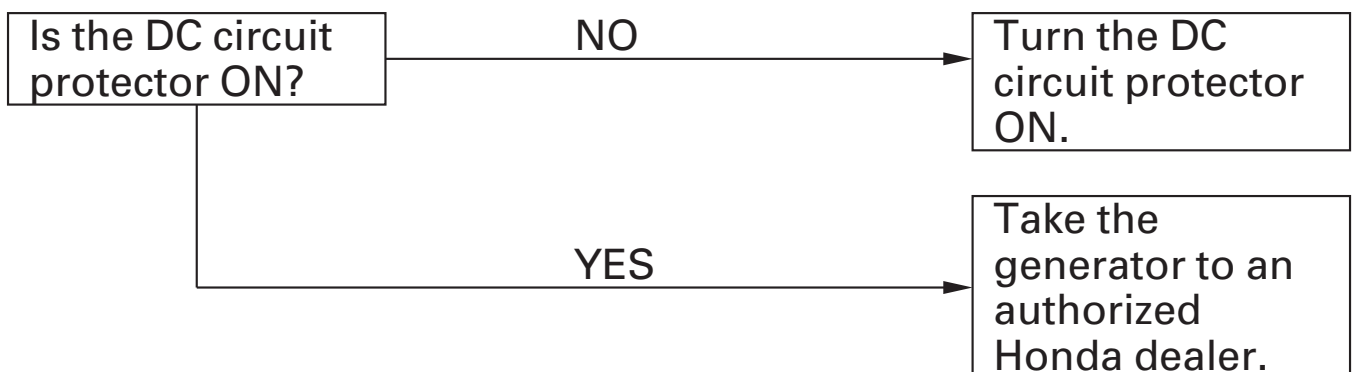

11. SPECIFICATIONS

Dimensions and Weight

Model	EU10i
Description code	EZGA
Length	451 mm (17.8 in)
Width	242 mm (9.5 in)
Height	379 mm (14.9 in)
Dry weight	13 kg (29 lbs)


Engine

Model	GXH50
Engine type	4-stroke, overhead valve, single cylinder
Displacement	49.4 cm ³ (3.01 cu-in)
Bore × Stroke	41.8 × 36.0 mm (1.64 in × 1.42 in)
Compression ratio	8.0:1
Engine speed	4,000 – 6,000 rpm 5,500 – 6,000 rpm (with eco throttle OFF)
Cooling system	Forced air
Ignition system	Full transistor
Oil capacity	0.25 L (0.26 US qt, 0.22 Imp qt)
Fuel tank capacity	2.1 L (0.55 US gal, 0.46 Imp gal)
Spark plug	CR4HSB (NGK) U14FSR-UB (DENSO)

Generator

Model	EU10i		
Type	G, GW, B, F, W	U	
AC output	Rated voltage (v)	230	240
	Rated frequency (Hz)	50	50
	Rated Ampere (A)	3.9	3.8
	Rated Output (kVA)	0.9	
	Max Output (kVA)	1.0	
DC rated output	Only for charging 12 V automotive batteries. 12 V, 8 A		

Noise

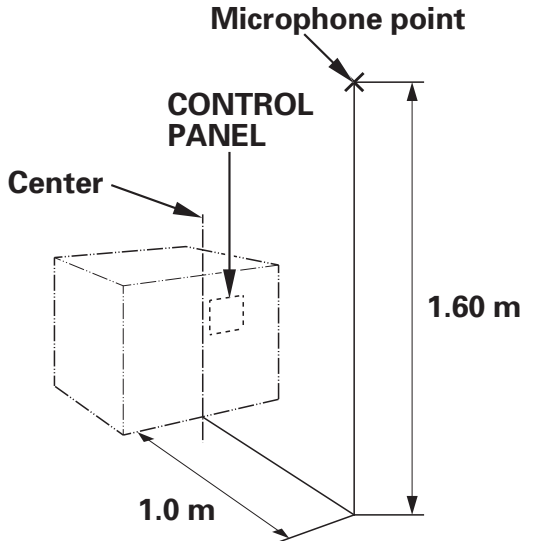Model	EU10i	
Type	G, GW, B, F, W	U
Sound pressure level (LpA) According to 98/37/EC 	72 dB	_____
Guaranteed sound power level (LWA) Tested by 2000/14/EC	87 dB	_____

“the figures quoted are emission levels and are not necessarily safe working levels. Whilst there is a correlation between the emission and exposure levels, this cannot be used reliably to determine whether or not further precautions are required. Factors that influence the actual level of exposure of work-force include the characteristics of the work room, the other sources of noise, etc. i.e. the number of machines and other adjacent processes, and the length of time for which an operator is exposed to the noise. Also the permissible exposure level can vary from country. This information, however, will enable the user of the machine to make a better evaluation of the hazard and risk”.

NOTE:

Specifications are subject to change without notice.

12. WIRING DIAGRAM

AC, NF	AC Noise Filter
ACOR	AC Output Receptacle
Ca	Capacitor
Cot	Composite Socket
CPB	Control Panel Block
DC, D	DC Diode
DC, NF	DC Noise Filter
DCOR	DC Output Receptacle
DC, W	DC Winding
EcoSw	Eco throttle switch
EgB	Engine Block
EgG	Engine Ground
ESw	Engine Switch
ExW	Exciter Winding
FrB	Frame Block
FrG	Frame Ground
GeB	Generator Block
GT	Ground Terminal
IgC	Ignition Coil
IU	Inverter Unit
MW	Main Winding
OAL	Oil Alert Indicator
OI	Overload Indicator
OLSw	Oil Level Switch
PC	Pulser Coil
PL	Output Indicator
SP	Spark Plug
SpU	Spark Unit
StpM	Stepping Motor
SW	Sub Winding

Bl	BLACK
Y	YELLOW
Bu	BLUE
G	GREEN
R	RED
W	WHITE
Br	BROWN
Lg	LIGHT GREEN
Gr	GRAY
Lb	LIGHT BLUE
O	ORANGE
P	PINK


ENGINE SWITCH

	G	Bl
OFF	○	○
ON		

ECOTHROTTLE SWITCH

	R/W	R/Y	ECO
ON	○	○	OFF
OFF			ON


G, GW, B, F, W type

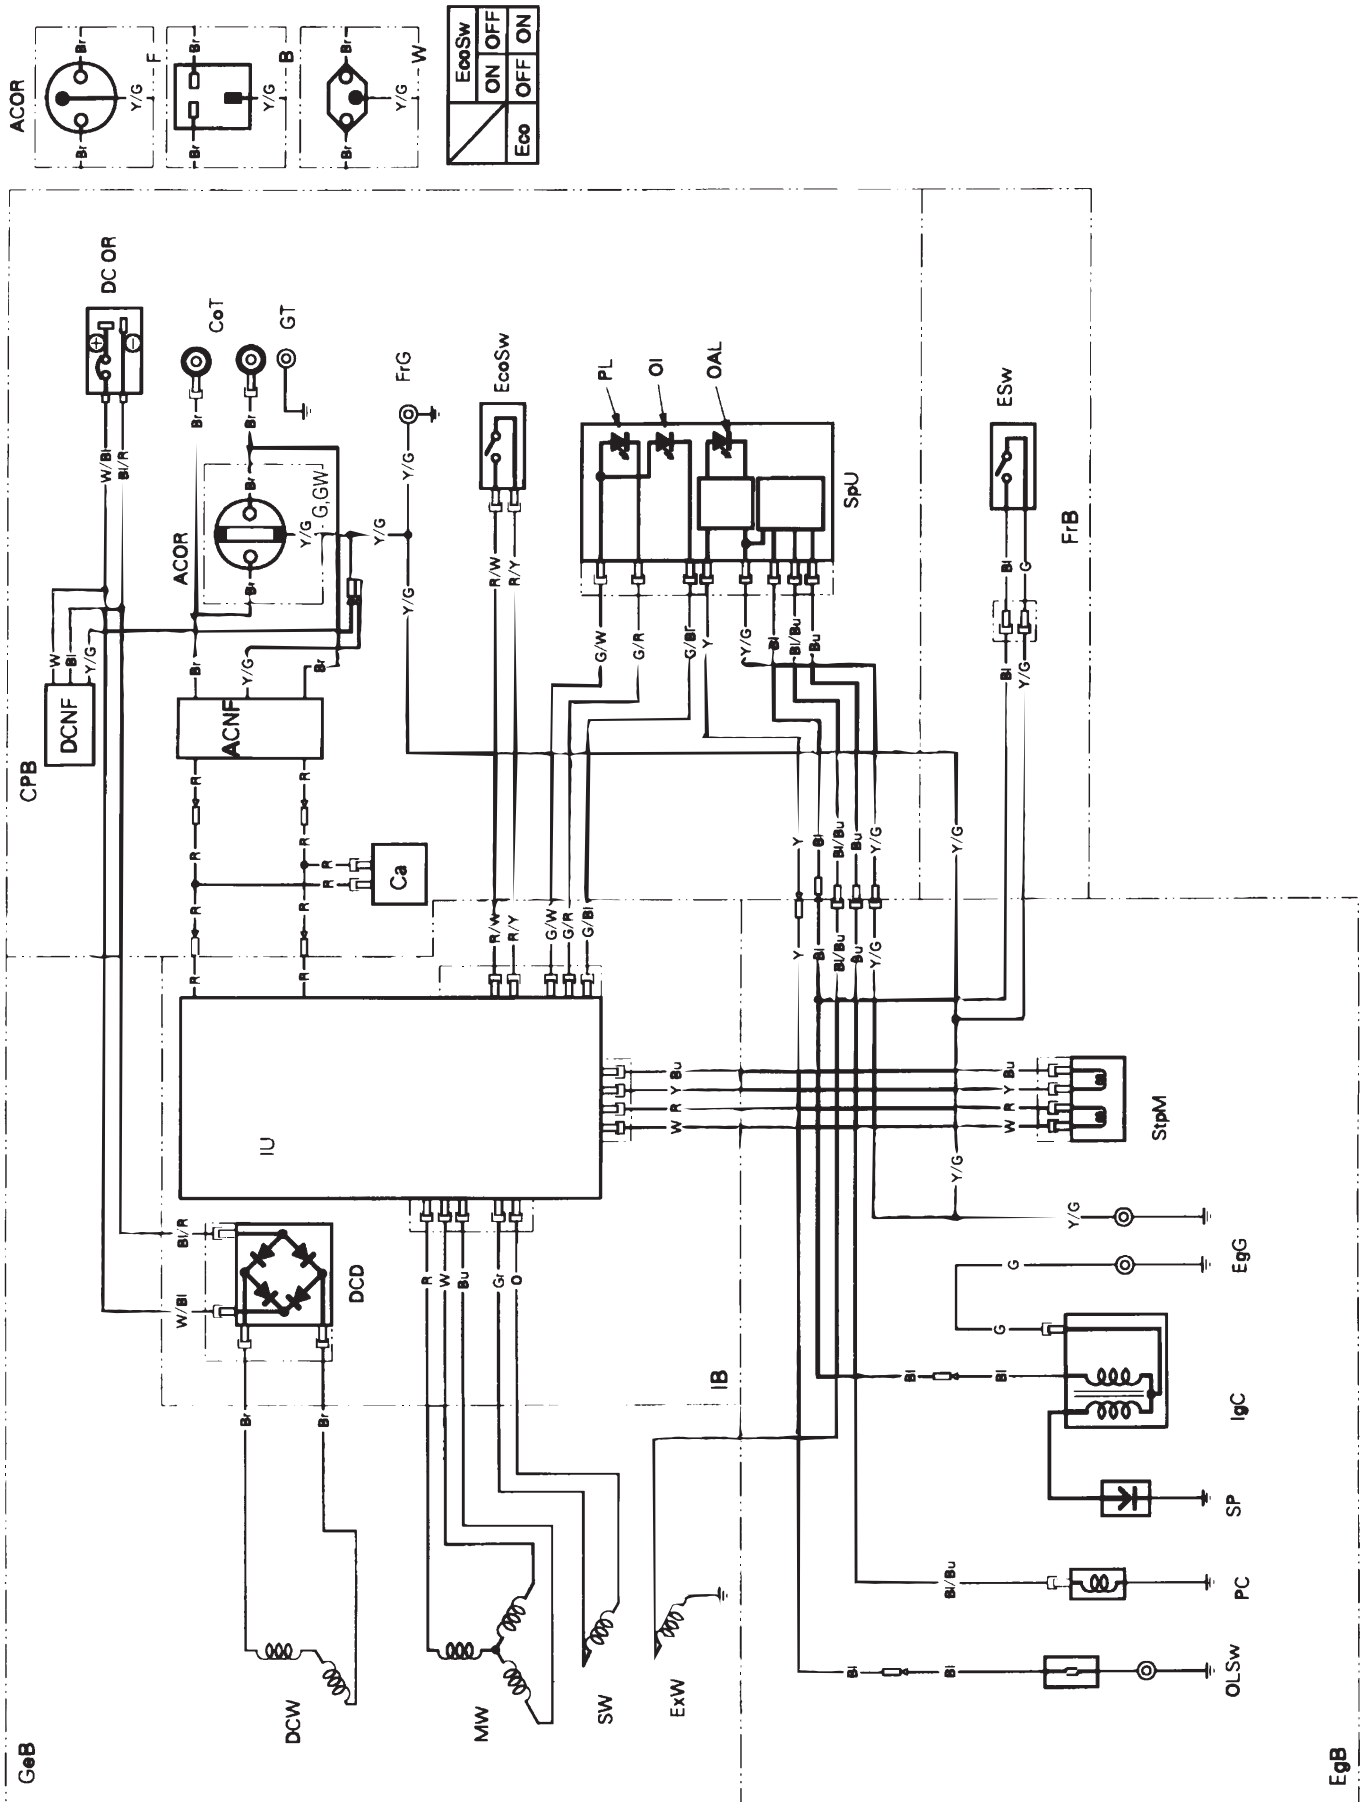



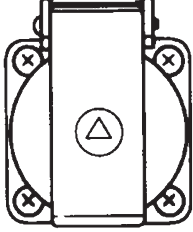
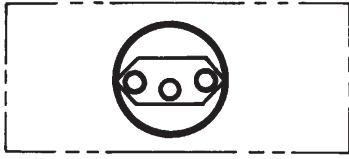
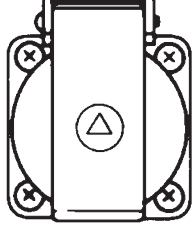

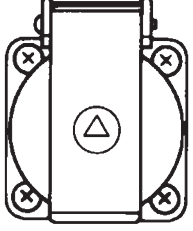

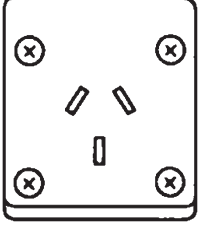
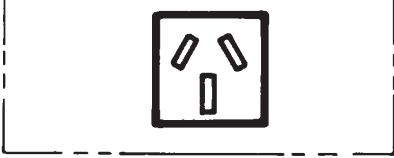
EcoSw	ON	OFF
	OFF	ON
Eco	OFF	ON

U type

	EcoSw	ON	OFF
	Eco	OFF	ON

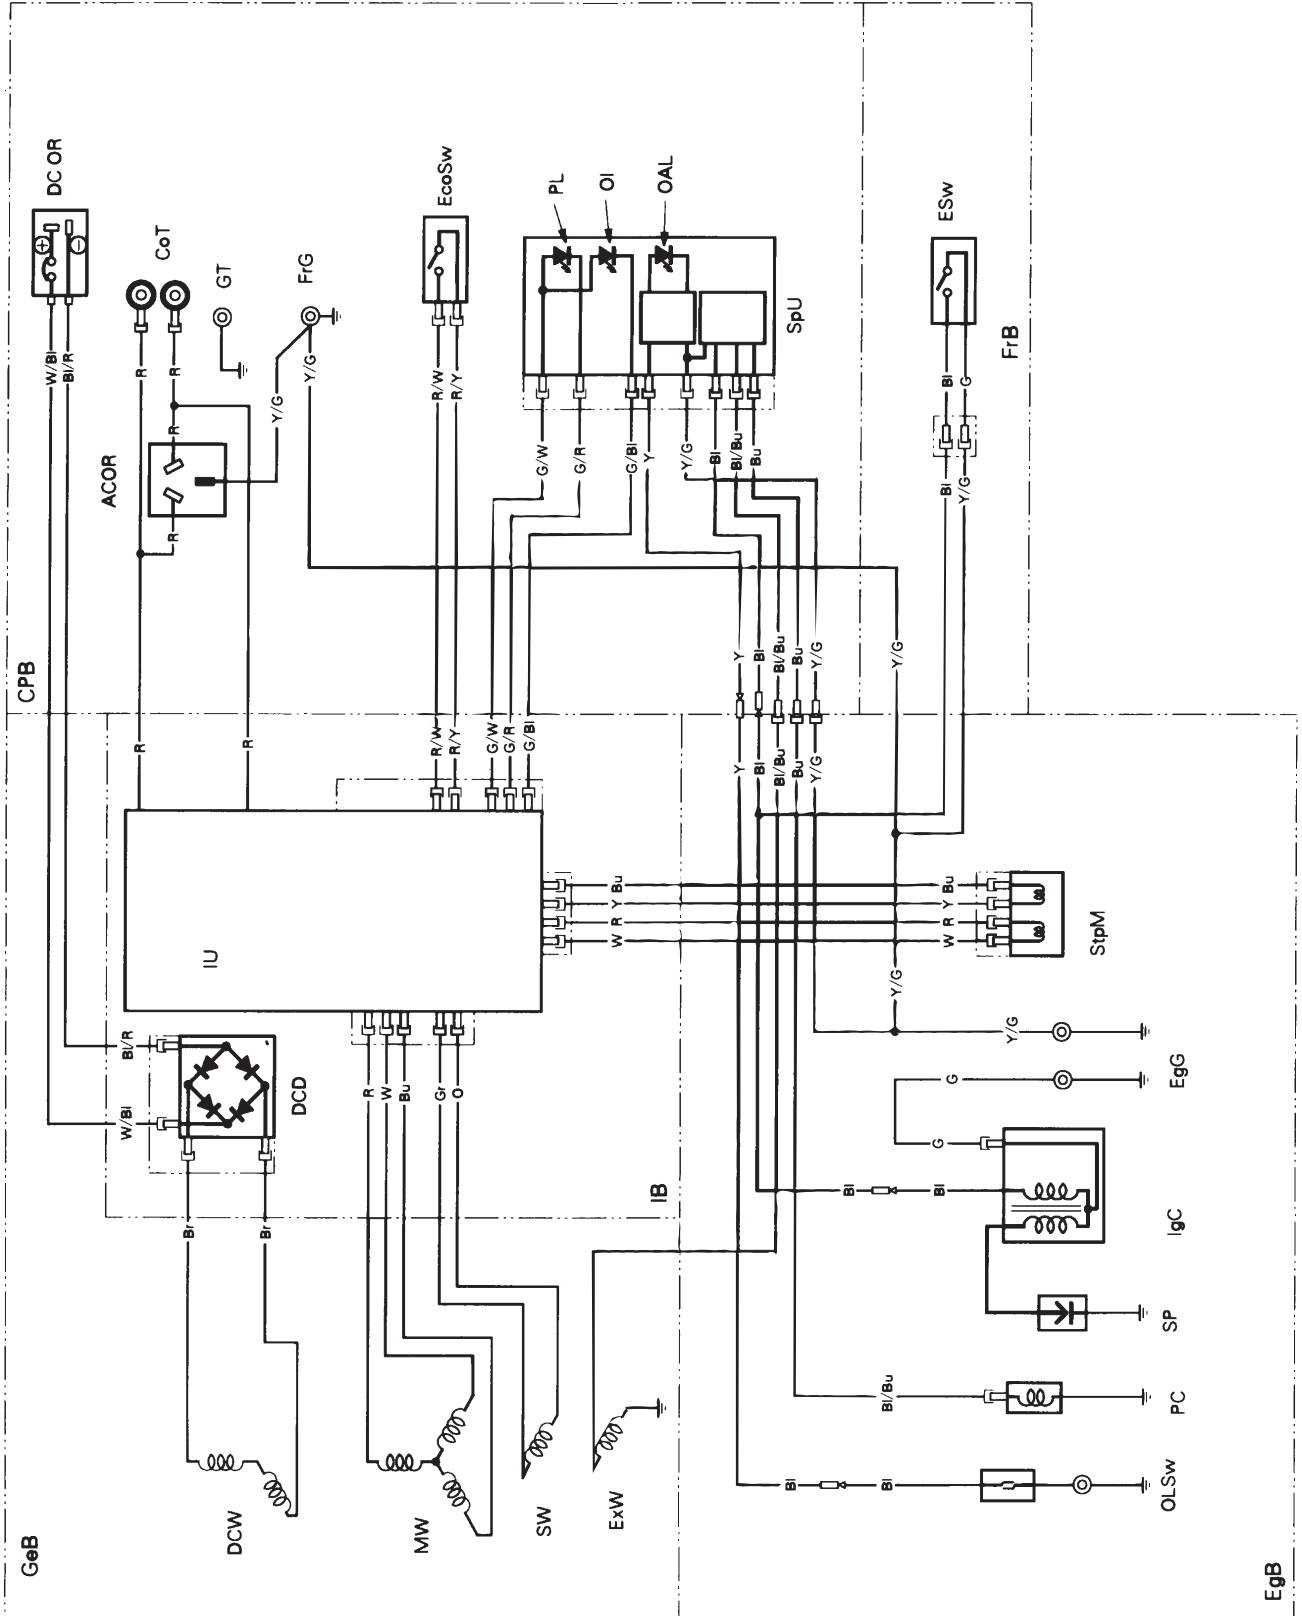

RECEPTACLE

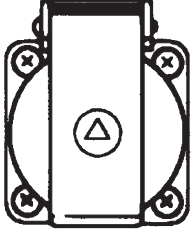Shape		Type
		B
		W
		F
		G, GW
		U

13. MAJOR Honda DISTRIBUTOR ADDRESSES

For further information, please contact Honda Customer Information Centre at the following address or telephone number:

AUSTRIA

Honda Motor Europe (North)
Hondastraße 1
2351 Wiener Neudorf
Tel. : + 43 (0)2236 690 0
Fax : + 43 (0)2236 690 480
<http://www.honda.at>

BELGIUM

Honda Motor Europe (North)
Doornveld 180-184
1731 Zellik
Tel. : + 32 2620 10 00
Fax : + 32 2620 10 01
<http://www.honda.be>
✉ BH_PE@HONDA-EU.COM

BULGARIA

Kirov Ltd.
49 Tsaritsa Yoana blvd
1324 Sofia
Tel. : + 359 2 93 30 892
Fax : + 359 2 93 30 814
<http://www.kirov.net>
✉ honda@kirov.net

CROATIA

Hongoldonia d.o.o.
Jelkovecka Cesta 5
10360 Sesvete – Zagreb
Tel. : + 385 1 2002053
Fax : + 385 1 2020754
<http://www.hongoldonia.hr>

CYPRUS

Alexander Dimitriou & Sons Ltd.
162, Yiannos Kranidiotis Avenue
2235 Latsia, Nicosia
Tel. : + 357 22 715 300
Fax : + 357 22 715 400

CZECH REPUBLIC

BG Technik cs, a.s.
U Zavodiste 251/8
15900 Prague 5 - Velka
Chuchle
Tel. : + 420 2 838 70 850
Fax : + 420 2 667 111 45
<http://www.honda-stroje.cz>

DENMARK

Tima Products A/S
Tårnfalkevej 16 - Postboks 511
2650 Hvidovre
Tel. : + 45 36 34 25 50
Fax : + 45 36 77 16 30
<http://www.tima.dk>

FINLAND

OY Brandt AB.
Tuupakantie 7B
01740 Vantaa
Tel. : + 358 20 775 7200
Fax : + 358 9 878 5276
<http://www.brandt.fi>

FRANCE

HONDA RELATIONS CLIENTS
TSA 80627
45146 St Jean de la Ruelle CEDEX
Tel. : 02 38 81 33 90
Fax : 02 38 81 33 91
<http://www.honda.fr>
✉ relationsclientele.produits-equipement@honda-eu.com

GERMANY

Honda Motor Europe (North) GmbH
Sprendlinger Landstraße 166
63069 Offenbach am Main
Tel. : + 49 69 8300 60
Fax : + 49 69 8300 65100
<http://www.honda.de>
✉ info@post.honda.de

GREECE

General Automotive Co S.A.
71 Leoforos Athinon
10173 Athens
Tel. : + 30 210 349 7809
Fax : + 30 210 346 7329
<http://www.honda.gr>
✉ info@saracakis.gr

HUNGARY

Mo.Tor.Pedo Co Ltd.
Kamaraerdei ut 3.
2040 Budaors
Tel. : + 36 23 444 971
Fax : + 36 23 444 972
<http://www.hondakisgepek.hu>
✉ info@hondakisgepek.hu

IRELAND

Two Wheels Ltd.

Crosslands Business Park
Ballymount Road
Dublin 12
Tel. : +353 01 460 2111
Fax : +353 01 456 6539
<http://www.hondaireland.ie>
✉ sales@hondaireland.ie

ITALY

Honda Italia Industriale S.p.A.

Via della Cecchignola, 5/7
00143 Roma
Tel. : +848 846 632
Fax : +39 065 4928 400
<http://www.hondaitalia.com>
✉ info.power@honda-eu.com

LATVIA

Bensons Auto

Kr.Valdemara Street 21, 646 office
Riga, 1010
Tel. : +371 7 808 333
Fax : +371 7 808 332
<http://www.honda-power.lv>

LITHUANIA

JP Motor Ltd

Kubiliaus str. 6
08234 Vilnius
Tel. : +370 5 276 5259
Fax : +370 5 276 5250
<http://www.hondapower.lt>

MALTA

The Associated Motors Company Ltd.

New Street in San Gwarkin Road
Mriehel Bypass, Mriehel QRM17
Tel. : +356 21 498 561
Fax : +356 21 480 150

NETHERLANDS

Honda Motor Europe (North)

Afd. Power Equipment-
Capronilaan 1
1119 NN Schiphol-Rijk
Tel. : +31 20 7070000
Fax : +31 20 7070001
<http://www.honda.nl>

NORWAY

Berema AS

P.O. Box 454
1401 Ski
Tel. : +47 64 86 05 00
Fax : +47 64 86 05 49
<http://www.berema.no>
✉ berema@berema.no

POLAND

Aries Power Equipment Sp. z o.o.

ul. Wroclawska 25A
01-493 Warszawa
Tel. : +48 (22) 861 43 01
Fax : +48 (22) 861 43 02
<http://www.hondapower.pl>
✉ info@hondapower.pl

PORTUGAL

Honda Portugal, S.A.

Abrunheira
2714-506 Sintra
Tel. : +351 21 915 53 33
Fax : +351 21 915 23 54
<http://www.honda.pt>
✉ honda.produtos@honda-eu.com

REPUBLIC OF BELARUS

Scanlink Ltd.

Kozlova Drive, 9
220037 Minsk
Tel. : +375 172 999090
Fax : +375 172 999900

ROMANIA

Hit Power Motor Srl

Calea Giulesti N° 6-8 Sector 6
060274 Bucuresti
Tel. : +40 21 637 04 58
Fax : +40 21 637 04 78
<http://www.honda.ro>
✉ hit_power@honda.ro

RUSSIA

Honda Motor Rus Llc

42/1-2, Bolshaya Yakimanka st.
117049, Moscow
Tel. : +74 95 745 20 80
Fax : +74 95 745 20 81
<http://www.honda.co.ru>

SERBIA & MONTENEGRO

Bazis Grupa d.o.o.

Grcica Milenka 39
11000 Belgrade
Tel. : +381 11 3820 300
Fax : +381 11 3820 301
<http://www.hondasrbija.co.yu>

SLOVAKIA REPUBLIC

Honda Slovakia, spol. s r.o.

Prievozska 6 - 821 09 Bratislava
Slovak Republic
Tel. : +421 2 32131112
Fax : +421 2 32131111
<http://www.honda.sk>

SLOVENIA

AS Domzale Moto Center D.O.O.

Blatnica 3A
1236 Trzin
Tel. : +386 1 562 22 42
Fax : +386 1 562 37 05
<http://www.as-domzale-motoc.si>

SPAIN & Las Palmas province

(Canary Islands)

Greens Power Products, S.L.

Avda. Ramon Ciurans, 2
08530 La Garriga - Barcelona
Tel. : +34 3 860 50 25
Fax : +34 3 871 81 80
<http://www.hondaencasa.com>

Tenerife province

(Canary Islands)

Automocion Canarias S.A.

Carretera General del Sur, KM. 8,8
38107 Santa Cruz de Tenerife
Tel. : +34 (922) 620 617
Fax : +34 (922) 618 042
<http://www.aucasa.com>
✉ ventas@aucasa.com
✉ taller@aucasa.com

SWEDEN

Honda Nordic AB

Box 50583 - Västkustvägen 17
120215 Malmö
Tel. : +46 (0)40 600 23 07
Fax : +46 (0)40 600 23 19
<http://www.honda.se>
✉ hpesinfo@honda-eu.com

SWITZERLAND

Honda Suisse S.A.

10, Route des Moulières
1214 Vemier - Genève
Tel. : +41 (0)22 939 09 09
Fax : +41 (0)22 939 09 97
<http://www.honda.ch>

TURKEY

Anadolu Motor Uretim Ve

Pazarlama AS (ANPA)

Esentepe mah. Anadolu
Cad. No: 5
Kartal 34870 Istanbul
Tel. : +90 216 389 59 60
Fax : +90 216 353 31 98
<http://www.anadolomotor.com.tr>
✉ antor@antor.com.tr

UKRAINE

Honda Ukraine LLC

101 Volodymyrska Str. - Build. 2
Kiev 01033
Tel. : +380 44 390 1414
Fax : +380 44 390 1410
<http://www.honda.ua>

UNITED KINGDOM

Honda (ULC) Power

Equipment

470 London Road
Slough - Berkshire, SL3 8QY
Tel. : +44 (0)845 200 8000
Fax : +44 (0)1 753 590 732
<http://www.honda.co.uk>
✉ customer.service@honda-eu.com

AUSTRALIA

**Honda Australia Motorcycle
and Power Equipment Pty. Ltd**

1954-1956 Hume Highway
Campbellfield Victoria 3061
Tel. : (03) 9270 1111
Fax : (03) 9270 1133

HONDA

The Power of Dreams

36ZT3611
00X36-ZT3-6110

© Honda Motor Co., Ltd. 2008
英 仏 独 西 〇 (HC) 3000.2008.12
Printed in Japan