
List of Contents**1 Introduction**

1.1	Scope and Purpose.....	101
1.2	Meaning of Warnings, Cautions, and Notes.....	101
1.3	Additional Documentation to be used.....	101
1.4	Safety Information and Regulations.....	101
1.4.1	General Safety Notes.....	101
1.5	Legal Provisions for Installation.....	102
1.6	Corrections and Improvements.....	103

2 General Description

2.1	Drive.....	201
2.2	Heat Exchanger.....	201
2.3	Control Unit.....	201
2.4	Flame Sensor.....	202
2.5	Glow Plug.....	202
2.6	Temperature Limiter.....	202
2.7	Dosing Pump.....	202

3 Functional Description (Fig. 301)

3.1	Controls.....	301
3.2	Switch On.....	301
3.3	Heating Operation.....	301
3.3.1	Operation with Room Thermostat (mechanical).....	301
3.3.2	Operation with Switch.....	301
3.3.3	Operation with Timer.....	301
3.4	Switch Off.....	301
3.5	Ventilation Operation.....	301

4 Technical Data

4.1	Electrical Components.....	401
-----	----------------------------	-----

5 Troubleshooting

5.1	General.....	501
5.2	General Fault Symptoms.....	501

6 Functional Checkouts

6.1	General.....	601
6.2	Adjustments.....	601
6.2.1	Adjustment of CO ₂ Contents.....	601
6.3	Components Testing.....	601
6.3.1	Temperature Limiter Resistance Check.....	601
6.3.2	Flame Sensor Resistance Check.....	601

7	Circuit Diagrams and Examples for Electrical Installation	
7.1	General.....	701
8	Servicing	
8.1	General.....	801
8.2	Work on the Air Heater	801
8.3	Work on the Vehicle	801
8.4	Air Heater Test Run.....	801
8.5	Servicing.....	801
8.6	Visual Inspections and Installation Regulations.....	801
8.6.1	Heating Air System.....	801
8.6.2	Fuel Supply	802
8.6.3	Dosing Pump.....	804
8.6.4	Fuel Filter	804
8.6.5	Combustion Air Supply.....	805
8.6.6	Exhaust Line.....	805
8.6.7	Combustion Air Intake and Exhaust Lines	805
8.7	Removal and Installation	806
8.7.1	Heater, Removal and Installation	806
8.7.2	Control Unit, Replacement	806
8.7.3	Glow Plug, Replacement.....	806
8.7.4	Flame Sensor, Replacement.....	806
8.7.5	Temperature Limiter, Replacement.....	806
8.8	First Operation.....	806
9	Repair	
9.1	General.....	901
9.1.1	Work on Components after Disassembly	901
9.2	Disassembly and Assembly.....	902
9.2.1	Control Unit, Replacement	902
9.2.2	Glow Plug, Replacement.....	903
9.2.3	Flame Sensor, Replacement.....	903
9.2.4	Temperature Limiter, Replacement.....	903
9.2.5	Drive, Replacement.....	903
9.2.6	Drive, Disassembly and Assembly	905
9.2.7	Heat Exchanger, Replacement	907
10	Packaging, Storage and Shipping	
10.1	General.....	1001

List of Figures

301	Functional Diagram.....	302
501	General Failure Symptoms	501
701	Operation with Timer and Room Thermostat.....	702
702	Operation with switch (Full Load - Part Load) and Ventilation	703
703	Operation with Room Thermostat (Full Load - Part Load) and Ventilation	704
704	Example for Electrical Installation "Operation with Switch and Ventilation"	705
705	Example for Electrical Installation "Standard Wiring Harness"	706
801	Hot Air Temperatures with Drop of Pressure	802
802	Fuel Supply.....	
803	Webasto Fuel Tank Tap	803
804	Fuel Tapping from Plastic Tank (tapping via fuel drain plug).....	803
805	Fuel Tapping from Plastic Tank (tapping via fitting plate).....	803
806	Pipe/Hose Connection	804
807	Dosing pump, Installation and attachment.....	804
808	Fuel Filter.....	
809	Air Intake Muffler.....	805
810	Exhaust Muffler, Direction of Flow	805
811	Exhaust Pipe Outlet, Installation Position	805
901	Replacement of Control Unit, Glow Plug, Flame Sensor and Temperature Limiter.....	902
902	Disassembly of Drive	904
903	Replacement of Heat Exchanger.....	907

1 Introduction

1.1 Scope and Purpose

This repair shop manual is intended to support familiarised personnel in the repair of air heaters HL90 of the Diesel type.

1.2 Meaning of Warnings, Cautions, and Notes

WARNINGS, CAUTIONS, and NOTES in this manual have the following meaning:

WARNING

This heading is used to highlight that non-compliance with instructions or procedures may cause injuries or lethal accidents to personnel.

CAUTION

This heading is used to highlight that non-compliance with instructions or procedures may cause damage to equipment.

NOTE

This heading is used to highlight and draw specific attention to information.

1.3 Additional Documentation to be used

This workshop manual contains all information and procedures necessary for the repair of air heaters HL90. The use of additional documentation is normally not necessary. Operating instructions/ installation instructions and the vehicle specific installation proposal may be used as complementary information as necessary.

1.4 Safety Information and Regulations

The general safety regulations for the prevention of accidents and the relevant operating safety instructions have to be observed at all times. "General Safety Regulations" beyond the scope of these regulations are detailed in the following.

The specific safety regulations applicable to this manual are highlighted in the individual chapters by Warnings, Cautions, and Notes.

1.4.1 General Safety Notes

Within the scope of the StVZO (Road Licensing Regulations of the Federal Republic of Germany) "Design General Approvals" laid down by the Federal Office for Motor Traffic exist for the Air Heaters HL90 with the following official marks of conformity:

~ S 269 (Diesel)

Installation of the heater is to be performed in accordance with the installation instructions and must be checked in case of

- a) the vehicle type inspection in accordance with § 20 StVZO
- b) the individual inspection in accordance with § 21 StVZO or
- c) The examination in accordance with § 19 StVZO performed by an officially authorized expert or examiner for road traffic, a vehicle inspector or a public servant as per section 7.4a of Annex VIII to the StVZO.

In the event of c) the installation must be certified on the acceptance certificate included in the copy of the General Operating License giving details about

- manufacturer
- type of vehicle and
- vehicle identification number.

This validates the Design General Approval.

The acceptance certificate must be kept with the vehicle.

The heaters are cleared for heating the passenger and driver cabin in the fresh air mode of operation and for load top compartments in the fresh air or circulation air mode of operation. They are however not cleared for heating loading compartments for dangerous goods. The installation in enclosed areas accommodating persons is not permitted.

If an air heater is installed in a loading compartment for circulation air mode of operation the inside of the entrance door shall be labeled as follows: "With heater on no personnel allowed in loading area with door closed."

When using the heater in special vehicles or vehicles not subject to the StVZO (e.g. ships), partly local regulations as well as the heater manufacturer's specific installation instructions must be complied with.

The heater must not be installed in the passenger or driver compartments of vehicles. Should the heater nevertheless be installed in such a compartment, the installation box must be sealed tight against the vehicle interior. There must be sufficient ventilation of the installation box from the exterior in order not to exceed a maximum temperature of 50 °C in the installation box. Excessive temperatures may cause malfunctions.

At filling stations and fuel depots the heater must be switched off as there is a potential danger of explosion.

Where flammable fumes or dust may build up (e.g. in the vicinity of fuel, coal, wood, cereal depots, or similar installations) the heater must be switched off to prevent explosions.

Due to the danger of poisoning and suffocation the heater must not be operated, not even with timer or telestart, in enclosed areas such as garages or workshops not equipped with an exhaust venting facility. The heat exchanger of the air heater remains serviceable for a maximum of 10 years and must then be replaced with an original spare part by the manufacturer or by one of its authorized workshops.

The heater must then be provided with a label detailing the sales date of the heat exchanger and the words "original spare part".

Should exhaust pipes be routed through rooms accommodating persons, the pipes shall also be renewed after 10 years.

In the vicinity of the air heater a temperature of 85 °C (storage temperature) must not be exceeded under any circumstances (e.g. during body paint work). Excessive temperatures may cause permanent damage to the electronics.

The heaters HL90 are marked with the word "Diesel" on their identification plate. The heaters may only be operated with the specified type of Diesel (or with fuel oil EL) and the appropriate type of electrical installation.

Installations not legally authorized will void the air heater's "Official Marks of Conformity" and thus the vehicle's permit of operation. The same applies for repairs performed by unskilled personnel and repairs without using original spare parts.

1.5 Legal Provisions for Installation

For testing the heater in accordance with §§ 19, 20, or 21 of the StVZO the following regulations are to be observed in particular (§22 a StVZO):

Testing is performed upon presentation of the operating and installation instructions of the manufacturer.

The year of the initial operation must be durably marked on the heater identification plate by the installing person.

Heating Air System

Heating air intake openings must be arranged so that under normal operating conditions exhaust fumes of the vehicle engine or air heater are not likely to enter.

Combustion Air Line

Extracting combustion air from the vehicle interior is prohibited.

The required air for combustion must be taken in from outside. Within rooms accommodating persons, the combustion air lines must not have more than four disconnects and a splash-water protected exterior wall feedthrough. The disconnects must be sealed in a way not to exceed a leak rate of 200 l/h at an overpressure of 0.5 mbar. The line including feedthrough, disconnects, material and specific type must be described in the installation instructions. The line must require tools for installation and removal and must be protected against damage, and must be shockproof.

Exhaust Line

Heaters must be designed to discharge the exhaust to the exterior.

Exhaust pipes must be routed so that exhaust fumes are unlikely to penetrate into the vehicle's interior.

The function of any part of the vehicle essential for operation must not be impaired. Condensate or water penetrated must not be able to accumulate in the exhaust line.

Drain holes are permissible; these must drain the fluid to the exterior via lines sealed against the vehicle interior.

The exhaust line outlet is to be positioned to the side, or in case of exhaust venting below the vehicle floor, to the nearest possible location of the vehicle's or cockpit side or rear end.

In compartments accommodating persons, exhaust lines must not have more than one disconnect and must have a splash-water protected feedthrough in the exterior wall/floor. For water, that has penetrated into the exhaust line, the connection of a drain line with a metal-sealing joint is permissible. The drain pipe must be routed sealed through the exterior wall or the vehicle floor.

The heat exchanger, the exhaust line connected, as well as the possible drain pipe must be sealed so that with an overpressure double the overpressure of the exhaust having the maximum permissible exhaust line length - at least however at an overpressure of 0.5 bar - a total leak rate of 30 l/h is not exceeded.

The line including feedthrough, disconnects, material and specific type must be described in the installation instructions.

The line must require tools for installation and removal and must be protected against damage, and must be shockproof.

Metal lines may be used. These may not heat to more than 110 °C should the possibility of body contact exist within the room interior. Protective devices against body contact may be fitted. Should exhaust pipes be routed through rooms accommodating persons, these pipes shall be renewed after 10 years using genuine spare parts.

Combustion Air Inlet and Exhaust Outlet

In installations these ports for combustion air entry and exhaust fume exit must be of such type, that a ball of 16 mm in diameter cannot be inserted.

The heater mode of operation - at least "on" or "off" - must be clearly visible.

Electrical lines, switch gear, and control gear of the heater must be located in the vehicle so that their proper function cannot be impaired under normal operating conditions.

For the routing of fuel lines and the installation of additional fuel tanks §§ 45 and 46 of the StVZO are to be adhered to.

The most important regulations are: fuel lines are to be designed in such a way that they remain unaffected by torsional stresses in the vehicle, engine movement, and the like. They must be protected against mechanical damage.

Fuel-carrying parts are to be protected against excessive heat and are to be arranged so that any dripping or evaporating fuel can neither accumulate nor be ignited by hot components or electrical equipment.

In busses fuel lines and fuel tanks may be located neither in the passenger area nor in the driver's compartment. In these type of vehicles the fuel tanks must be located such that they do not pose a direct hazard to the exits in the event of a fire. Fuel supply must not be by means of gravity or pressurization of the fuel tank.

Installation Instructions for Webasto Fuel Tanks for Fuel Supply of Heaters in Vehicles

In busses the installation is not permitted in the passengers or driver's compartment.

The fuel filler neck must not be located in the passengers or driver's compartment of any type of vehicle. Fuel reservoirs for carburetor fuel must not be located immediately behind the vehicle front fairing.

They must be away from the engine to prevent fuel fires in case of accidents. The same applies to towing vehicles with open cockpit.

1.6 Corrections and Improvements

Deficiencies, improvements, or proposals for correction of this workshop manual are to be mailed to:

Webasto Thermosysteme GmbH
Abt. Technische Dokumentation
D-82131 Stockdorf
Telephone: 0 89 / 8 57 94 - 5 42
Telefax: 0 89 / 8 57 94 - 757

2 General Description

The air heater HL90 is used to

- heat the driver compartment and the vehicle interior/ passenger compartment
- defrost the windscreen
- heat vehicle loading compartments

The heaters are cleared for heating the passenger compartment and the driver compartment in the fresh air mode of operation of and vehicle loading compartments in the fresh air or circulation air mode of operation. The heating of loading compartments for dangerous goods is not permitted.

The heater operates independent from the vehicle engine and is connected to the vehicle's electrical system and fuel system.

The heaters may be operated in vehicles with water or air-cooled engines.

The heater designed to the rotation atomiser principle operates intermittently controlled by the temperature sensor.

The heater HL90 basically consist of the:

- drive
- heat exchanger

For control and monitoring the heater includes a:

- control unit
- flame sensor
- glow plug
- temperature limiter

Fuel supply is provided externally by a fuel dosing pump.

2.1 Drive


The drive provides for fuel supply with atomization and combustion air supply to the combustion chamber in the heat exchanger. The drive basically consists of the air intake housing with fuel and combustion air connection, the bypass fan and the atomiser.

The motor is flanged to the air intake housing driving the bypass fan and the atomiser via a clutch. The motor also drives a rotor to suck in fresh air or circulation air across an orifice plate.

Resistors for the glow plug and the motor are also mounted to the air intake housing.


2.2 Heat Exchanger

The heat exchanger transfers the heat generated by combustion to the heating air circulated by the fan.

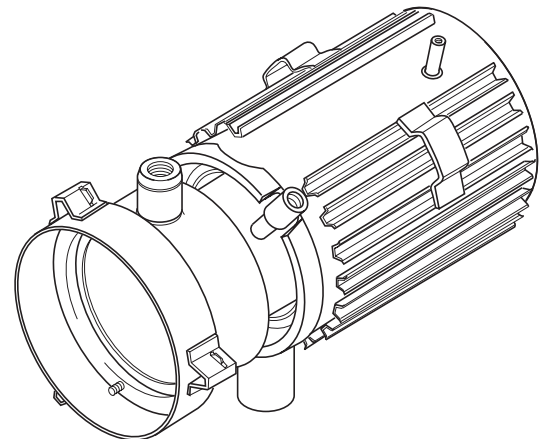


2.3 Control Unit

The control unit ensures controlled operation and monitoring of combustion.

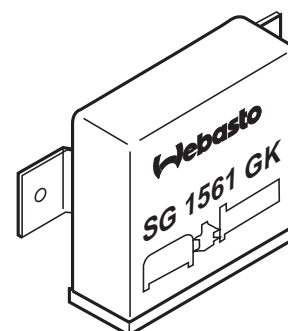


2.4 Flame Sensor

The flame sensor is a photo transistor changing its resistance depending on the flame intensity. The signals are supplied to the control unit for processing. The flame sensor continuously monitors the flame condition during heater operation.

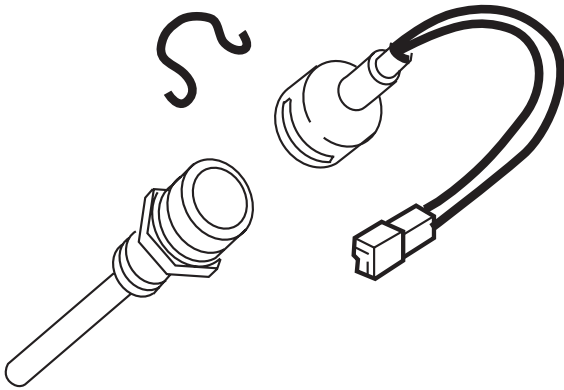


2.6 Temperature Limiter

The temperature limiter protects the heater against undue high operating temperatures. The temperature limiter responds at a temperature in excess of 175 °C to disconnect the electrical circuit and switch off the heater. The temperature limiter can be reset.

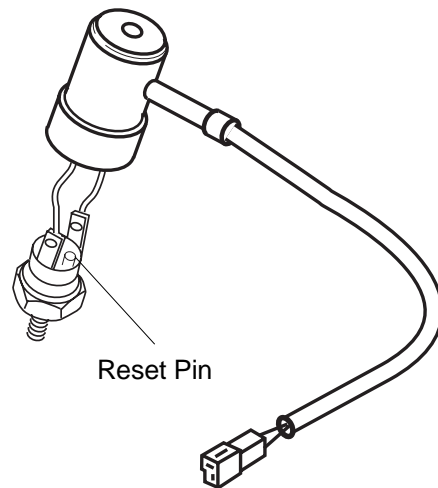


2.5 Glow Plug

The glow plug ignites the fuel/air mixture during heater start. The glow plug voltage is 4.2 Volts.



2.7 Dosing Pump

The dosing pump is a combined delivery, dosing and shut-off system for the fuel supply of the heater out of the vehicle fuel tank.

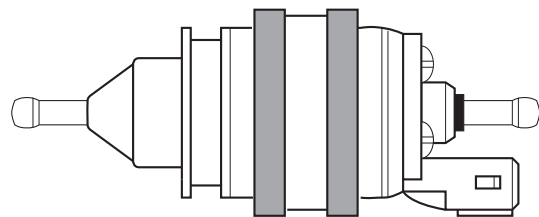

Dosing Pump DP 2

3 Functional Description (Fig. 301)

3.1 Controls

The heaters may be equipped with the following controls:

- room thermostat (mechanical)
- switch
- timer

Activation and deactivation is by means of the switch, timer or room thermostat with on/off switch.

An operating indicator light (in timer, switch or room thermostat) indicates the heater on condition.

3.2 Switch On

Upon switch on the operating indicator light goes on and the glow plug is powered. After approximately 35 seconds the fuel dosing pump is put into operation. After another 5 seconds the motor of the heating and combustion air fan is activated. Combustion commences. After flame-up the glow plug is switched off.

If no proper combustion is achieved within 100 seconds, an automatic restart is performed. If the no combustion condition persists, an error lockout will occur within another 80 seconds with a subsequent run-down of 150 seconds.

The operating indicator light remains on in case of an error lockout condition.

3.3 Heating Operation

During operation combustion gasses flow through the heat exchanger to dissipate heat onto the heat exchanger casing from where it is picked up by the heating air flow to the vehicle interior maintained by the heating air fan.

3.3.1 Operation with Room Thermostat (mechanical)

The room thermostat (mechanical) allows selection of full load/part load or part load/off.

- Full load/part load operation
After reaching the temperature set with the room thermostat (upper switching point of the room thermostat) part load operation will be initiated. When temperature drops below the lower switching point, the heater resumes full load operation. In part load operation motor speed and dosing pump fuel delivery is reduced.

- Part load/off operation
After reaching the temperature set with the room thermostat (upper switching point) the heater is switched off. The operating indicator light remains on to indicate a run-down with full speed operation of the heating and combustion air fan motor. When temperature reaches the lower switching threshold of the room thermostat, a new start procedure commences. The heater operates in full load. After a short time of full load combustion operation there will be transition to part load operation.

3.3.2 Operation with Switch

During heating operation with a switch manual selection between full load and part load is possible.

3.3.3 Operation with Timer

The timer is used for switch on with a switch (instant heat) or for time preset operation. A control in the operating modes full load/part load may be provided by integration of the room thermostat (mechanical).

3.4 Switch Off

Switching the heater off extinguishes the operating indicator light of the room thermostat, the switch or the timer. Fuel supply is cut off stopping combustion.

The motor of the heating and combustion air fan continues operation to cool the heater down (run-down).

Run-down time: 150 to 190 seconds


Run-down operation is controlled automatically.

NOTE

The motor of the heating and combustion air fan always operates in full load during run-down. Re-activation of the heater during run-down is permitted. Run-down is then completed with a subsequent new start.

3.5 Ventilation Operation

When equipped with a room thermostat ventilation operation is only possible with a separate switch (order no. 109 995 (24 V), 109 999 (12 V)).

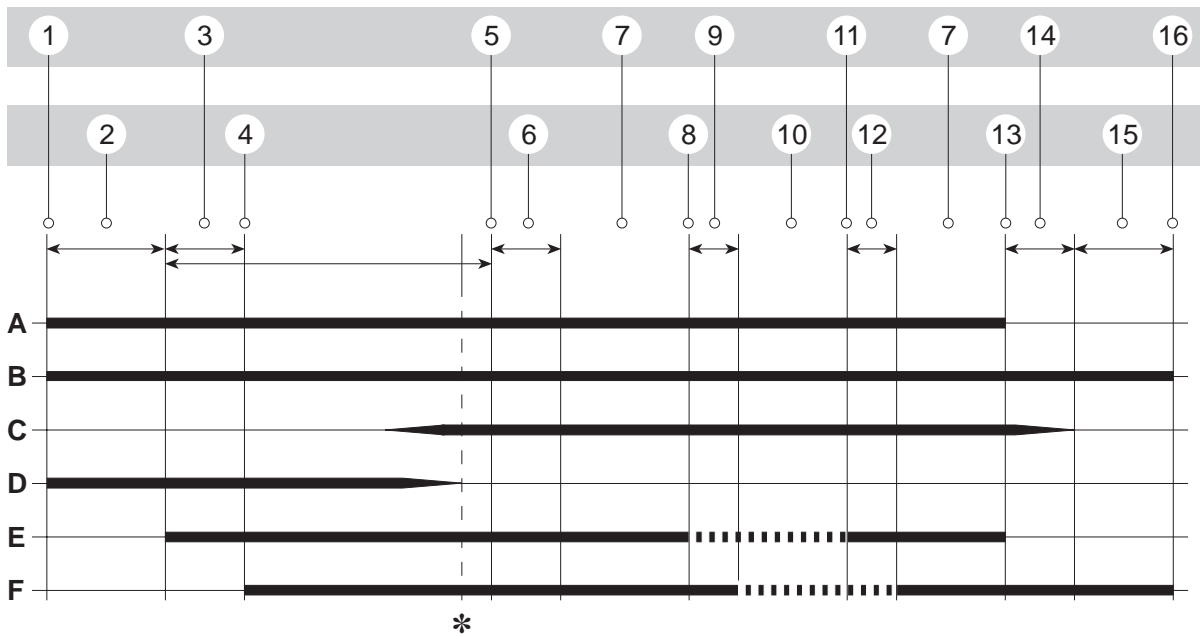

- ① Switch on
- ② Preheating 35 s
- ③ Fuel priming
- ④ Full load initiation
- ⑤ Safety period max. 100 s
- ⑥ Minimum full load time 60 s
- ⑦ Combustion operation - full load
- ⑧ Room temperature (at rated value)
- ⑨ Transition from full load to part load 8 s
- ⑩ Combustion operation - part load
- ⑪ Room temperature (below rated value)
- ⑫ Transition from part load to full load 10 s
- ⑬ Switch off
- ⑭ Optical run-down max. 40 s
- ⑮ Electronic run-down 150 s
- ⑯ Off

- A Operating indicator light on
- B Switch or room thermostat (full load/part load) or timer
- C Flame sensor
- D Glow plug
- E Dosing pump (full load/part load)
- F Combustion air fan (full load/part load)

* In case of no flame condition automatic repeat start (25 s preheating, 80 s safety period)

Fig. 301 Functional Diagram

4 Technical Data

Where no threshold values are specified technical data are understood to include standard tolerances for heater units of $\pm 10\%$ at ambient temperature of $+20\text{ °C}$ and at nominal voltage.

4.1 Electrical Components

Control unit, motor, dosing pump, glow plug resistor, part load resistor, timer and switch with indicator light are 12 V or 24 V components.

Temperature limiter, flame sensor and glow plug are identical in 12 V and 24 V heaters.

Glow plug voltage is 4.2 V $+0.1/-0.15$ at nominal voltage at control unit input (A1) and is fixed.

Air Heater			HL 90
Heater type			Air Heater with rotation atomiser
Mark of conformity			~ S 269
Heat flow	full load operation	kW	9
	part load operation	kW	6.5
Type of fuel			Diesel/ Fuel oil (EL)
Fuel consumption	full load operation	kg/h (l/h)	1.00 (1.20)
	part load operation	kg/h (l/h)	0.71 (0.86)
Nominal Voltage		V-	12 or 24
Operation Voltage		V-	10 ... 14.5 or 20.5 ... 29
Rated power consumption	full load operation	W	110
	part load operation	W	80
Permitted ambient temperature (operation)			
- Heater		°C	-40 ... +50
- Control unit		°C	-40 ... +85
- Dosing pump		°C	-40 ... +40
Permitted ambient temperature (storage)			
- Heater		°C	-40 ... +85
- Control unit		°C	-40 ... +85
- Dosing pump		°C	-40 ... +85
Setting range of indoor temperature		°C	+30 max.
Volume flow of heating air			
- against 0.5 mbar		full load operation	m ³ /h
- against 0.25 mbar		part load operation	m ³ /h
CO ₂ in exhaust			
- permitted functional range		full load operation	Vol.-%
CO in exhaust			
- at no wind		Vol.-%	0.1 max.
- at 100 km/h		Vol.-%	0.2 max.
HC in exhaust at nominal load and no wind		Vol.-%	0.01 (100 ppm) max.
NO _x in exhaust at nominal load and no wind		Vol.-%	0.02 (200 ppm) max.
Soot number			
- to Bacharach			<6.0
- to Bosch			<0.5
Dimensions (length x width x height; tolerance ± 3 mm)			
- Heater		mm	650 x 235 x 260
- Control unit 1561		mm	97 x 102 x 36
- Dosing pump		mm	113 x 40 x 35
Weight			
- Heater		kg	13
- Control unit		kg	0.30
- Dosing pump		kg	0.35

5 Troubleshooting

5.1 General

This section describes troubleshooting procedures for the heater HL90.

CAUTION

Troubleshooting requires profound knowledge about components and their theory of operation and may only be performed by trained personnel.

In case of doubt functional interrelations may be derived from Sections 2 and 3.

CAUTION

Troubleshooting is normally limited to the isolation of defective components. The following possible causes for trouble have not been taken into consideration and must always be excluded as a possible cause for malfunction:

- check fuel, combustion air and exhaust lines for obstructions
- corrosion on connectors
- loose contacts on connectors
- wrong crimping on connectors
- corrosion on wiring and fuses
- corrosion on battery terminals

For individual component checks the electrical connections on the control unit have to be disconnected.

After any fault correction a functional checkout in the vehicle has to be performed.

5.2 General Fault Symptoms

The following table (Fig. 501) lists possible fault symptoms of general nature.

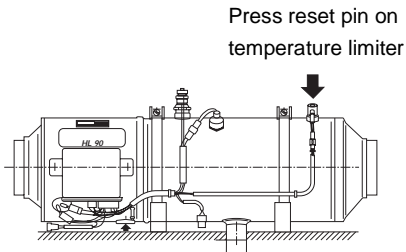
Symptom	Probable Cause	Remedy
Heater switches off automatically	No combustion after start and restart	Switch off heater momentarily and switch on <u>once</u> again
	Flame-out during operation	Switch off heater momentarily and switch on <u>once</u> again
	Heater overheats Dosing pump does not deliver fuel	Check combustion air ducting for obstructions, allow heater to cool down, reset temperature limiter, <div style="text-align: center;">  </div>
	Vehicle's electrical system voltage too low	Check dosing pump Charge battery
Heater is immediately in run-down	Flame sensor defective	Replace flame sensor
Heater develops black smoke	Combustion air and/or exhaust ducting clogged	Check combustion air and exhaust ducting for obstructions

Fig. 501 General Failure Symptoms

6 Functional Checkouts

6.1 General

This section describes the tests and adjustments on the heater in installed and removed condition to prove its serviceability.

WARNING

The heater must not be operated in closed areas like garages or workshops not provided with exhaust ventilation facilities.

6.2 Adjustments

6.2.1 Adjustment of CO₂ Contents

The HL90 heater does not require a CO₂ adjustment.

6.3 Components Testing

CAUTION

For individual components checks the electrical connections on the control unit must be disconnected.

6.3.1 Temperature Limiter Resistance Check

With the reset pin pressed check temperature limiter for electrical continuity.

6.3.2 Flame Sensor Resistance Check

The check is to be performed with an ohmmeter.

NOTE

The resistance is to be checked alternately on the connector (reversed polarity).

No light for flame sensor (photo transistor)

- resistance 5 k Ω


7 Circuit Diagrams and Examples for Electrical Installation

7.1 General

Circuit diagrams (Fig. 701 to 703) show possible heater circuits for HL90 with


- timer and room thermostat
- switch (full load - part load) and ventilation
- room thermostat (full load - part load) and ventilation

Examples (Fig. 704 and 705) show the proper electrical installation for operation with switch and ventilation (Fig. 704) as well as the use of the standard wiring harness (Fig. 705).

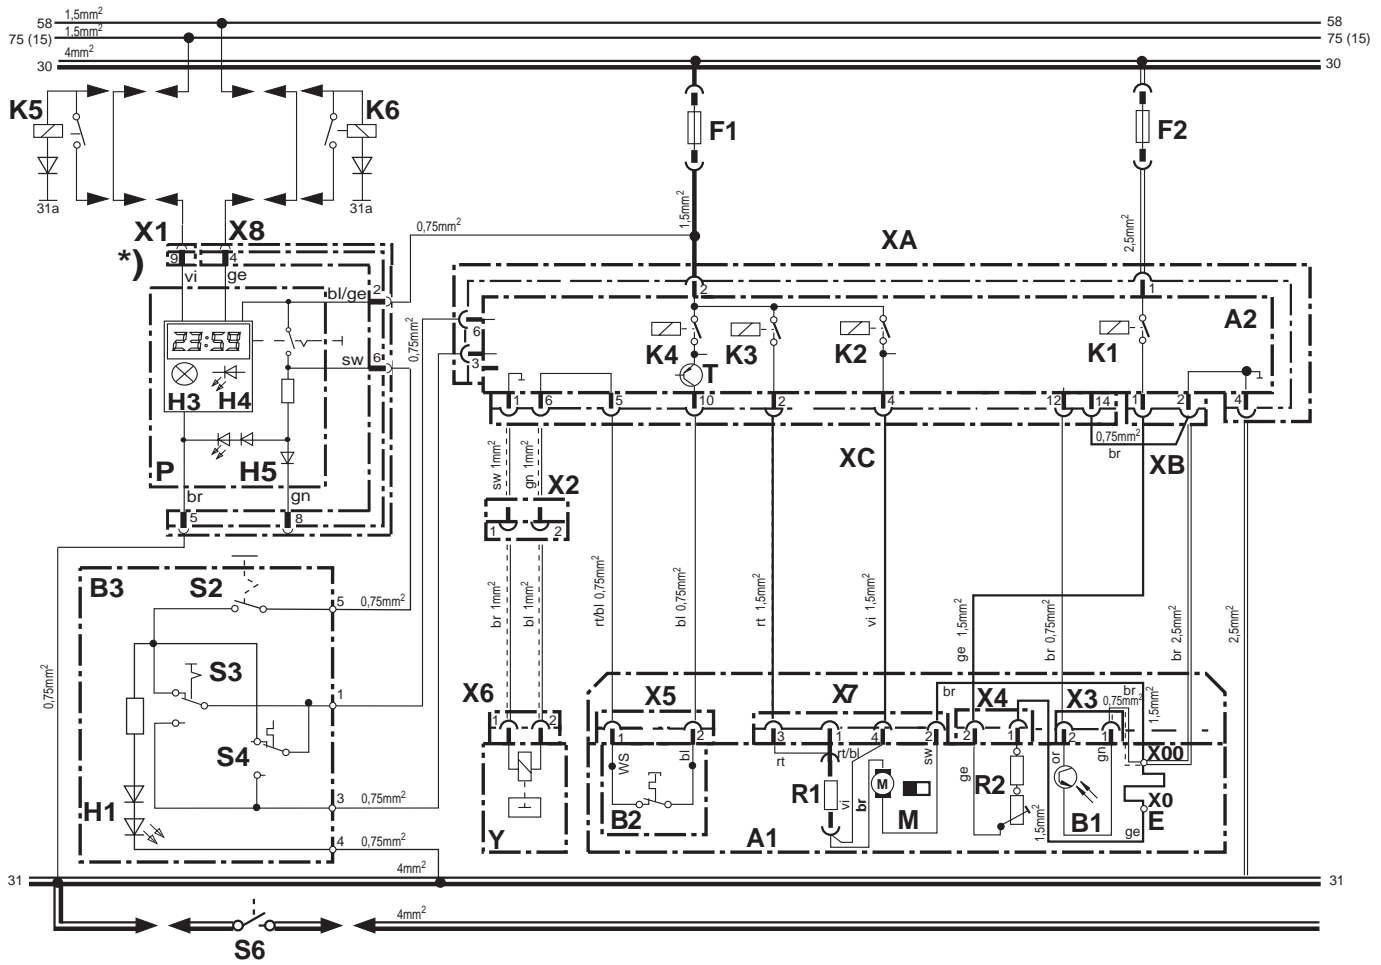

- *) timer P
with plus at connection 9: continuous operation with instant heating
no plus at connection 9: heating period 1 hour

* not applicable for 12V

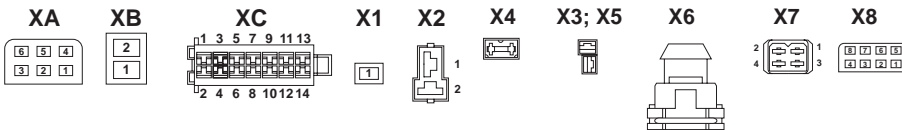

Wire Gauges		
	< 7.5 m	7.5 - 15 m
	0.75 mm ²	1.5 mm ²
	1.0 mm ²	1.5 mm ²
	1.5 mm ²	2.5 mm ²
	2.5 mm ²	4.0 mm ²
	4.0 mm ²	6.0 mm ²


Wire Colours	
bl	blue
br	brown
ge	yellow
gn	green
gr	grey
or	orange
rt	red
sw	black
vi	violet
ws	white

Item	Nomenclature	Remark
Y	Dosing pump	24 V
Y	Dosing pump	12 V
X8	Connection	8-pole
X7	Connection	4-pole
X6	Connection	2-pole
X5	Connection	2-pole
X4	Connection	2-pole
X3	Connection	2-pole
X2	Connection	2-pole
X1	Connection	1-pole
X0	Clamping connection	Glow plug +
X00	Clamping connection	Glow plug -
XC	Connect. for tab receptacle	14-pole
XB	Connect. for tab receptacle	2-pole
XA	Connect. for tab receptacle	6-pole
T	Transistor	in control unit
S6	Battery switch	in vehicle
S4	Thermostat, heating full load/ part load	
S3	Switch, heating full load/ part load	

Item	Nomenclature	Remark
S2	Switch, on/off	
R2	Glow plug resistor	24 V
R2	Glow plug resistor	12 V
R1	Resistor	24 V
R1	Resistor	12 V
P	Timer 1522	24 V
M	Motor	24 V
M	Motor	12 V
K5/K6	Relay (as required)	24 V
K5/K6	Relay (as required)	12 V
K4	Relay	in control unit
K3	Relay	in control unit
K2	Relay	in control unit
K1	Relay	in control unit
H5	Operating indicator light, heating	
H4	Standby indicator light, heating	
H3	Symbol illumination for digital display	
H1	Operating indicator light, heating	

Item	Nomenclature	Remark
F3	Flat fuse	24 V 7.5 A
F3	Flat fuse	12 V 10 A
F2	Flat fuse	24 V 20 A
F2	Flat fuse	12 V 20 A
F1	Flat fuse	24 V 20 A
F1	Flat fuse	12 V 20 A
E	Glow plug	4 V
B3	Room thermostat	12/24 V
B2	Temperature limiter	12/24 V
B1	Flame sensor	12/24 V
A2	Control unit	24 V
A2	Control unit	12 V
A1	Heater HL 90	24 V
A1	Heater HL 90	12 V


Fig. 701 Operation with Timer and Room Thermostat

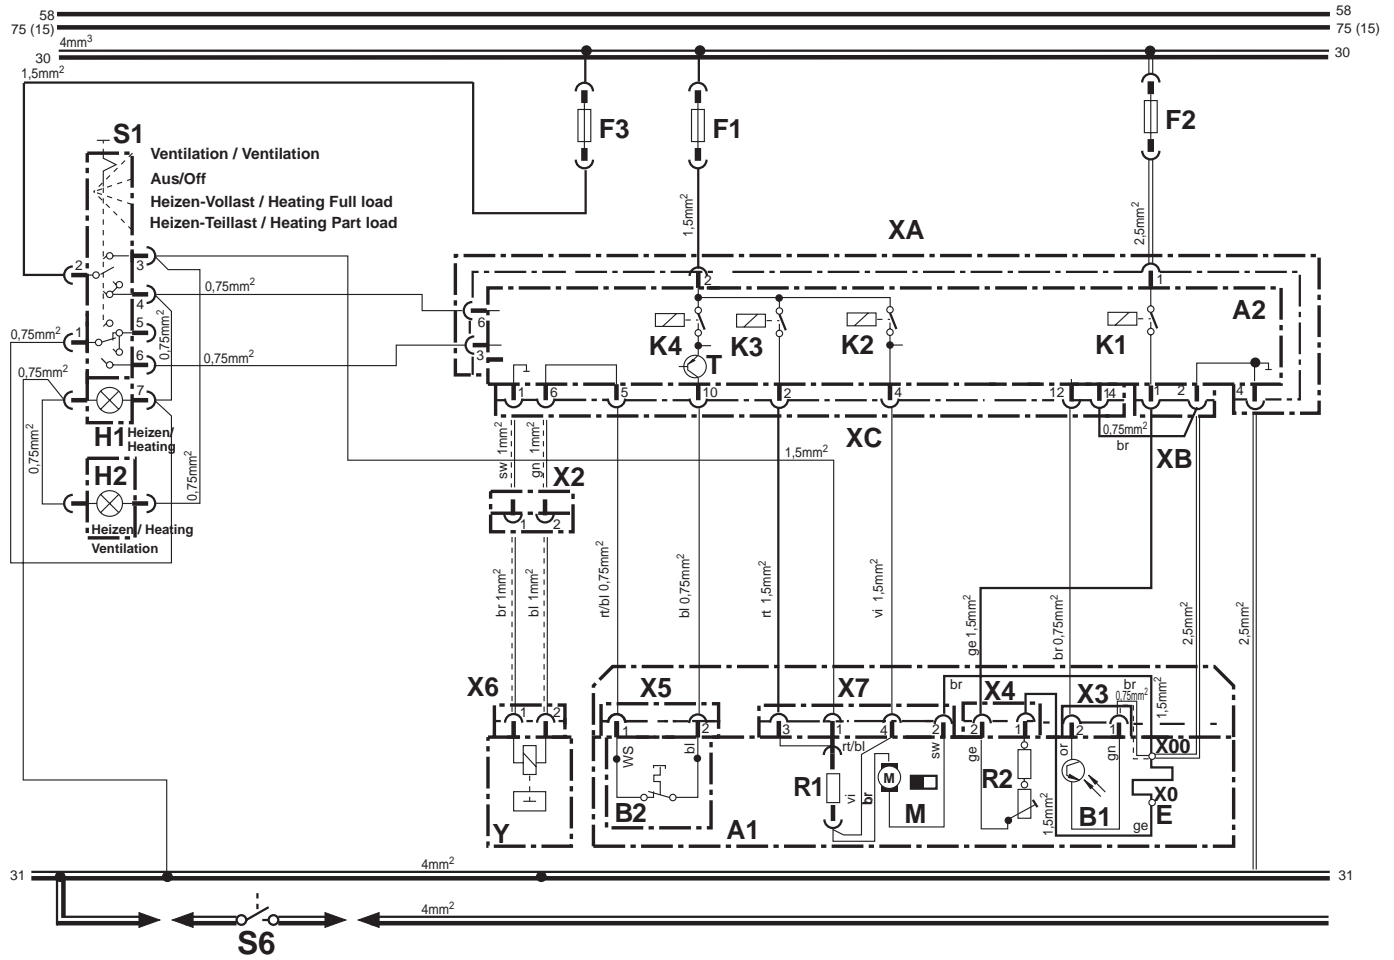

* not applicable for 12V

Wire Colours	
bl	blue
br	brown
ge	yellow
gn	green
gr	grey
or	orange
rt	red
sw	black
vi	violet
ws	white

Wire Gauges		
	< 7.5 m	7.5 - 15 m
—	0.75 mm ²	1.5 mm ²
—	1.0 mm ²	1.5 mm ²
—	1.5 mm ²	2.5 mm ²
—	2.5 mm ²	4.0 mm ²
—	4.0 mm ²	6.0 mm ²

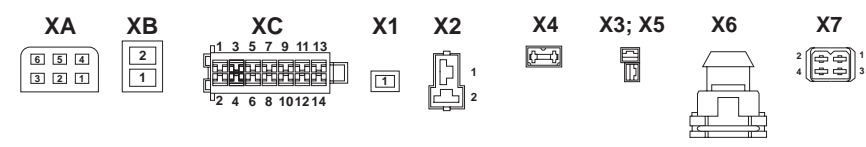


Item	Nomenclature	Remark
Y	Dosing pump	24 V
Y	Dosing pump	12 V
X7	Connection	4-pole
X6	Connection	2-pole
X5	Connection	2-pole
X4	Connection	2-pole
X3	Connection	2-pole
X2	Connection	2-pole
X0	Clamping connection	Glow plug +
X00	Clamping connection	Glow plug -
XC	Connection for tab rectable	14-pole
XB	Connection for tab rectable	2-pole
XA	Connection for tab rectable	6-pole
T	Transistor	in control unit
S6	Battery switch	in vehicle
S1	Switch	4-stage
R2	Glow plug resistor	24 V
R2	Glow plug resistor	12 V
R1	Resistor	24 V


Item	Nomenclature	Remark
R1	Resistor	12 V
M	Motor	24 V
M	Motor	12 V
K4	Relay	in control unit
K3	Relay	in control unit
K2	Relay	in control unit
K1	Relay	in control unit
H2	Operating indicator light, heating/ ventilation	24 V
H2	Operating indicator light, heating/ ventilation	12 V
H1	Operating indicator light, heating	24 V
H1	Operating indicator light, heating	12 V
F3	Flat fuse	24 V 7.5 A
F3	Flat fuse	12 V 10 A
F2	Flat fuse	24 V 20 A
F2	Flat fuse	12 V 20 A
F1	Flat fuse	24 V 20 A
F1	Flat fuse	12 V 20 A

Item	Nomenclature	Remark
E	Glow plug	4 V
B2	Temperature limiter	12/24 V
B1	Flame sensor	12/24 V
A2	Control unit	24 V
A2	Control unit	12 V
A1	Heater HL 90	24 V
A1	Heater HL 90	12 V

Fig. 702 Operation with switch (Full Load - Part Load) and Ventilation

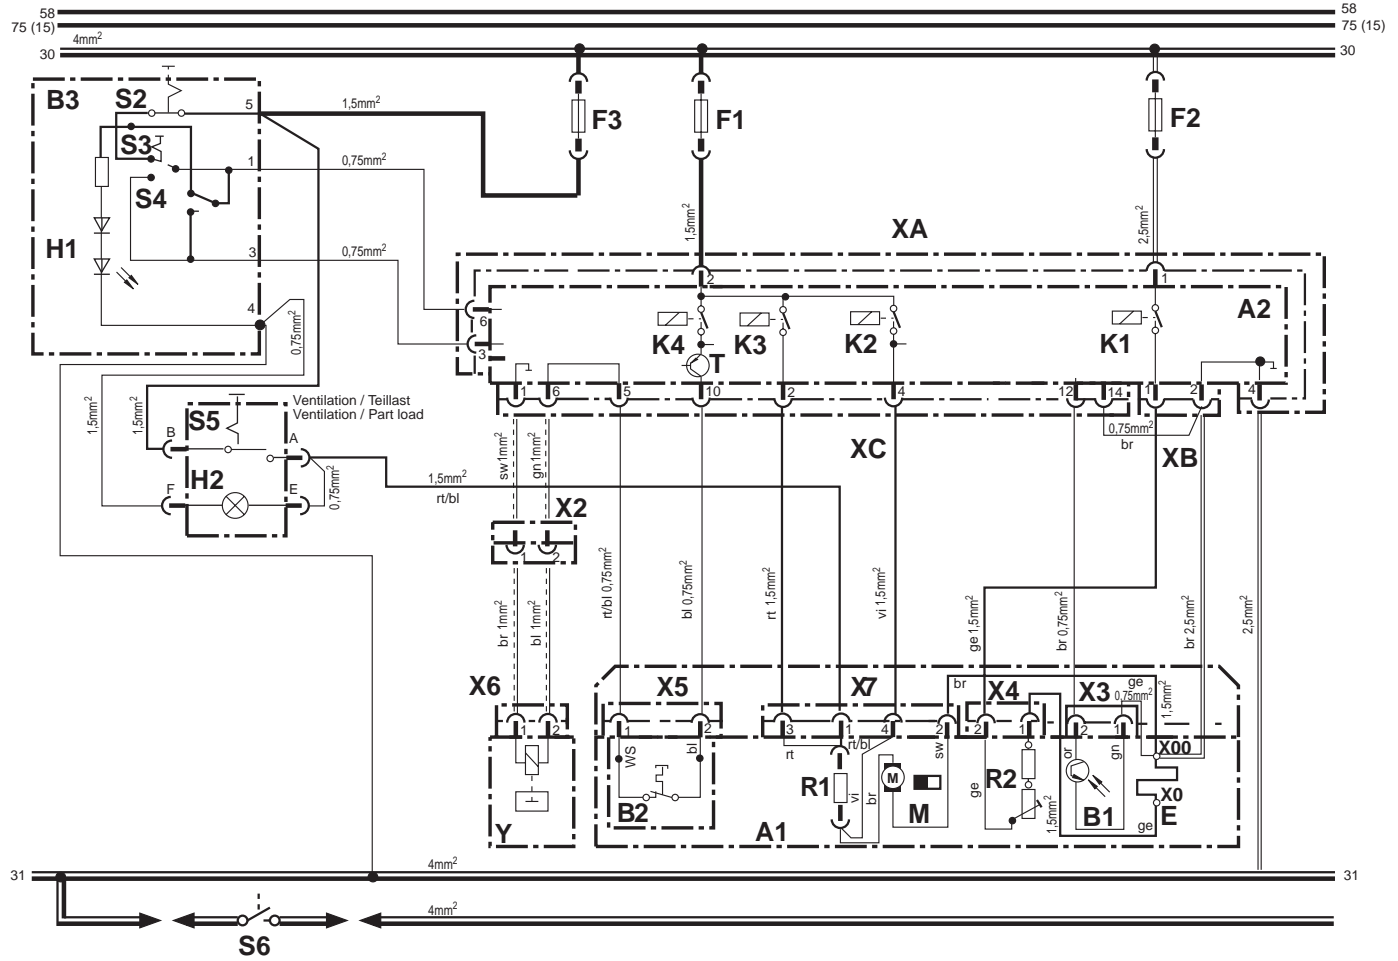

* not applicable for 12V

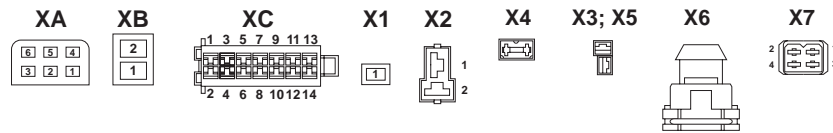

Wire Gauges	
	< 7.5 m
—	7.5 - 15 m
—	0.75 mm ²
—	1.5 mm ²
—	1.0 mm ²
—	1.5 mm ²
—	1.5 mm ²
—	2.5 mm ²
—	2.5 mm ²
—	4.0 mm ²
—	4.0 mm ²
—	6.0 mm ²


Wire Colours	
bl	blue
br	brown
ge	yellow
gn	green
gr	grey
or	orange
rt	red
sw	black
vi	violet
ws	white

Item	Nomenclature	Remark
Y	Dosing pump	24 V
Y	Dosing pump	12 V
X7	Connection	4-pole
X6	Connection	2-pole
X5	Connection	2-pole
X4	Connection	2-pole
X3	Connection	2-pole
X2	Connection	2-pole
X0	Clamping connection	Glow plug +
X00	Clamping connection	Glow plug -
XC	Connection for tab rectable	14-pole
XB	Connection for tab rectable	2-pole
XA	Connection for tab rectable	6-pole
T	Transistor	in control unit
S6	Battery switch	in vehicle
S5	Switch, ventilation, part load	24 V
S5	Switch, ventilation, part load	12 V
S4	Thermostat, heating full load/part load	
S3	Switch, heating full load/part load	

Item	Nomenclature	Remark
S2	Switch, on/off	
R2	Glow plug resistor	24 V
R2	Glow plug resistor	12 V
R1	Resistor	24 V
R1	Resistor	12 V
M	Motor	24 V
M	Motor	12 V
K4	Relay	in control unit
K3	Relay	in control unit
K2	Relay	in control unit
K1	Relay	in control unit
H2	Operating indicator light, heating/ ventilation	24 V
H2	Operating indicator light, heating/ ventilation	12 V
H1	Operating indicator light	12/24 V
F3	Flat fuse	24 V 7.5 A
F3	Flat fuse	12 V 10 A
F2	Flat fuse	24 V 20 A

Item	Nomenclature	Remark
F2	Flat fuse	12 V 20 A
F1	Flat fuse	24 V 20 A
F1	Flat fuse	12 V 20 A
E	Glow plug	4 V
B3	Room thermostat	12/24 V
B2	Temperature limiter	12/24 V
B1	Flame sensor	12/24 V
A2	Control unit	24 V
A2	Control unit	12 V
A1	Heater HL 90	24 V
A1	Heater HL 90	12 V


Fig. 703 Operation with Room Thermostat (Full Load - Part Load) and Ventilation

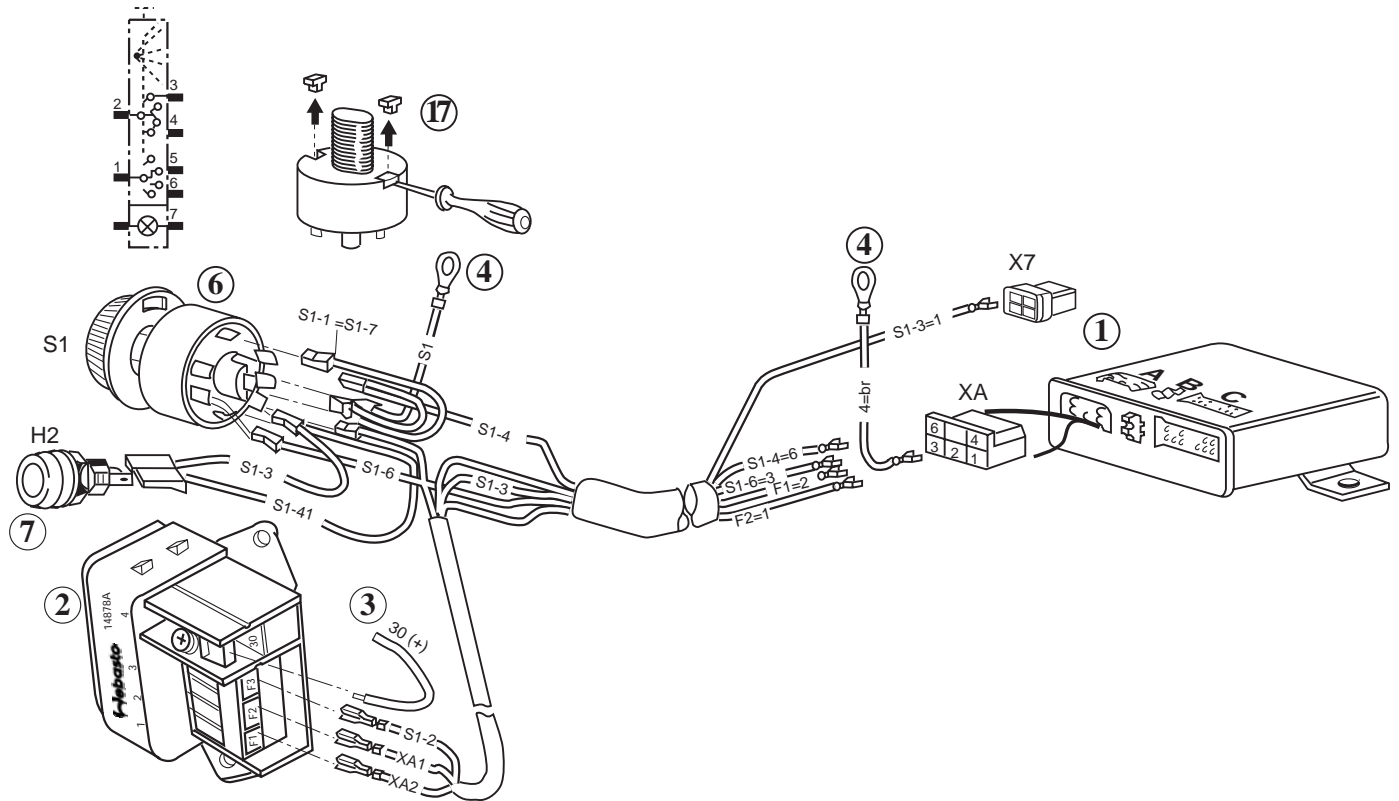

Connection Control Unit / Fuse Holder / Switch

- 1 Control unit
- 2 Fuse holder
- 3 To battery (+)
- 4 Ground (-)
- 6 Switch
- 17 Remove two inhibit pins
- 7 Operating indicator light (heating and ventilation)

Fig. 704 Example for Electrical Installation "Operation with Switch and Ventilation"

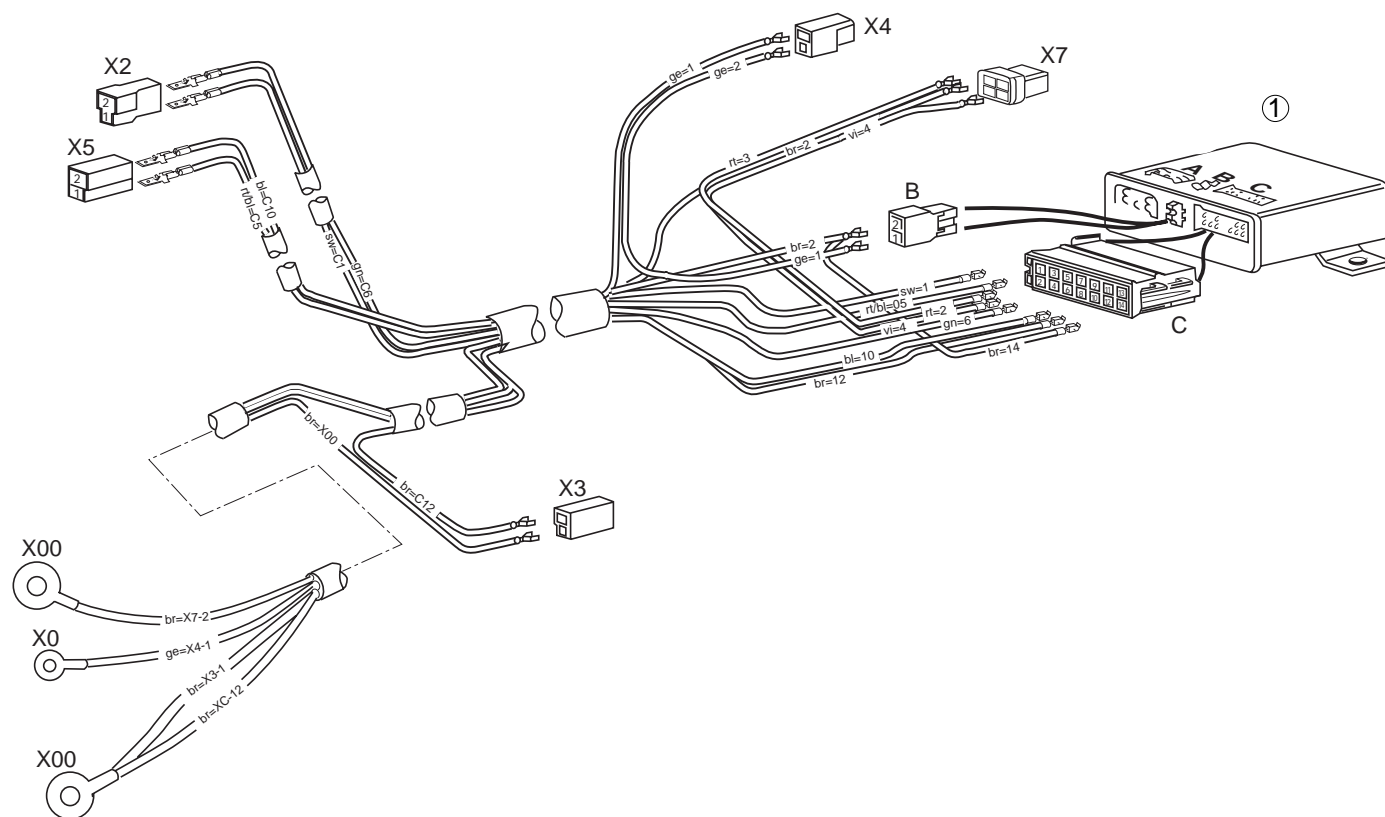

X2 Intermediary connector dosing pump

X3 Connector flame sensor

X4 Connector glow plug resistor

X5 Connector temperature limiter

X7 Connector relay/fuse

X0;

X00 Connector glow plug

① Control Unit

Fig. 705 Example for Electrical Installation "Standard Wiring Harness"

8 Servicing

8.1 General

This section describes the servicing procedures allowed on the heater when installed.

8.2 Work on the Air Heater

For any type of work on the heater the main power supply cable is to be disconnected from the vehicle battery. As long as the heater is in operation or in run-down the battery main power supply must not be disconnected to prevent the heater from overheating by response of the overheat protection. When performing long time repairs on the heater its removal is considered appropriate.

Repairs requiring a change of location the relevant installation instructions and the vehicle specific heater installation proposal have to be observed.

8.3 Work on the Vehicle

CAUTION

In the vicinity of the heater a temperature of 85 °C must under no circumstances be exceeded (e.g. during paint work on the vehicle).

8.4 Air Heater Test Run

WARNING

The heater must not be operated, not even with the timer, in enclosed areas like garages or workshops not provided with exhaust ventilation facilities.

8.5 Servicing

NOTE

In order to avoid seizure of mechanical components, the air heater should be operated every 4 weeks for at least 10 minutes.

The heater does not require maintenance. It should however be checked by Webasto-trained skilled personnel in regular intervals, the latest before the heating season begins (point of time, when the heater is more frequently in use due to weather conditions).

To ensure functional reliability of the heater the following servicing must be performed:

- check combustion air inlet and exhaust outlet for contamination (contaminated and clogged heating air ducts may cause overheating and response of the temperature limiter).
- clean air heater exterior (prevent the ingress of water).
- check clamps for security.
- examine electrical connections for corrosion of contacts and for security.
- check combustion air and exhaust ducts for damage and obstructions.
- check fuel lines and fuel filter for leakage and contamination.
- Replace fuel filter if installed.

8.6 Visual Inspections and Installation Regulations

8.6.1 Heating Air System

CAUTION

The integration of the air heater into the vehicle's own air system requires an accurate adaptation and is not recommended.

The heater may be used for heating the passenger and driver cabin in the fresh air mode of operation and for load top compartments in the fresh air or circulation air mode of operation. If an air heater is installed in a loading compartment for circulation air mode of operation the inside of the entrance door shall be labeled as follows: "With heater on no personnel allowed in loading area with door closed!"

Due to the danger of poisoning or suffocation the air heating system air intake must be arranged in a way that under normal operating conditions exhaust fumes from the vehicle engine are unlikely to be sucked in, not even when a downstream fan is in use, e.g. by drawing air from the engine compartment.

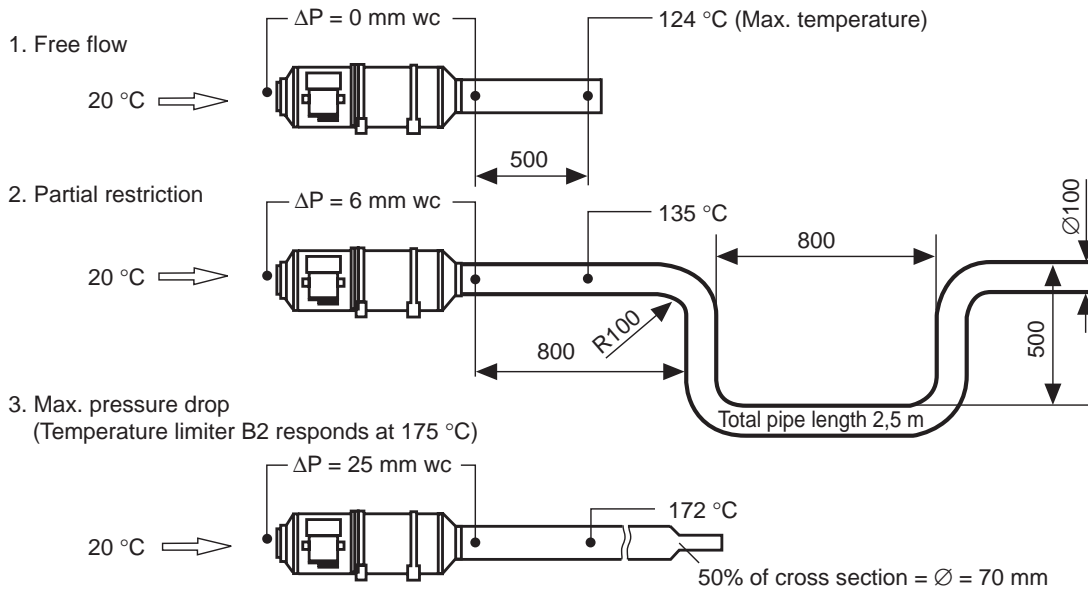


Fig. 801 Hot Air Temperatures with Drop of Pressure

The heating air intake temperature must not exceed +30 °C.

Heating air duct minimum inner diameter: 100 mm

Maximum air pressure drop between suction and pressure side of heating air duct:
2.5 mbar (25 mm wc - water column)

When exceeding this value the temperature limiter is very likely to respond. The heating air hose must be secured at its joints.

The air heater, when used in the ventilation mode of operation, may also be used without any further accessories when observing the air intake temperature limitation (a heating air flow short circuit should be avoided).

8.6.2 Fuel Supply

Fuel is tapped from the fuel reservoir of the vehicle or from a separate fuel tank. Permitted pressures at the fuel tapping location are listed in Fig. 802.

Permitted fuel feed suction height S (m)	At max. permissible negative pressure (bar) in fuel tank
0.00	-0.10
0.50	-0.06
1.00	-0.02

8.6.2.1 Fuel Tapping

Vehicles with big engines (trucks) fuel tapping must be from the fuel reservoir or a separate unpressurised fuel tank (Fig. 803, 804 and 805). This separate fuel tapping avoids an influence on the pressure.

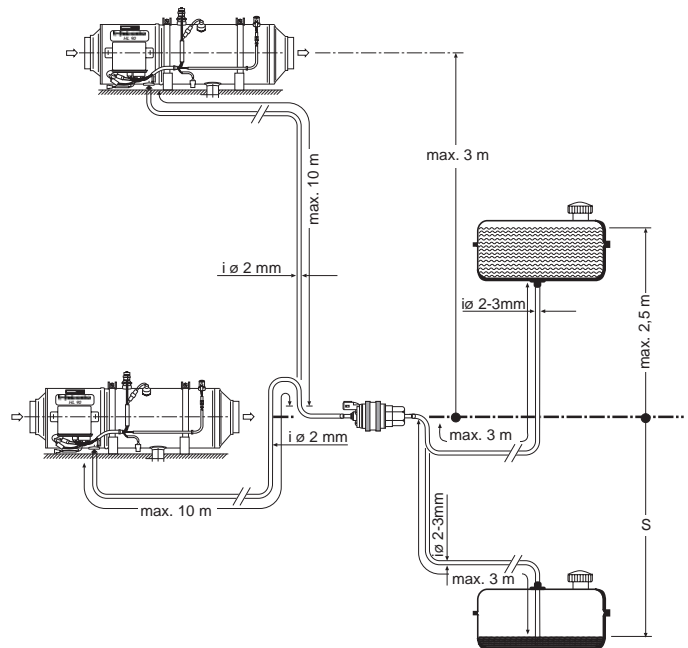


Fig. 802 Fuel Supply

Hole Pattern

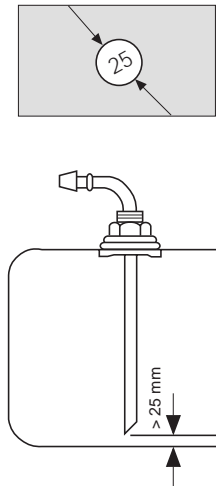


Fig. 803 Webasto Fuel Tank Tap

* Use fuel tank tap only on metal fuel tanks

Fuel Tank Tap

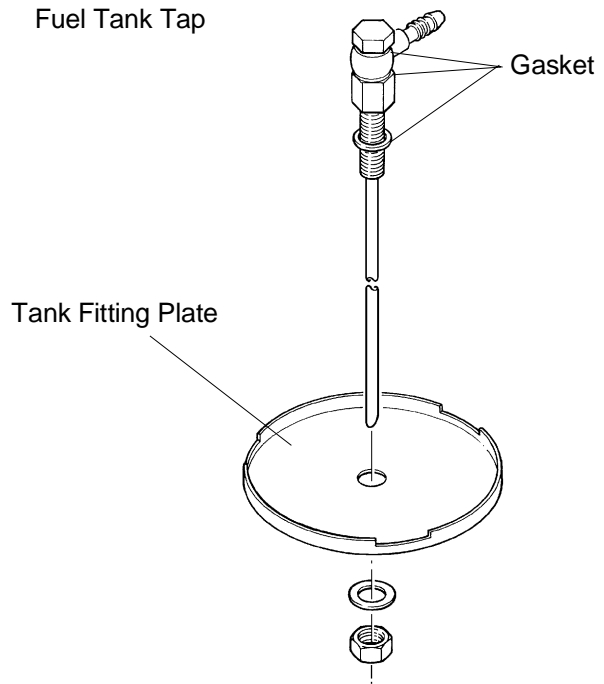


Fig. 805 Fuel Tapping from Plastic Tank (tapping via fitting plate)

NOTE

The fitting plate must be made of sheet metal!

8.6.2.2 Fuel Lines

Fuel lines may only be steel, copper, or plastic lines made of unhardened, light and temperature stabilised PA 11 or PA 12 (e.g. Mecanyl RWTL) according to DIN 73378. As in most cases a permanently rising fuel line routing cannot be ensured, the inner diameter must not exceed a certain value. Starting from an inside diameter of 4 mm, air or gas bubbles accumulate resulting in malfunctions should the lines be descending or having sags. The diameters specified in Fig. 801 ensure no disturbing formation of bubbles.

A descending line routing from the dosing pump to the heater should be avoided.

Loose fuel lines must be secured in order to avoid sagging. The installation must ensure protection against stone impacts and **undue temperatures** (exhaust line). The fuel line joints are to be secured against slipping with hose clamps.

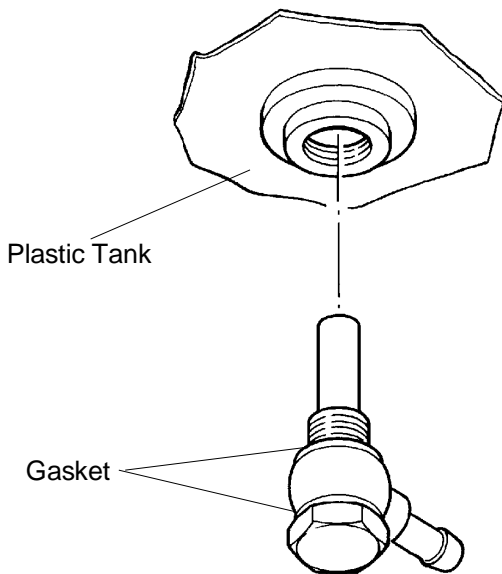


Fig. 804 Fuel Tapping from Plastic Tank (tapping via fuel drain plug)

Connection of 2 Pipes with Hose

The proper connection of fuel lines with hoses is shown in Fig. 806.

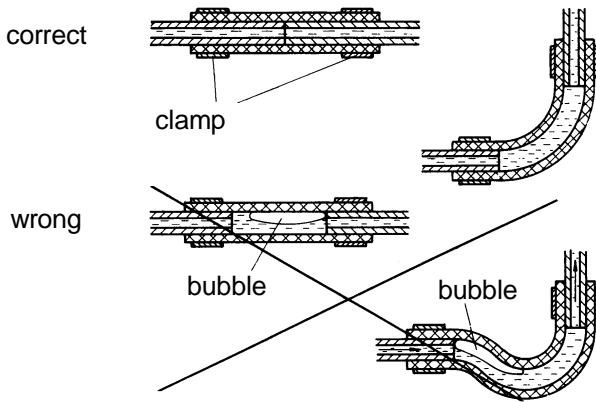


Fig. 806 Pipe/Hose Connection

8.6.3.1 Installation Location

Prior to installation of dosing pump ensure that the pressure at the tapping location does not exceed 0.2 bar.

It is advantageous to mount the dosing pump in a cool location. The ambient temperature must never exceed +40 °C during operation.

Dosing pump and fuel lines must not be installed in locations exposed to heat radiated by hot vehicle components. A heat shield is to be provided as necessary. The preferred installation location is near the tank.

8.6.3.2 Installation and Attachment

The dosing pump is to be attached with anti-vibration mounts. The installation location is limited according to Fig. 807 to ensure sufficient self venting capability. Due to the danger of corrosion the plug connection between dosing pump and dosing pump cable loom may only use Webasto original parts.

8.6.3 Dosing Pump

The dosing pump is a combined delivery, dosing and shut-off system and is subject to certain installation criteria (Fig. 802 and 807).

8.6.4 Fuel Filter

If there is the probability of contaminated fuel only the Webasto filter, Order No. 487 171, may be used. Installation possibly vertical up to horizontal the most (observe direction of flow).

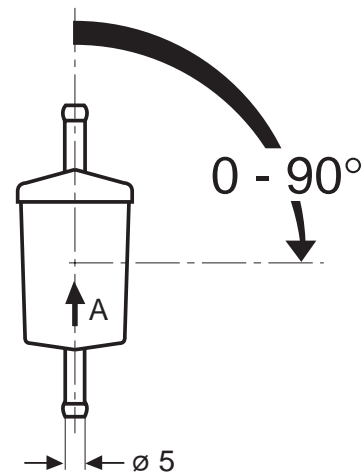
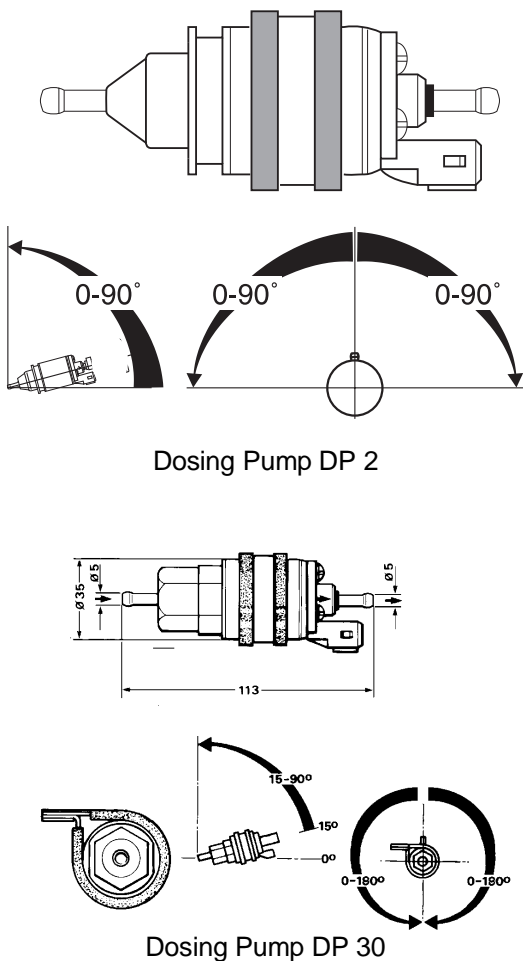


Fig. 808 Fuel Filter

Fig. 807 Dosing Pump, Installation and Attachment

8.6.5 Combustion Air Supply

Combustion air must under no circumstances be extracted from rooms with persons. The combustion air inlet must not point towards the forward direction of motion. It must be located so that no clogging by contamination is to be expected.

If the air heater is located in a closed installation box, combustion air must be taken in from and the exhaust routed to the exterior. The splash water proof feedthroughs must not allow exhaust fumes to enter the vehicle interior.

In order to silence the air intake noises an air intake muffler (order no. 198 56A) is recommended (Fig. 809). The muffler is fitted onto the air intake pipe.

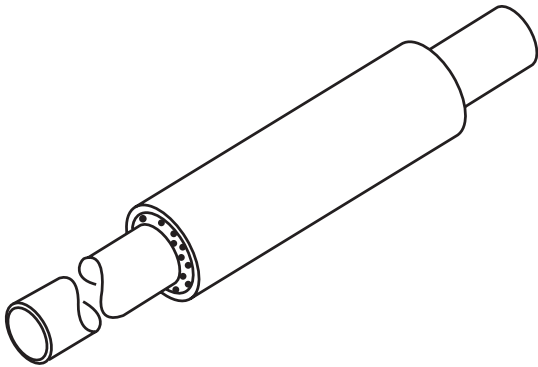


Fig. 809 Air Intake Muffler

8.6.6 Exhaust Line

Rigid pipes made of unalloyed or alloyed steel with a minimum wall thickness of 1.0 mm have to be used as exhaust line or flexible pipes made of alloyed steel only. The exhaust pipe is secured to the air heater e.g. with a clamp.

The exhaust muffler is preferably mounted near the air heater. The direction of flow is optional.

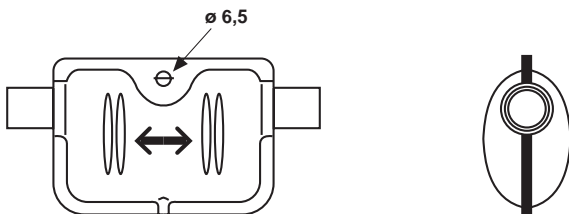


Fig. 810 Exhaust Muffler, Direction of Flow

Operation of the air heater is also permitted without muffler.

8.6.7 Combustion Air Intake and Exhaust Lines

Length of combustion air intake line:
 with muffler: max. 3.0 m
 without muffler: max. 5.0 m

Length of exhaust line: max. 5.0 m

Both lines are to be routed away from the heater in a decline. If this is not possible, a condensate drain hole Ø 4 mm must be provided at the lowest point.

Inner diameter of lines:
 combustion air line: 30 mm
 exhaust line: 38 mm

Smallest bending radius:
 combustion air line: 45 mm
 exhaust line: 85 mm

In order to ensure an angle of $90^\circ \pm 10^\circ$, an attachment is required not further than 150 mm away measured from the exhaust pipe end.

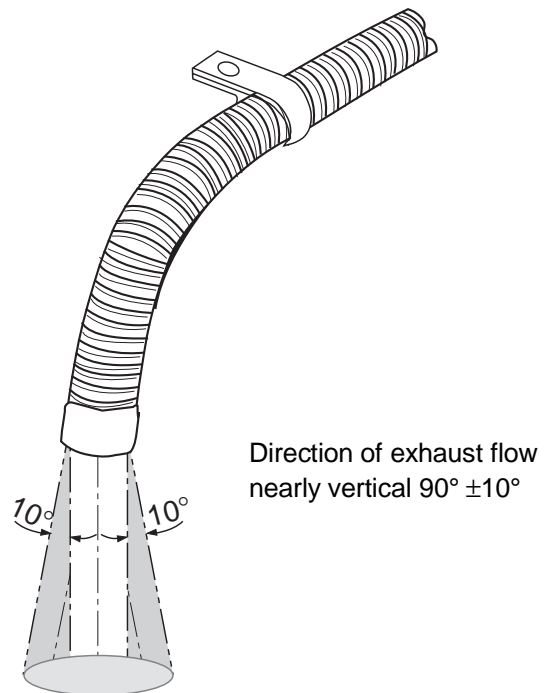


Fig. 811 Exhaust Pipe Outlet, Installation Position

WARNING

Other installation position of exhaust pipe outlet than shown in Fig. 811 may cause fires.

Sum of bends:
 combustion air line: max. 360°
 exhaust line: max. 360°

8.7 Removal and Installation

CAUTION

In installed condition only the following disassembly or removal procedures are permitted should enough space for removal allow such action:

- replacement of control unit
- replacement of glow plug
- replacement of flame sensor and its receptacle
- replacement of temperature limiter

8.7.1 Heater, Removal and Installation

8.7.1.1 Removal

1. Disconnect vehicle battery.
2. Disconnect electrical connector of wiring harness from control unit.
3. Disconnect cable to dosing pump at its disconnect.
4. Disconnect fuel supply inlet on heater. Close fuel line with plug.
5. Disconnect combustion air inlet and exhaust outlet on heater.
6. Open tightening straps.
7. Remove heater from supports.

8.7.1.2 Installation

1. Retighten screws of supports with 12 Nm.
2. Locate heater for installation and secure with tightening straps (locate straps between wiring harness and outer case).
3. Connect fuel supply line to heater fuel inlet and secure with clamp tightening to 2 Nm.
4. Secure combustion air inlet and exhaust outlet on heater.
5. Route cable to dosing pump and reconnect at its disconnect point.
6. Connect wiring harness connector to control unit.
7. Tighten screws of turnbuckles with 5 Nm.
8. Reconnect vehicle battery.
9. Bleed fuel supply system.

8.7.2 Control Unit, Replacement

NOTE

The replacement procedure for the control unit is identical with the heater installed or removed. Perform replacement in accordance with 9.2.1.

8.7.3 Glow Plug, Replacement

NOTE

The replacement procedure for the glow plug is identical with the heater installed or removed. Perform replacement in accordance with 9.2.2.

8.7.4 Flame Sensor, Replacement

NOTE

The replacement procedure for the flame sensor is identical with the heater installed or removed. Perform replacement in accordance with 9.2.3.

8.7.5 Temperature Limiter, Replacement

NOTE

The replacement procedure for the temperature limiter is identical with the heater installed or removed. Perform replacement in accordance with 9.2.4.

8.8 First Operation

After heater installation the fuel supply system must be thoroughly bled.

NOTE

Long fuel lines may require several switch-ons for priming the fuel line to the heater.

During a test run of the air heater all connections are to be checked for no leakage and tight fit. Should the heater during operation enter an error lockout condition, perform troubleshooting.

9 Repair

9.1 General

This section describes the repairs that may be performed on the air heater HL 90 when removed. Any further disassembly will void the warranty.

For re-assembly only components of the original spare part kits are to be used.

9.1.1 Work on Components after Disassembly

All gaskets located between disassembled components must always be replaced and discarded.

9.1.1.1 Cleaning

- All components disassembled must be cleaned with cleaning spirit and subsequently blown dry with air.

9.1.1.2 Visual Inspection

- Examine all components for damages (cracks, deformation, wear, etc.) and replace as necessary.
- Examine connectors and wiring for corrosion, loose contacts, wrong crimping, etc. and repair as necessary.
- Check terminals for corrosion and contacts for security. Repair as required.

9.2 Disassembly and Assembly

9.2.1 Control Unit, Replacement

9.2.1.1 Removal

1. Disconnect electrical connector on control unit.
2. Remove screws (14, Fig. 901) and control unit (13).

3. Perform procedures on components after disassembly (refer to 9.1.1).

9.2.1.2 Installation

1. Locate control unit (13, Fig. 901) in installation position and secure with screws (14).
2. Torque screws with 2.5 ± 0.2 Nm.
3. Connect electrical connector to control unit.

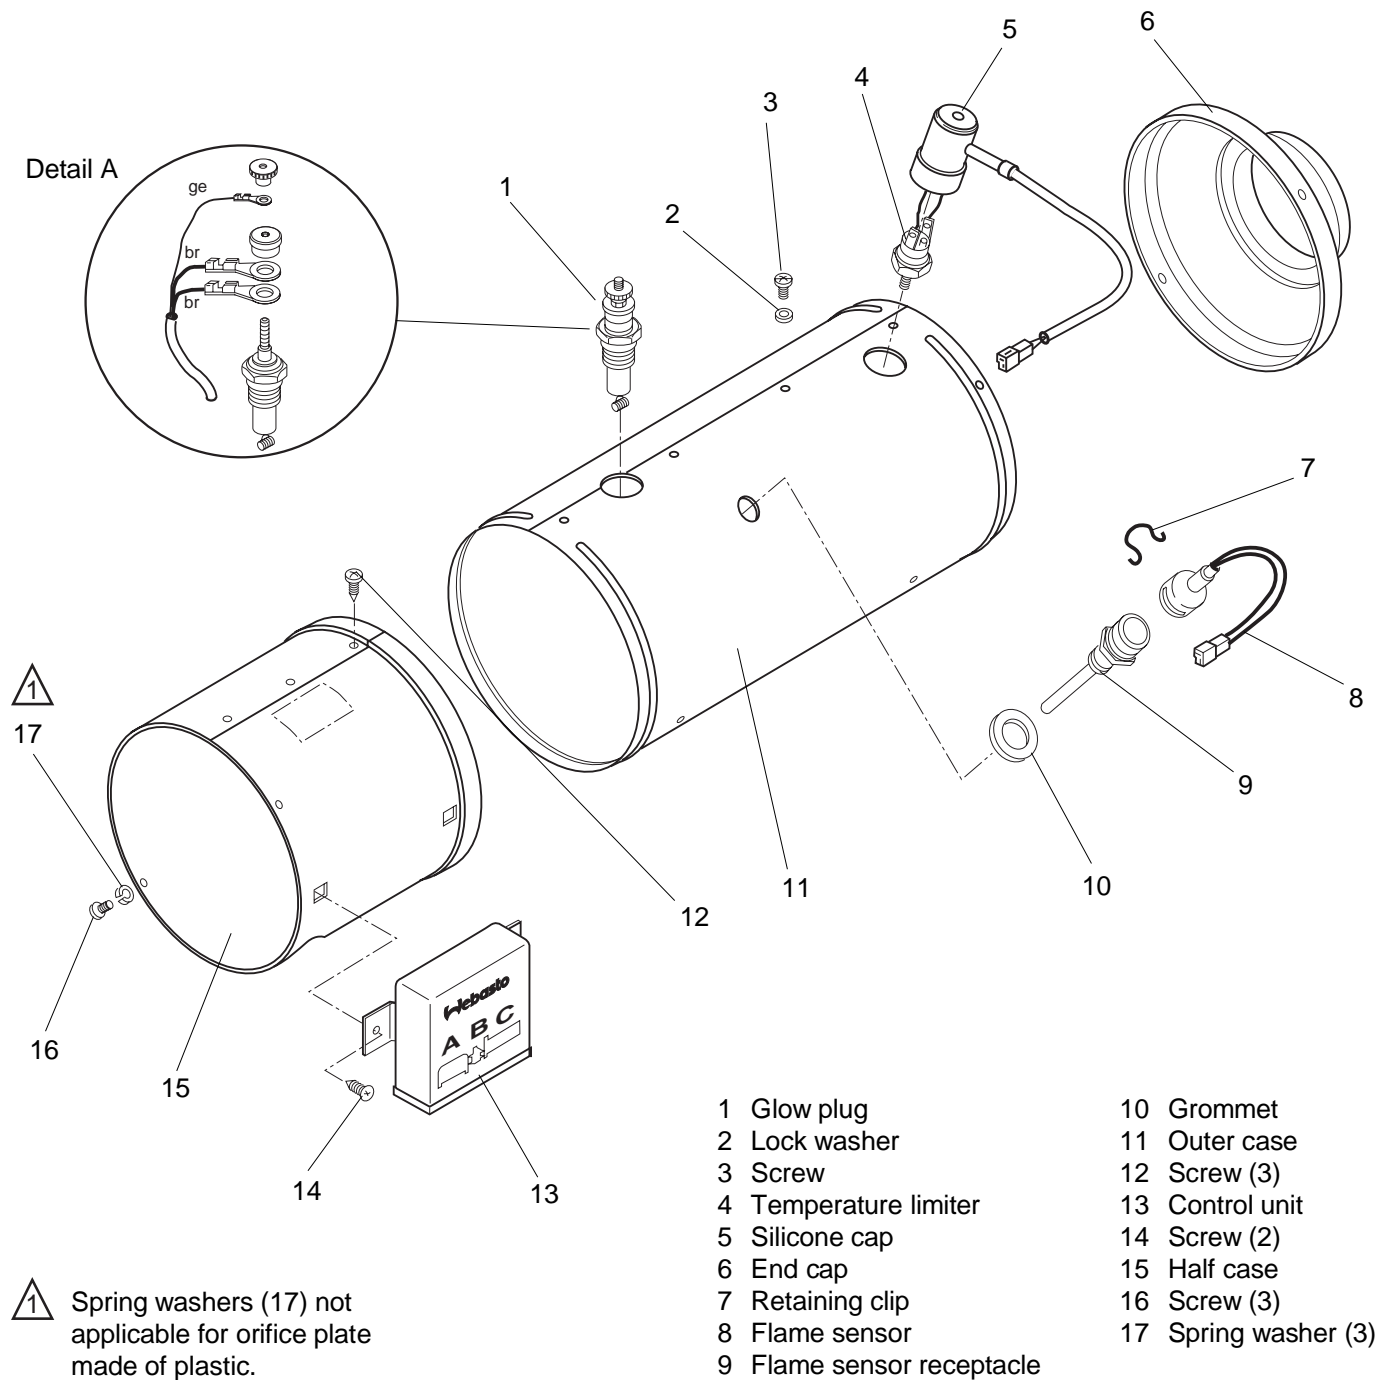


Fig. 901 Replacement of Control Unit, Glow Plug, Flame Sensor and Temperature Limiter

9.2.2 Glow Plug, Replacement

9.2.2.1 Removal

1. Remove knurled nut from glow plug.
2. Withdraw cable and isolator.
3. Unscrew glow plug (1, Fig. 901) and remove.
4. Perform procedures on components after disassembly (refer to 9.1.1).

9.2.2.2 Installation

1. Apply high temperature grease (Copaslip) to thread of glow plug.
2. Manually screw glow plug (1, Fig. 901) in and tighten with 20 Nm.
3. Bring cable and isolator in assembly position as shown in Fig. 901, Detail A and secure with knurled nut.
4. Tighten knurled nut with 2.5 Nm.

9.2.3 Flame Sensor, Replacement

9.2.3.1 Removal

1. Disconnect electrical connection to flame sensor.
2. Remove spring (7, Fig. 901) from flame sensor (8) and withdraw flame sensor.
3. Unscrew flame sensor receptacle (9) and remove.
4. Remove grommet (10) and discard.
5. In counterlight visually check quartz glass rod of flame sensor receptacle for transparency.
6. Perform procedures on components after disassembly (refer to 9.1.1).

9.2.3.2 Installation

1. Locate new grommet (10, Fig. 901) flush in installation position.
2. Apply high temperature grease (Copaslip) to thread of flame sensor receptacle.
3. Manually screw flame sensor receptacle in place and torque with 20 Nm.
4. Plug on flame sensor (8) and secure with retaining clip (7).
5. Make electrical connection of flame sensor to wiring harness.

9.2.4 Temperature Limiter, Replacement

9.2.4.1 Removal

1. Disconnect electrical connection to temperature limiter.
2. Slide silicone cap (5, Fig. 901) up enough to make hexagon of temperature limiter (4) accessible.
3. Unscrew temperature limiter and remove.
4. Perform procedures on components after disassembly (refer to 9.1.1).

9.2.4.2 Installation

1. Screw temperature sensor (4, Fig. 901) in by hand and tighten with 0.8 Nm.
2. Form-fit silicone cap (5).
3. Make electrical connection of temperature limiter to wiring harness.


9.2.5 Drive, Replacement

9.2.5.1 Removal

1. Remove control unit (see 9.2.1.1).
2. Disconnect electrical connector (9 and 25, Fig. 902) and carefully push into half case together with grommet (8).
3. Remove screws (12 and 16, Fig. 901) and spring washers (17). Slightly widen half case and slide off over air intake pipe.
4. Remove screws (19, Fig. 902) and lock washers (20).
5. Withdraw drive from heat exchanger and remove.
6. Perform procedures on components after disassembly (refer to 9.1.1) or continue to disassemble drive (see 9.2.6).

9.2.5.2 Installation

1. Apply vaseline to O-ring (22, Fig. 902).
2. Bring drive with heat exchanger in assembly position secure with screws (19, Fig. 902) and lock washers (20).
3. Tighten screws with 5.5 ± 0.5 Nm.
4. Slightly widen half case (15, Fig. 901), route electrical connector (9 and 25, Fig. 902) with cable to exterior and push grommet (8) into opening for proper fit in place.
5. Position half case (15, Fig. 901) for assembly and secure with screws (12).
6. Secure half case (15) with screws (16) and spring washers (17).
7. Tighten screws (12 and 16) with 2.5 ± 0.2 Nm.
8. Secure cap (1, Fig. 902) with screws (14) and tooth washers (13).
9. Tighten screws (14) with 2.5 ± 0.2 Nm.
10. Install control unit (see 9.2.1.2).

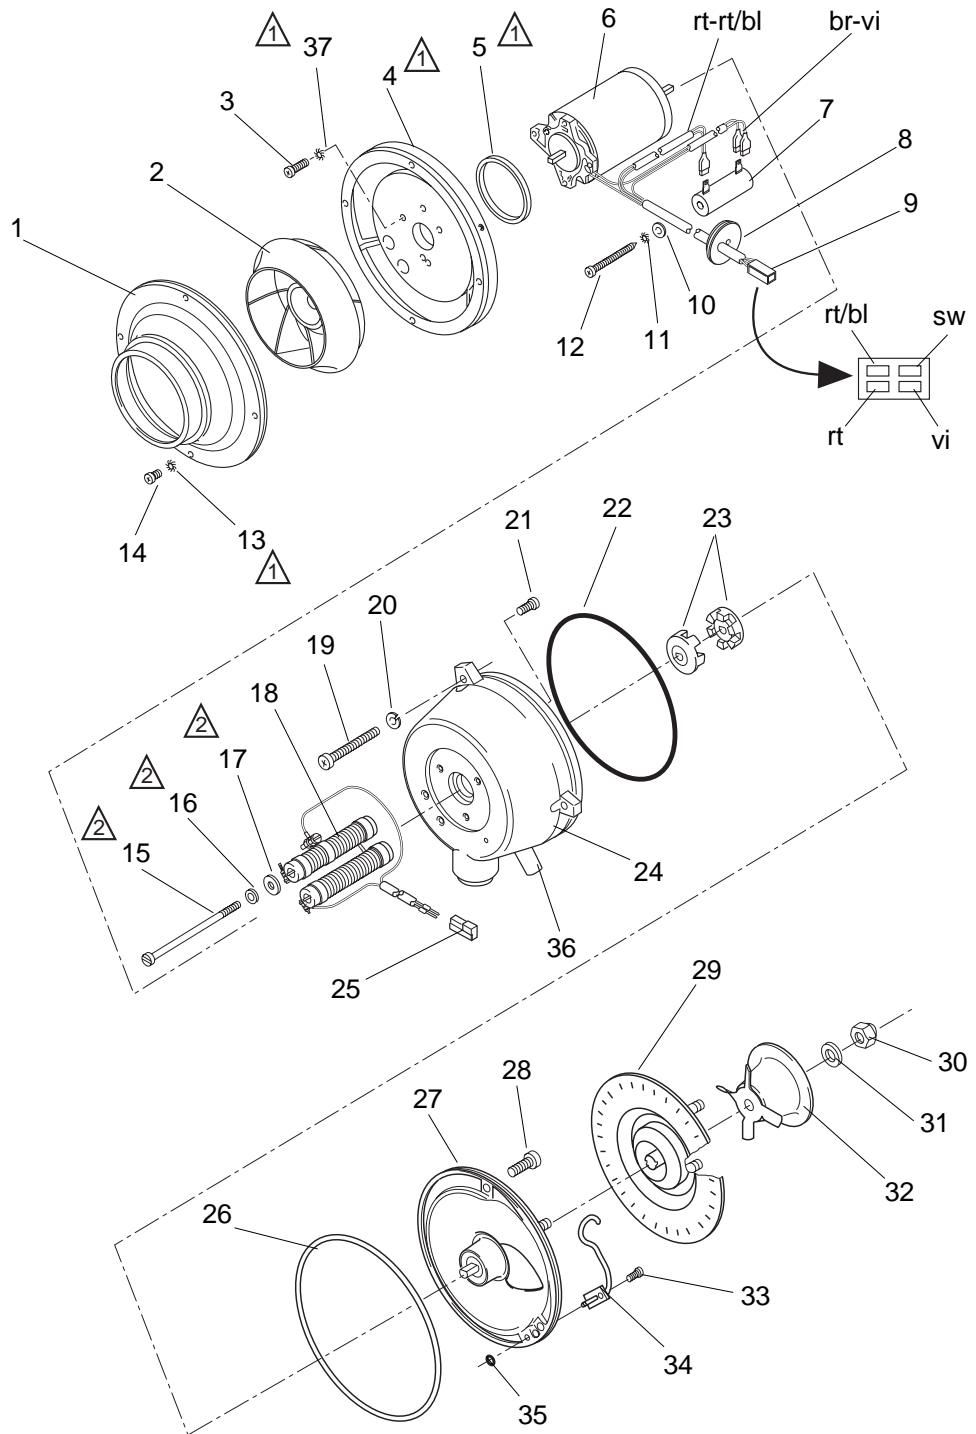

NOTE

1 Orifice plate (4) made of plastic has no tooth washers (13) and spacer ring (5). Screws (3) are then locked with tooth washers (37).

2 If screws (15) are sheet metal type screws, there are no locking rings (16) and washers (17).

- | | | |
|------------------------|---------------------------|---|
| 1 Cap | 14 Screw (4) | 27 Bypass fan |
| 2 Rotor | 15 Screw (2) | 28 Screw (3) |
| 3 Screw (3) | 16 Locking ring (2) | 29 Atomiser assembly |
| 4 Orifice plate | 17 Washer (2) | 30 Cap nut |
| 5 Spacer ring | 18 Glow plug resistor (2) | 31 Washer |
| 6 Motor | 19 Screw (3) | 32 Displacer |
| 7 Resistor | 20 Lock washer (3) | 33 Screw (2) |
| 8 Grommet | 21 Screw (3) | 34 Fuel line |
| 9 Electrical connector | 22 O-ring | 35 O-ring |
| 10 Washer | 23 Clutch | 36 Fuel inlet with double conical ring and coupling nut |
| 11 Tooth washer | 24 Air intake housing | 37 Tooth washer (3) |
| 12 Screw | 25 Electrical connector | |
| 13 Tooth washer (4) | 26 Round cord ring | |

Fig. 902 Disassembly of Drive

9.2.6 Drive, Disassembly and Assembly

The disassembly of the drive is broken down into two subjects:

- heating air supply/ electrical components
- combustion air supply/ fuel ducting/ motor

9.2.6.1 Heating Air Supply/ Electrical Components, Disassembly

The following steps should be performed with the heater fully assembled.

1. For removal of cap (1, Fig. 902) remove screw (14) and tooth washers (13) as required.
2. Using two levers (wide blade screw drivers, etc.) lever plastic rotor (2) off from motor shaft by pushing against orifice plate (4). Remove orifice plate and spacer ring (5) by removing screws (3).

NOTE

When disassembling and disconnecting wiring and connectors make sure to observe wiring arrangement, see Fig. 902.

3. Loosen screws (15) and remove glow plug resistor (18), locking ring (16) and washer (17).
4. Remove screw (12), tooth washer (11) and washer (10).
5. Disconnect blade terminal from electrical connectors (9 and 25). Check condition of grommet (8) and replace as necessary.
6. Disconnect electrical connectors from resistor (7) and remove resistor.

9.2.6.2 Combustion Air Supply/ Fuel Ducting/ Motor, Disassembly

1. Remove cap nut (30), washer (31) and displacer (32).
2. Withdraw atomiser assembly (29).
3. Remove screws (33) and fuel line (34).
4. Remove screws (28).
5. Carefully pull bypass fan (27) out of air intake housing (24).

CAUTION

Remove bypass fan by a slight axial pull on shaft. Remove major contamination on edge zone to air intake housing and slightly grease as required.

6. Withdraw one half of clutch (23); remove round cord ring (26) and discard.
7. Remove O-ring (35) from air intake housing and discard.
8. Pull other half of clutch (23) from motor shaft.
9. Remove screws (21) and separate air intake housing (24) from motor (6).
10. Remove O-ring (22) and discard.
11. Perform procedures on components after disassembly (refer to 9.1.1).

CAUTION

Clean bypass fan with pressurized air only.

9.2.6.3 Assembly

1. Position new O-ring (22, Fig. 902) on air intake housing for assembly.
2. Assemble air intake housing (24) and motor (6) with screws (21).
3. Slide half of clutch (23) onto motor shaft in air intake housing (24).
4. Position new O-ring (35) at fuel transfer point in air intake housing.
5. Position new round cord ring (26) in bypass fan (27).
6. Slide other half of clutch (23) onto shaft in bypass fan (27).

NOTE

Fuel line must be aligned with fuel transfer point (O-ring); clutch (23) must also engage.

7. Assemble bypass fan (27) and air intake housing (24) with screws (28). Torque screws to 4 Nm.
8. Secure fuel line (34) in bypass fan (27) with screws (33) torqued to 1.5 Nm.
9. Slide atomiser assembly (29) onto shaft until arrested by drive pin.
10. Slide displacer (32) onto shaft and secure with washer (31) and cap nut (30). Torque cap nut to 2.5 Nm.
11. Mount resistor (7) with screw (12), tooth washer (11) and washer (10). Torque screw to 2 Nm.
12. Connect electrical connectors to resistor (7) (refer to Section 7 as required).
13. Secure glow plug resistors (18) with screws (15). No locking rings (16) and washers (17) when sheet metal screws are in use.

NOTE

Torque for cap screws and sheet metal screws is 5.5 Nm.

14. Slide on grommet (8) at wiring connect points of electrical connectors (9 and 25); reconnect cable wires to relevant connectors to restore proper electrical functions (refer to Section 7 as required).
15. Locate spacer ring (5) and orifice plate (4) for assembly so that spacer ring is centered on fan of motor (6).
There is no spacer ring (5) if plastic orifice plate is in use.
16. Secure orifice plate (4) and spacer ring (5) with screws (3).
17. Press rotor onto shaft until seated against stop.

CAUTION


Align interlock surfaces in rotor and on motor shaft.

WARNING

The 12 V type heater has only one glow plug resistor (18) fitted. Make sure to close second opening in air intake housing with a screw plug.

NOTE

Check fuel line position with gage No. 866 45A by positioning gage on drive shaft of bypass fan and reading the value 0.5 ± 0.5 . Bend as required to adjust distance (see Figure).

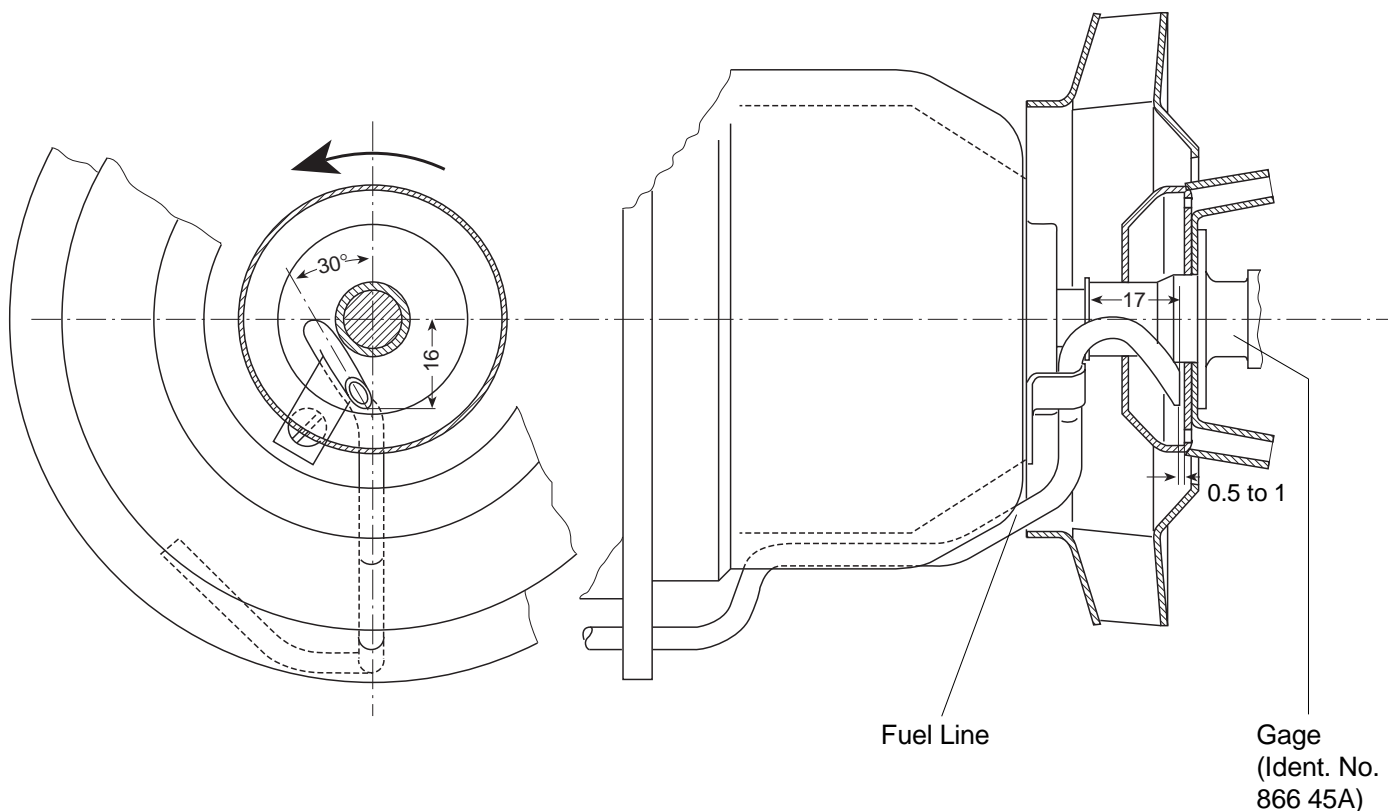

9.2.7 Heat Exchanger, Replacement

9.2.7.1 Removal

1. Remove control unit (refer to 9.2.1.1).
2. Remove glow plug (refer to 9.2.2.1).
3. Remove flame sensor (refer to 9.2.3.1).
4. Remove temperature limiter (refer to 9.2.4.1).
5. Remove drive (refer to 9.2.5.1).
6. Remove screws (3, Fig. 901) and lock washers (2) from outer case (11) and remove from end cap (6).
7. Pull off end cap (6).
8. Carefully widen outer case and remove heat exchanger.
9. Remove nuts (1, Fig. 903) and lock washers (2).
10. Pull rear wall (3) out of heat exchanger and remove sealing cord (4).
11. Discard sealing cord.
12. Perform procedures on components after disassembly (refer to 9.1.1).

9.2.7.2 Installation

1. Apply sealing compound (Sonderhoff 110, Ident. No. 474 762) to mating surfaces of sealing cord (4, Fig. 903) and heat exchanger (5) and locate with rear wall (3) in heat exchanger (5) for assembly.
2. Secure rear wall (3) with nuts (1) and lock washers (2).
3. Torque nuts (1) to 1.5 ± 0.2 Nm.

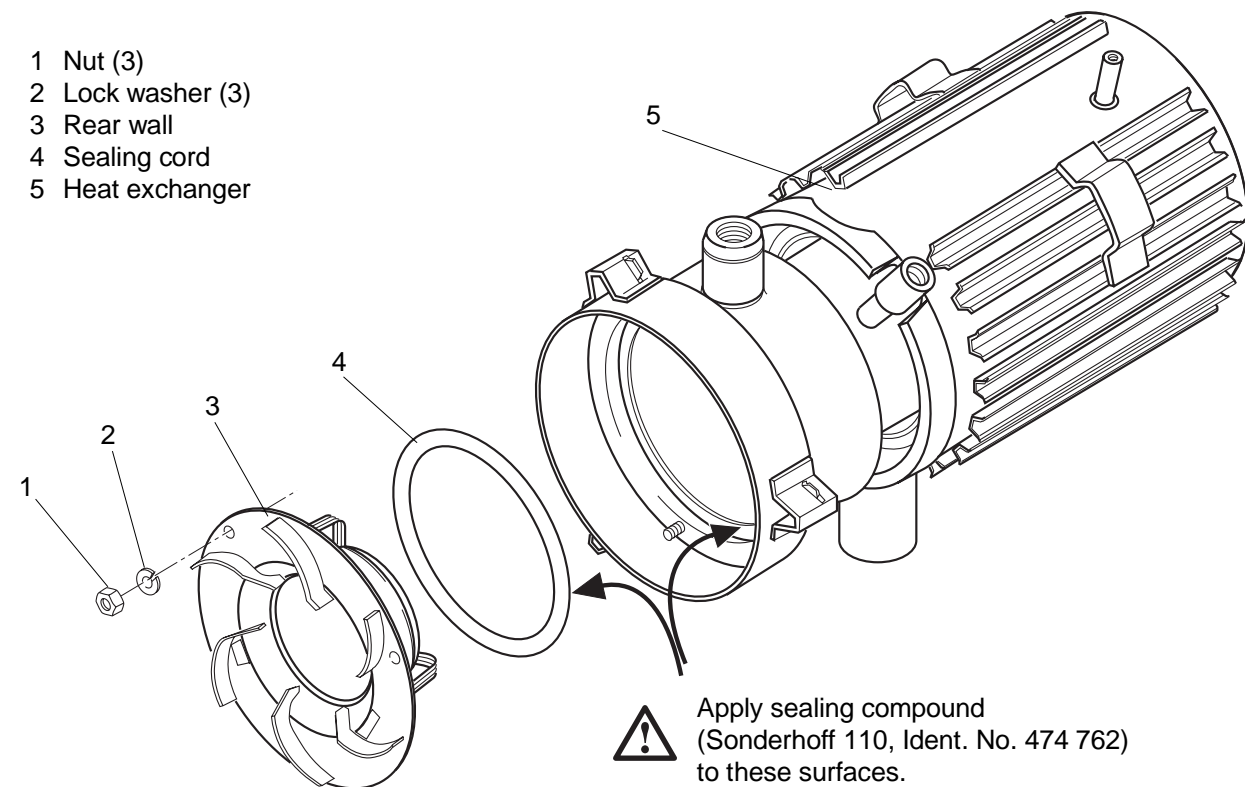


Fig. 903 Replacement of Heat Exchanger

NOTE

When performing the following step ensure that all connections and screw holes in outer case are centered.

4. Locate heat exchanger with outer case (11, Fig. 901) and end cap (6) and assemble with screws (3) and lock washers (2).
5. Torque screws (3) to 2.5 ± 0.2 Nm.
6. Install drive (refer to 9.2.5.2).
7. Install temperature limiter (refer to 9.2.4.2).
8. Install flame sensor (refer to 9.2.3.2).
9. Install glow plug (refer to 9.2.2.2).
10. Install control unit (refer to 9.2.1.2).

10 Packaging, Storage and Shipping

10.1 General

The heater or its components shipped to Webasto Thermosysteme GmbH for testing or repair must be cleaned and packaged so that they are protected against damage during handling, shipping and storage.

CAUTION

When shipping a complete heater assembly it must be drained completely. No fuel is allowed to escape from a packaging or during shipping.

Dummy plugs must be fitted to the fuel lines.

In storage the ambient temperatures specified in Section 4 must not be exceeded.